



BELGARD®
PAVES THE WAY™

T-BLOCK



GARDEN BED


T-BLOCK

COMPLETE THIS STEP
FIRST FOR ALL PROJECTS


BASE PREPARATION

Always level ground before installation


ON NEW OR EXISTING PATIO

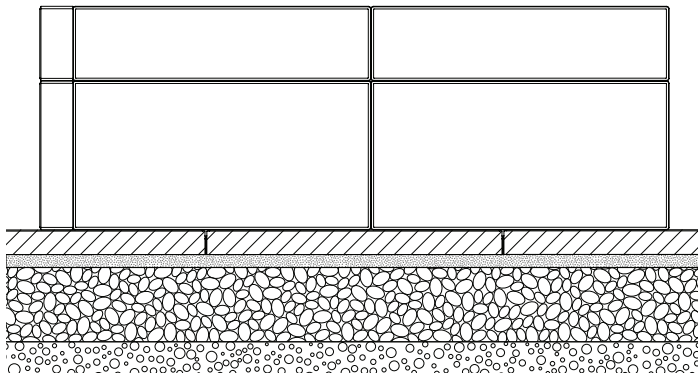

SLAB OR PAVER

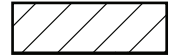


BEDDING SAND 1"

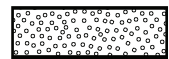


COMPACTED AGGREGATES 6"-8"




SOIL

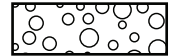

ON POURED CONCRETE

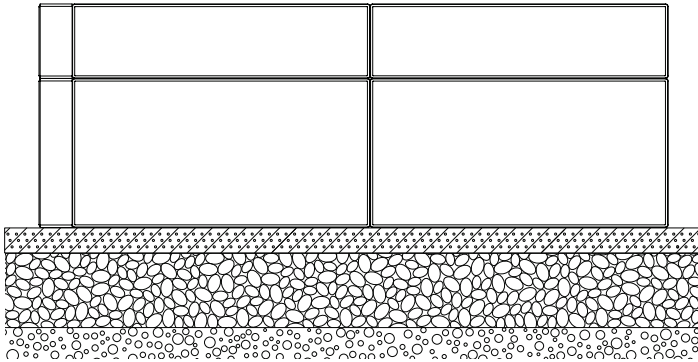

REINFORCED POURED CONCRETE FOUNDATION 2"

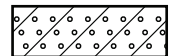


COMPACTED AGGREGATES 6"-8"



SOIL



ON COMPACTED FOUNDATION

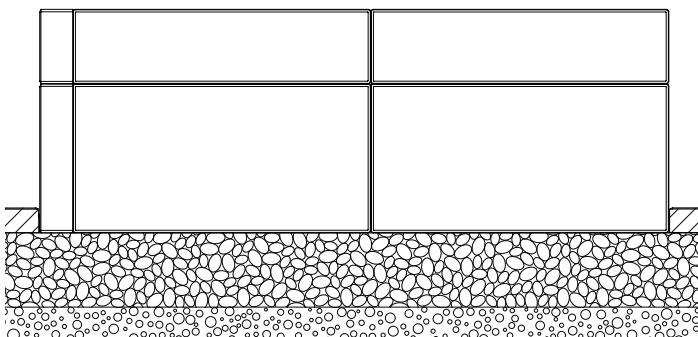


SLAB OR PAVER



COMPACTED AGGREGATES 6"-8"




SOIL

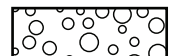


T-BLOCK


GARDEN BED

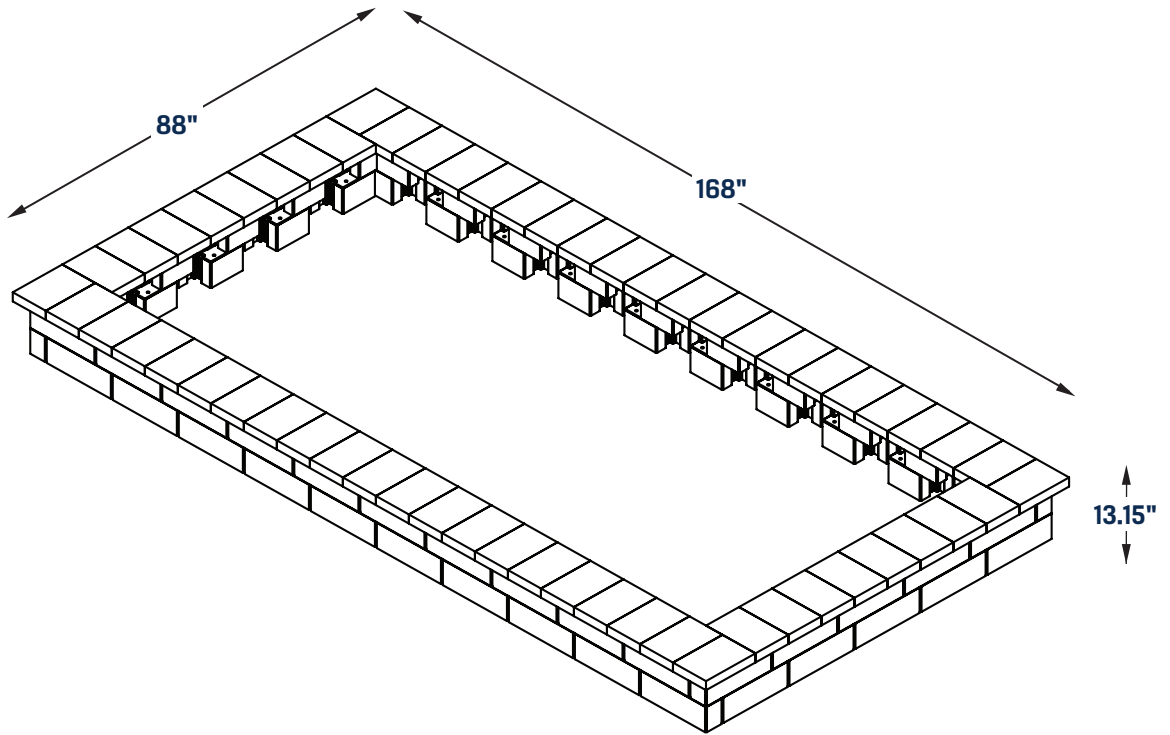

COMPONENTS

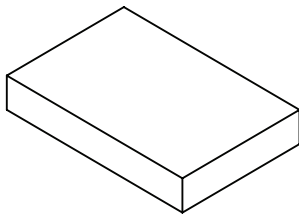

Cap (x58)

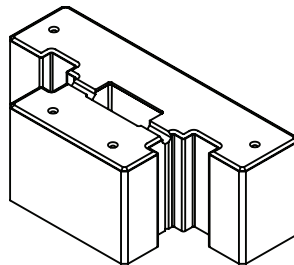

T-Block (x60)




Glue Tube


T-BLOCK

GARDEN BED


REQUIRED TOOLS

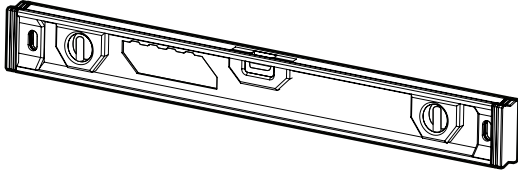


LEVEL

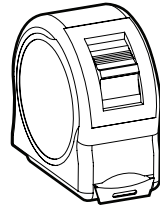


**MEASURING
TAPE**

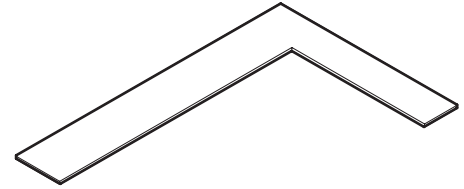

**CARPENTER
SQUARE**

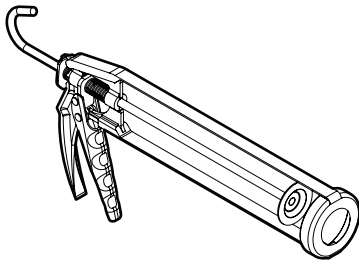

**SILICONE
GUN**

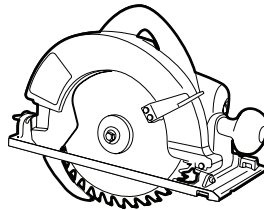


SKILSAW


SAFETY EQUIPMENT



SAFETY BOOTS

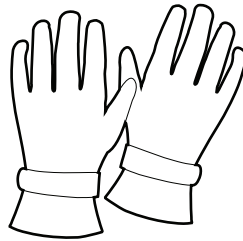

GLOVES

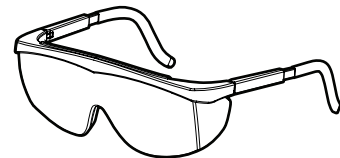


SAFETY GLASSES

T-BLOCK



GARDEN BED

1

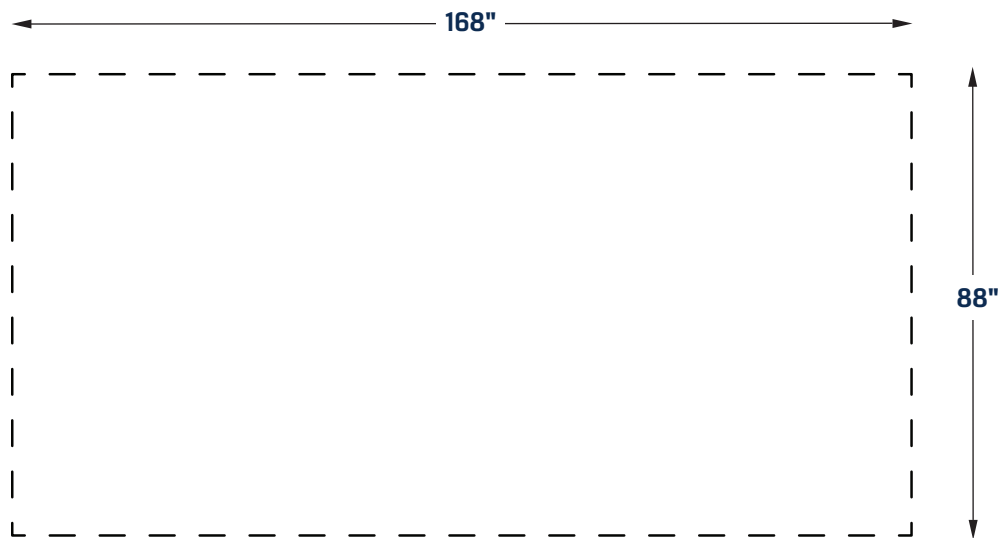

2



Do not forget to add glue in the cavities before laying down your next level.

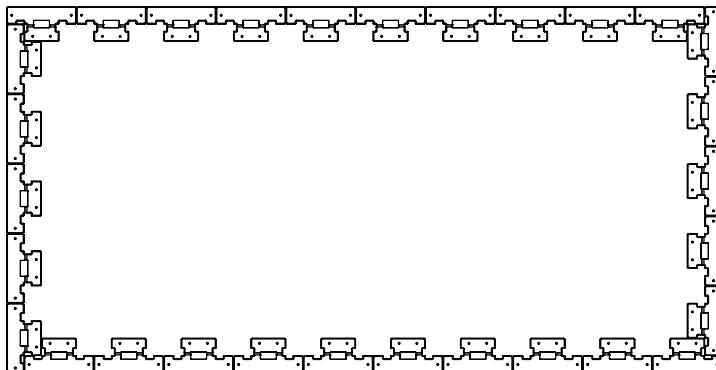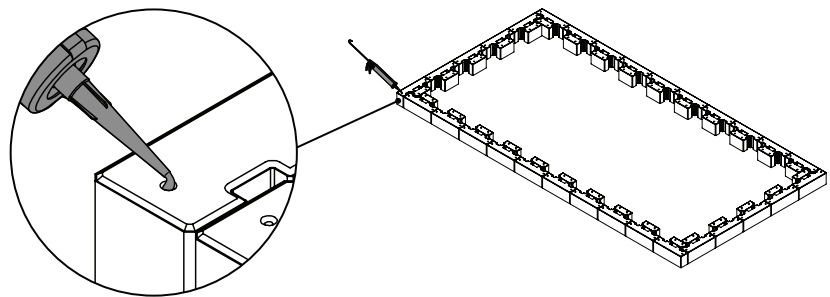

T-BLOCK

GARDEN BED

- 3 Do not forget to add glue in the cavities before laying down your next level.

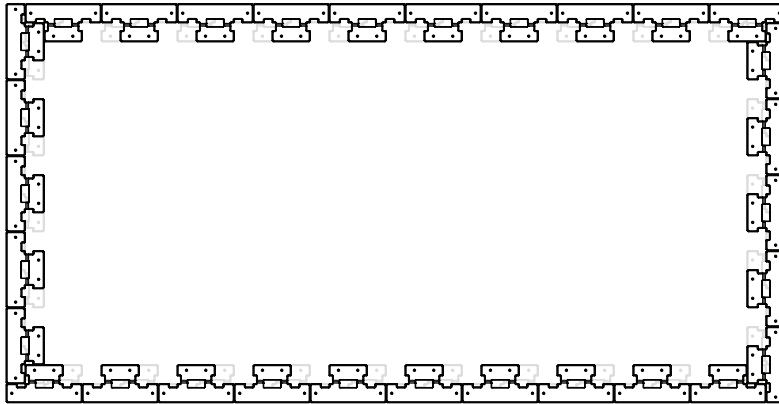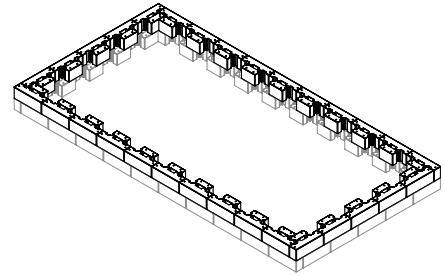

- 4 Do not forget to add glue in the cavities before laying down your next level.

