



BELGARD®
PAVES THE WAY™

T-BLOCK



**TWO LOWER PLANTERS
WITH BENCH**


T-BLOCK

COMPLETE THIS STEP
FIRST FOR ALL PROJECTS


BASE PREPARATION

Always level ground before installation


ON NEW OR EXISTING PATIO

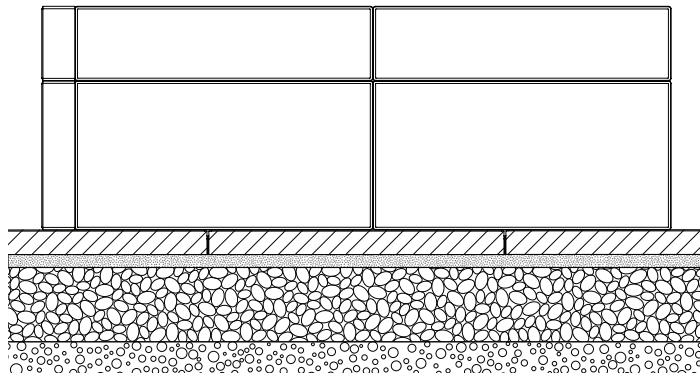

SLAB OR PAVER

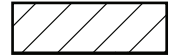


BEDDING SAND 1"

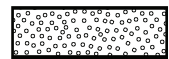


COMPACTED AGGREGATES 6"-8"




SOIL

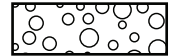

ON POURED CONCRETE

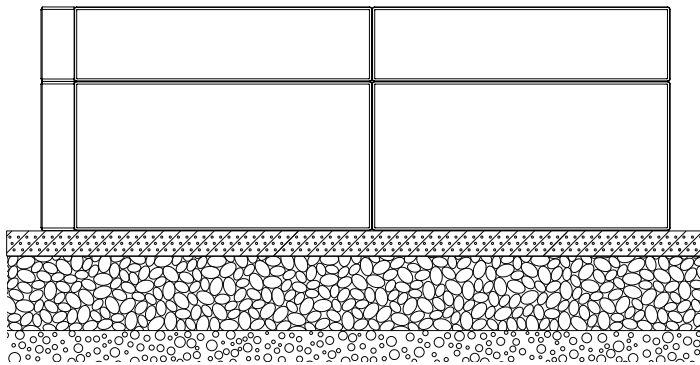

REINFORCED POURED CONCRETE FOUNDATION 2"

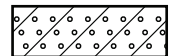


COMPACTED AGGREGATES 6"-8"



SOIL



ON COMPACTED FOUNDATION

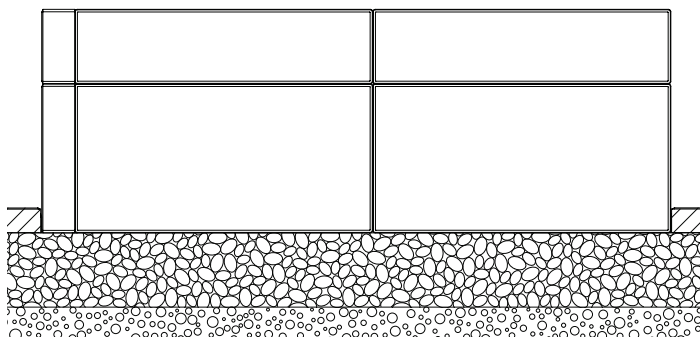


SLAB OR PAVER



COMPACTED AGGREGATES 6"-8"




SOIL

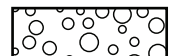




T-BLOCK


TWO LOWER PLANTERS
WITH BENCH

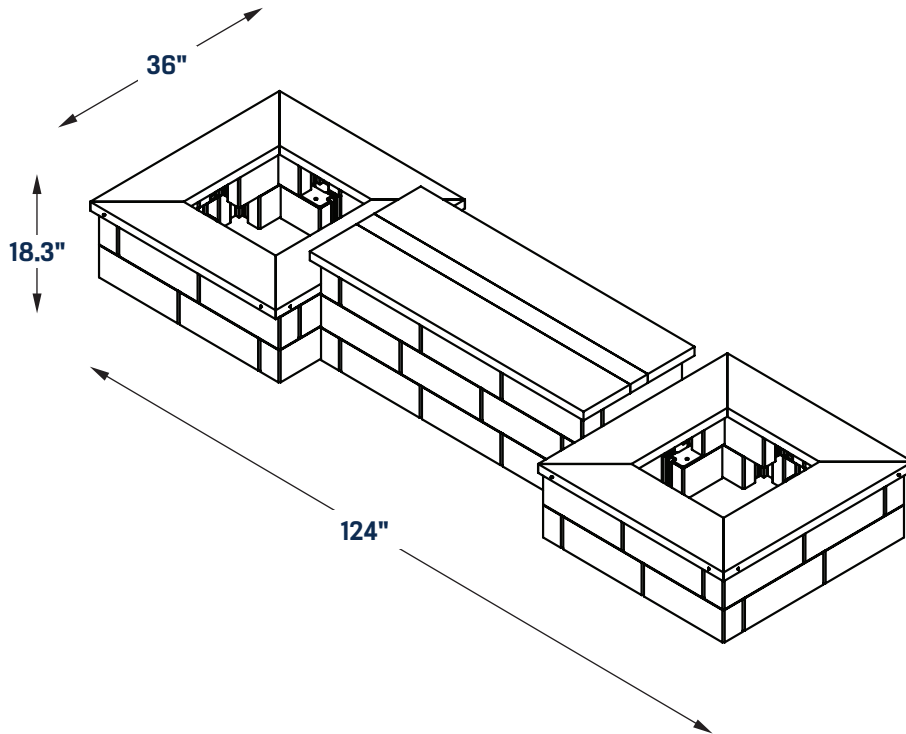

COMPONENTS

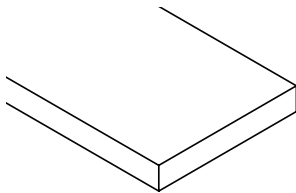


2" x 10" x 8' (x5)

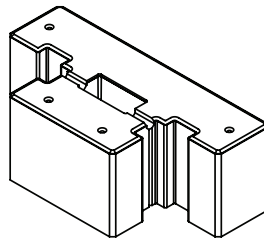

T-Block (x56)



Glue Tube

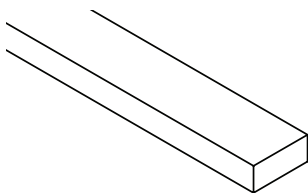

2" x 4" x 8' (x1)



No.8 x 2 1/2" (x12)




No.8 x 3" (x8)




T-BLOCK

TWO LOWER PLANTERS
WITH BENCH


REQUIRED TOOLS

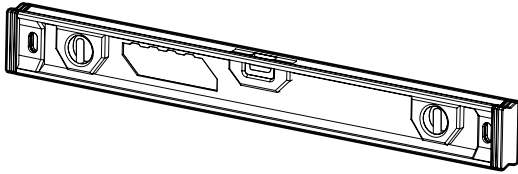


LEVEL

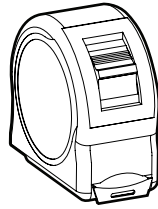


**MEASURING
TAPE**

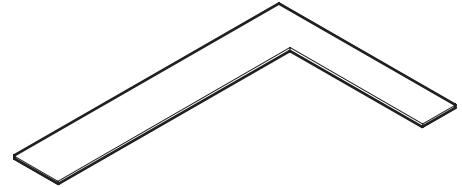

**CARPENTER
SQUARE**

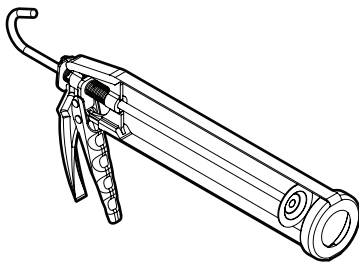

**SILICONE
GUN**

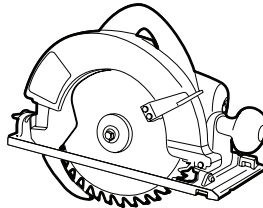


SKILLSAW


SAFETY EQUIPMENT



SAFETY BOOTS

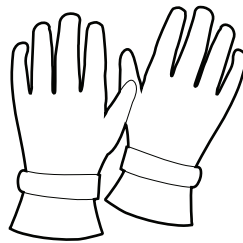

GLOVES

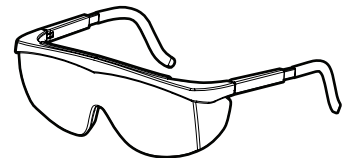


SAFETY GLASSES



T-BLOCK



TWO LOWER PLANTERS WITH BENCH

1

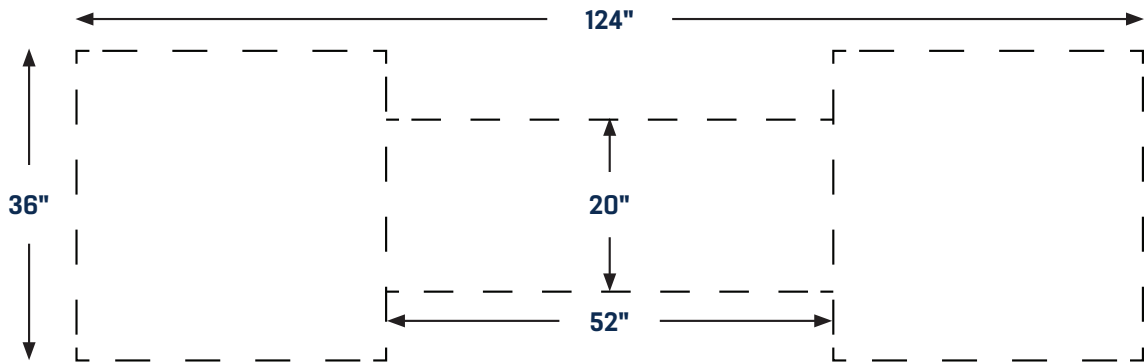

2

Do not forget to add glue in the cavities before laying down your next level.

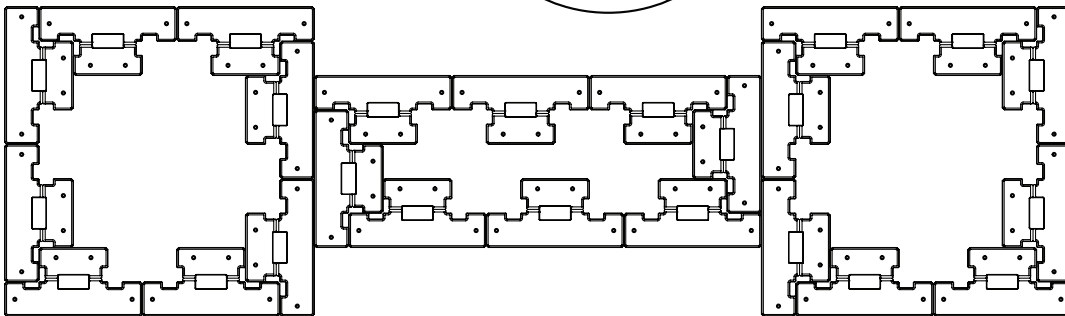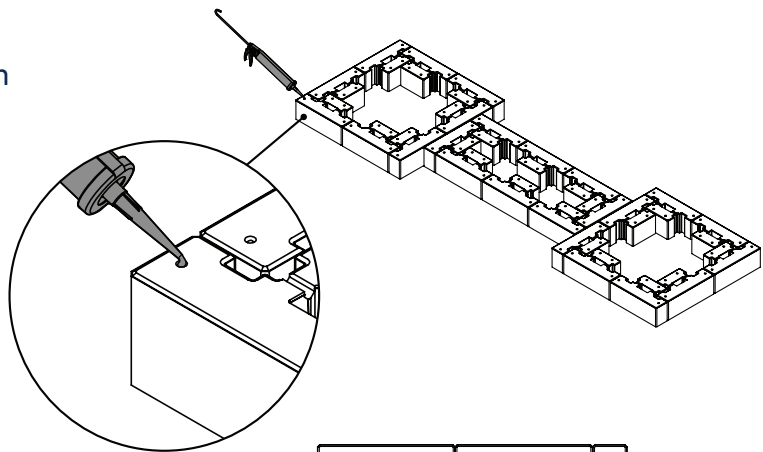





T-BLOCK

TWO LOWER PLANTERS WITH BENCH



3

Do not forget to add glue in the cavities before laying down your next level.

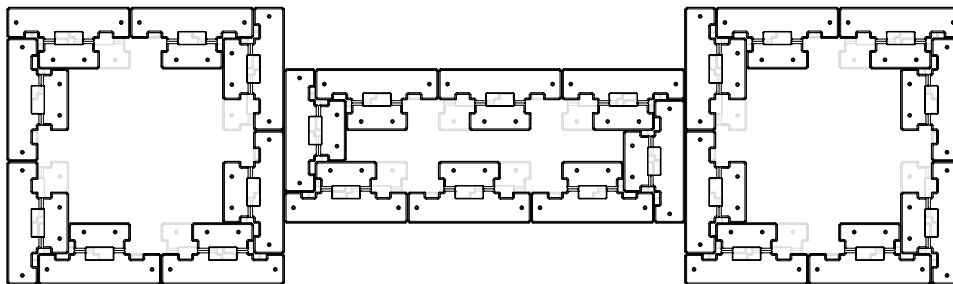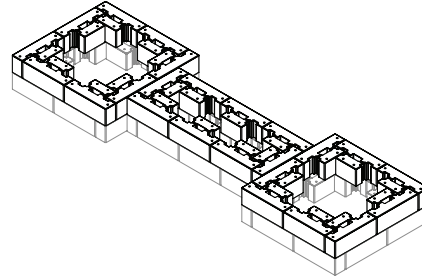

4

Do not forget to add glue in the cavities before laying down your next level.

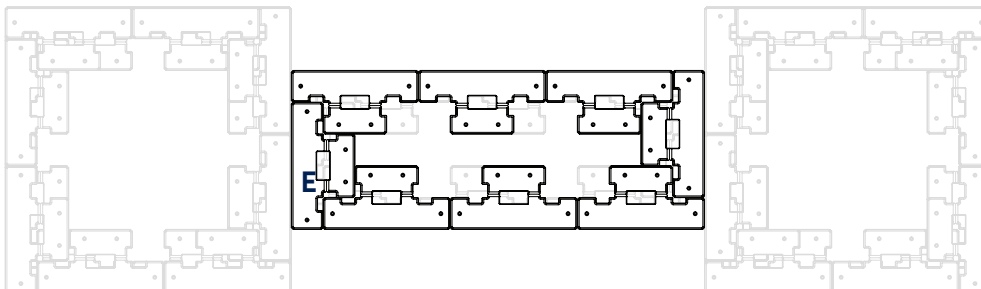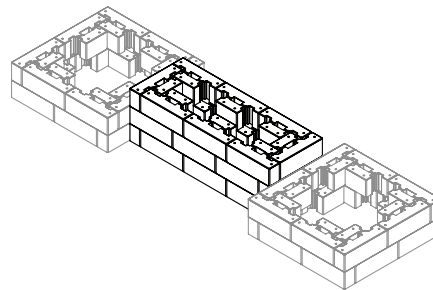



T-BLOCK

TWO LOWER PLANTERS WITH BENCH

WOOD CUTS

□ 2" x 4" x 8'

A = 54"



D = 37 1/4"

■ 2" x 10" x 8'

B = 11 3/4"



E = 36 5/8"

C = 54"

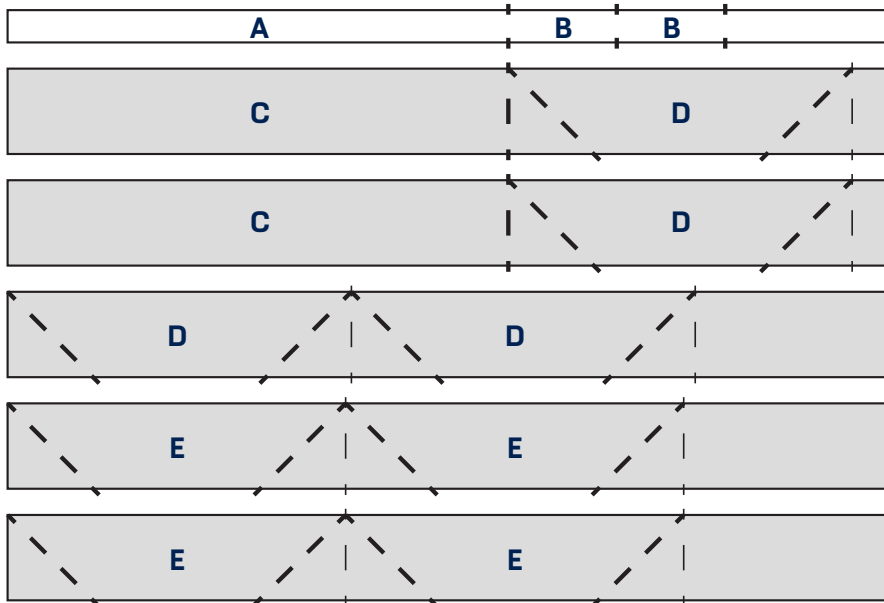

5

Use screws (2 1/4")

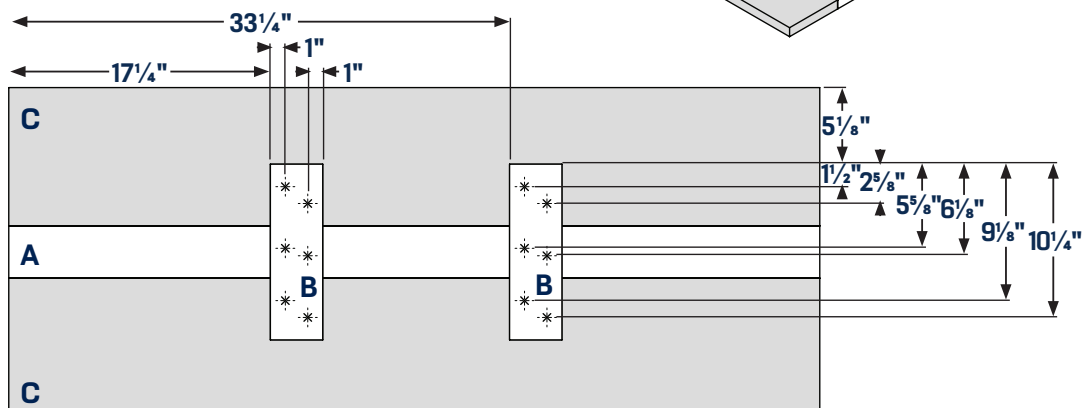
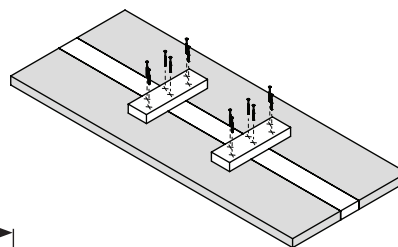




T-BLOCK


TWO LOWER PLANTERS WITH BENCH

6

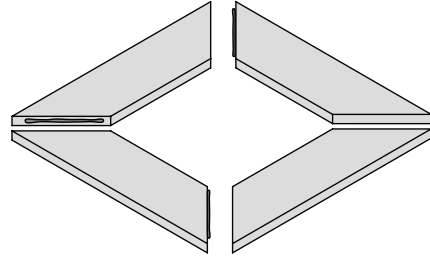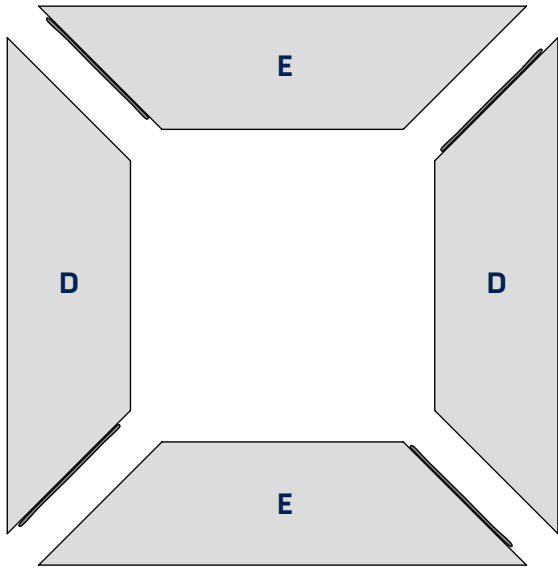


Put the angle pieces together to create the frame shape, keeping all edges aligned while the glue sets. 2X

7

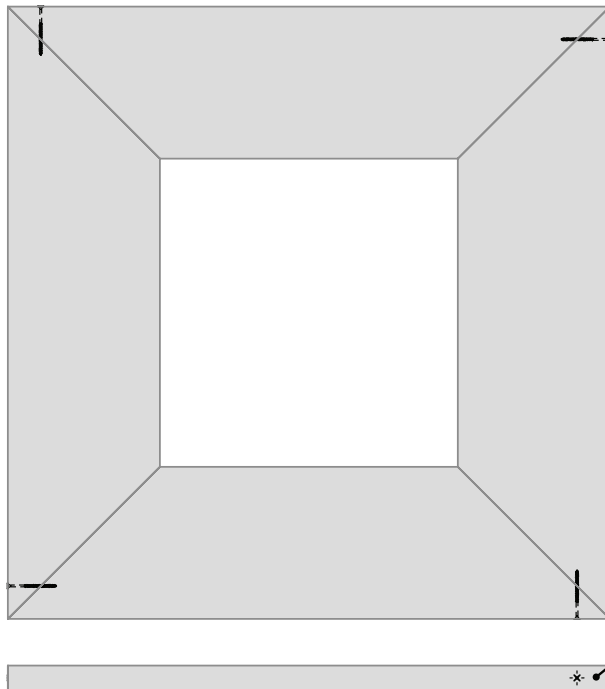

Add the screws (3") in each corner, making sure they go through the middle of the boards for a solid connection. 2X

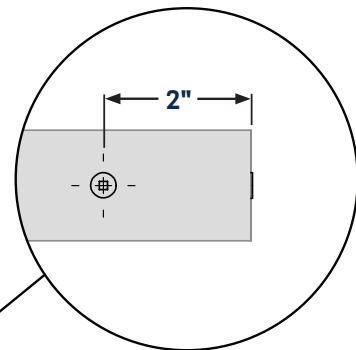



T-BLOCK

TWO LOWER PLANTERS WITH BENCH

- 8 Do not forget to add glue in the cavities before laying down the frame and seat.

