



BELGARD®
PAVES THE WAY™

T-BLOCK



**WOOD RECTANGULAR
PLANTER**


T-BLOCK

COMPLETE THIS STEP
FIRST FOR ALL PROJECTS


BASE PREPARATION

Always level ground before installation


ON NEW OR EXISTING PATIO

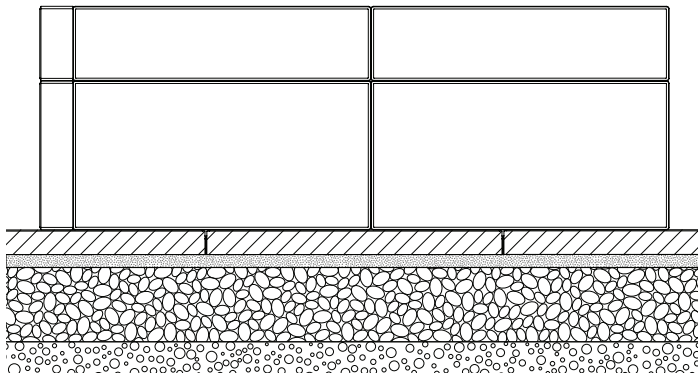

SLAB OR PAVER

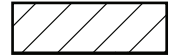


BEDDING SAND 1"

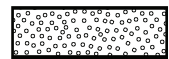


COMPACTED AGGREGATES 6"-8"




SOIL

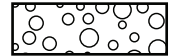

ON POURED CONCRETE

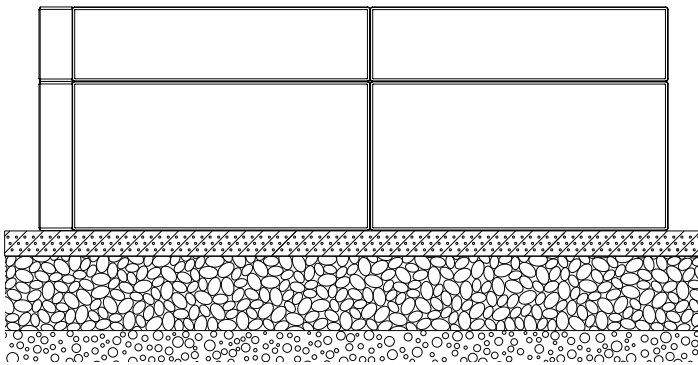

REINFORCED POURED CONCRETE FOUNDATION 2"

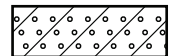


COMPACTED AGGREGATES 6"-8"



SOIL



ON COMPACTED FOUNDATION

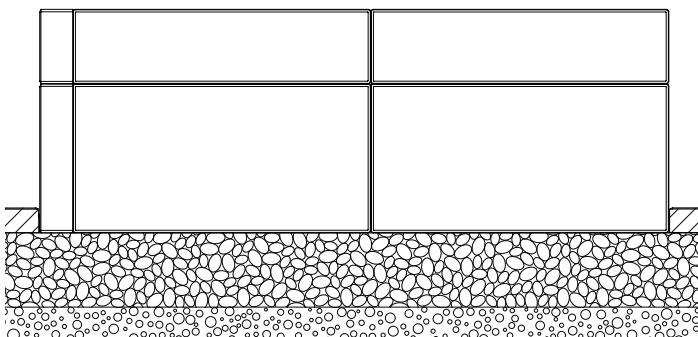


SLAB OR PAVER



COMPACTED AGGREGATES 6"-8"




SOIL

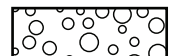




T-BLOCK


WOOD RECTANGULAR
PLANTER

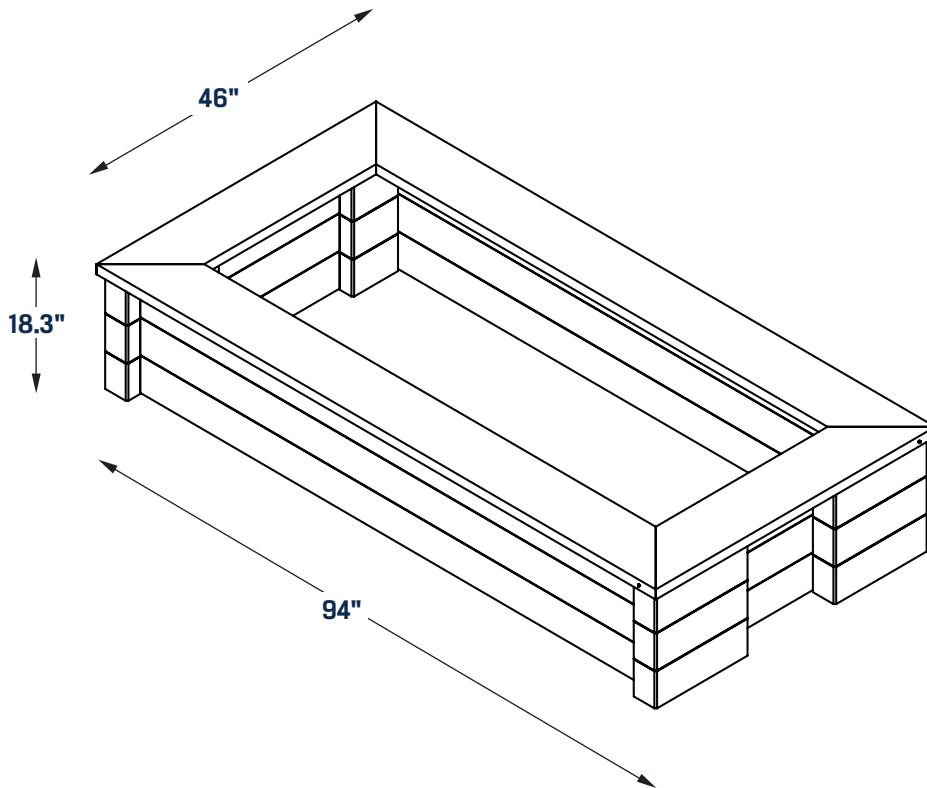


COMPONENTS

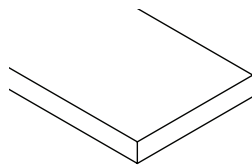

2" x 10" x 8' (x3)

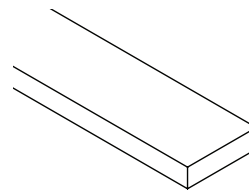

2" x 6" x 8' (x8)

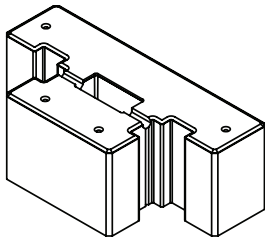

T-Block (x12)



No.8 x 3" (x4)




Glue Tube


T-BLOCK

WOOD RECTANGULAR PLANTER


REQUIRED TOOLS

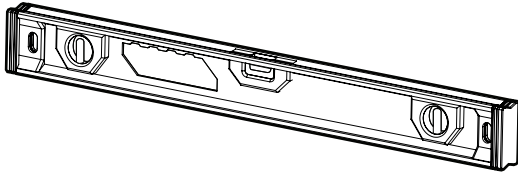


LEVEL

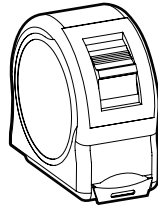


**MEASURING
TAPE**

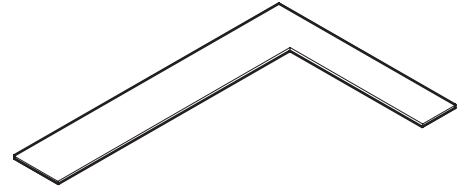

**CARPENTER
SQUARE**

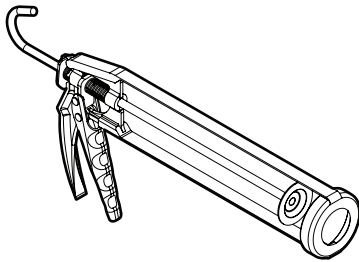

**SILICONE
GUN**

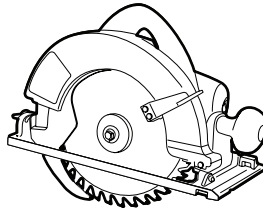


SKILSAW


SAFETY EQUIPMENT



SAFETY BOOTS

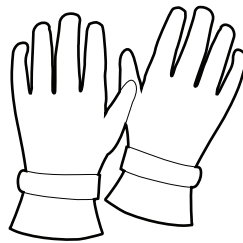

GLOVES

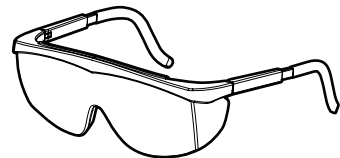

SAFETY GLASSES



T-BLOCK

WOOD RECTANGULAR PLANTER

WOOD CUTS

□ 2" x 6" x 8'



■ 2" x 10" x 8'

A = 23⁷/₈"


B = 87³/₈"

C = 47¹/₂"

D = 95"

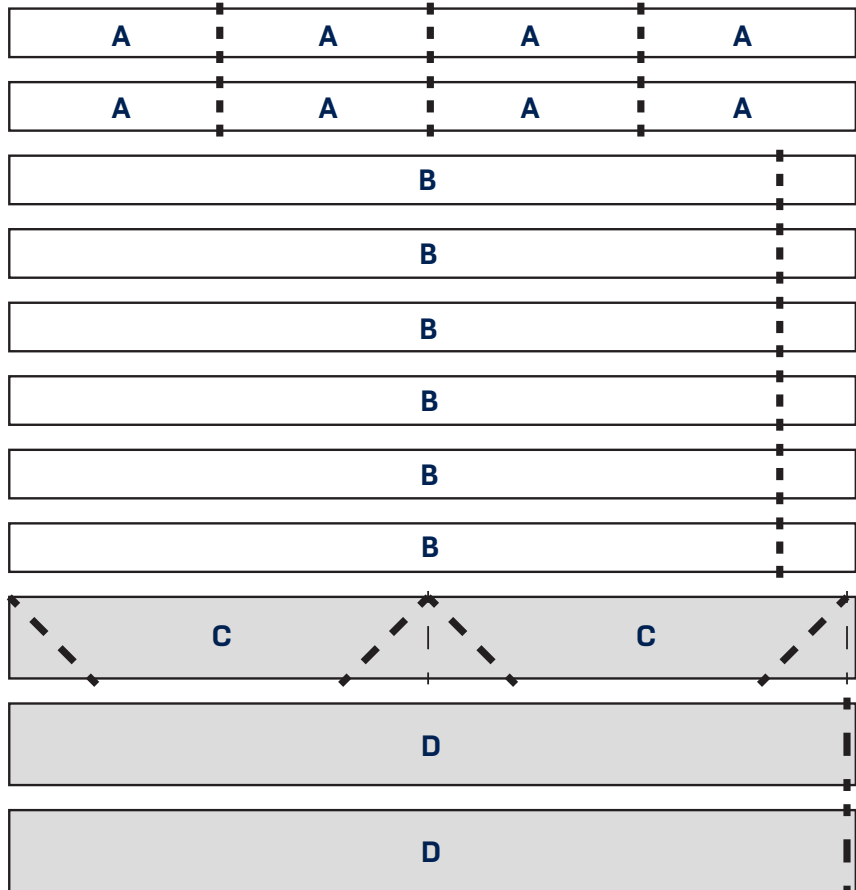

①

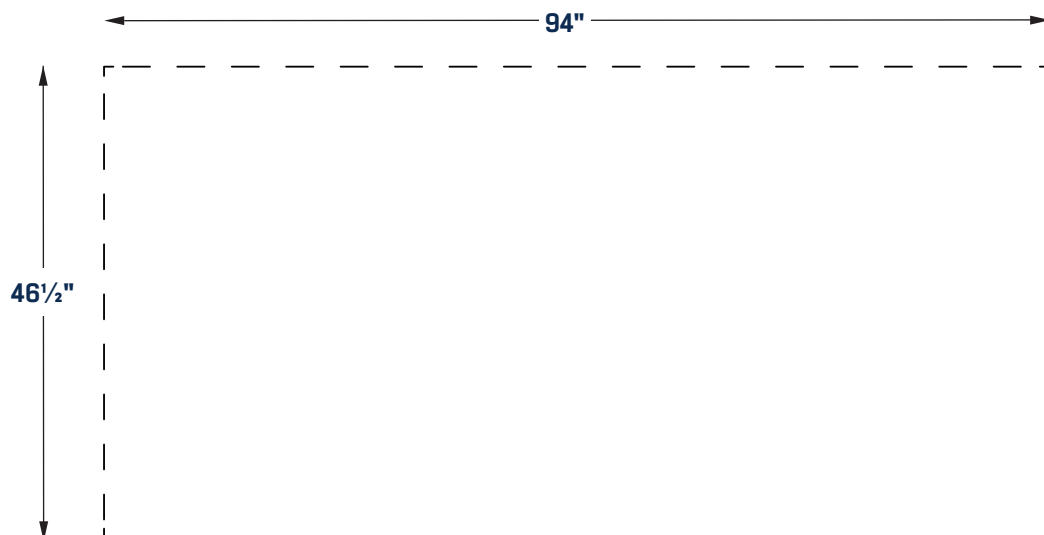





T-BLOCK

WOOD RECTANGULAR PLANTER

2

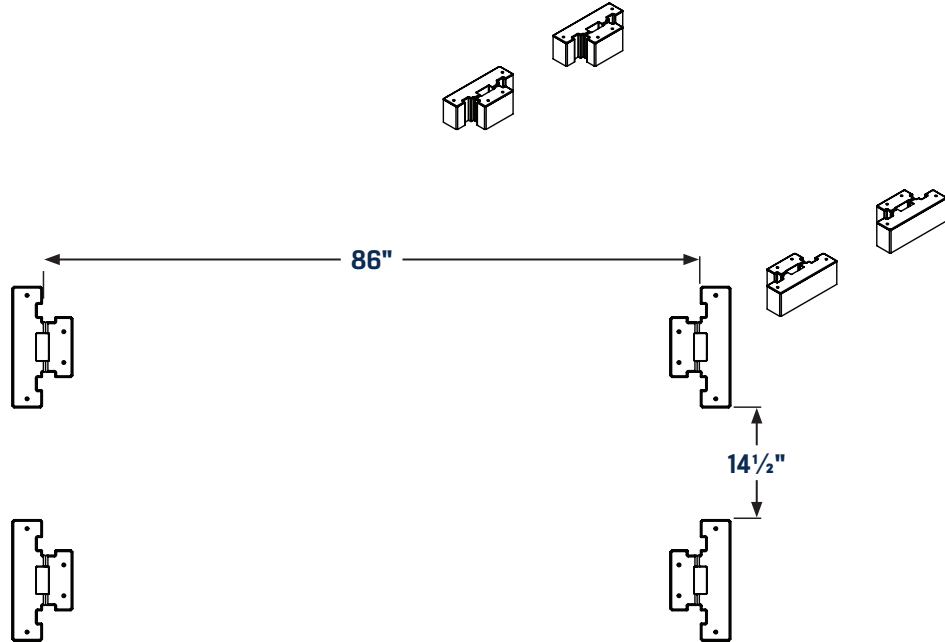

3

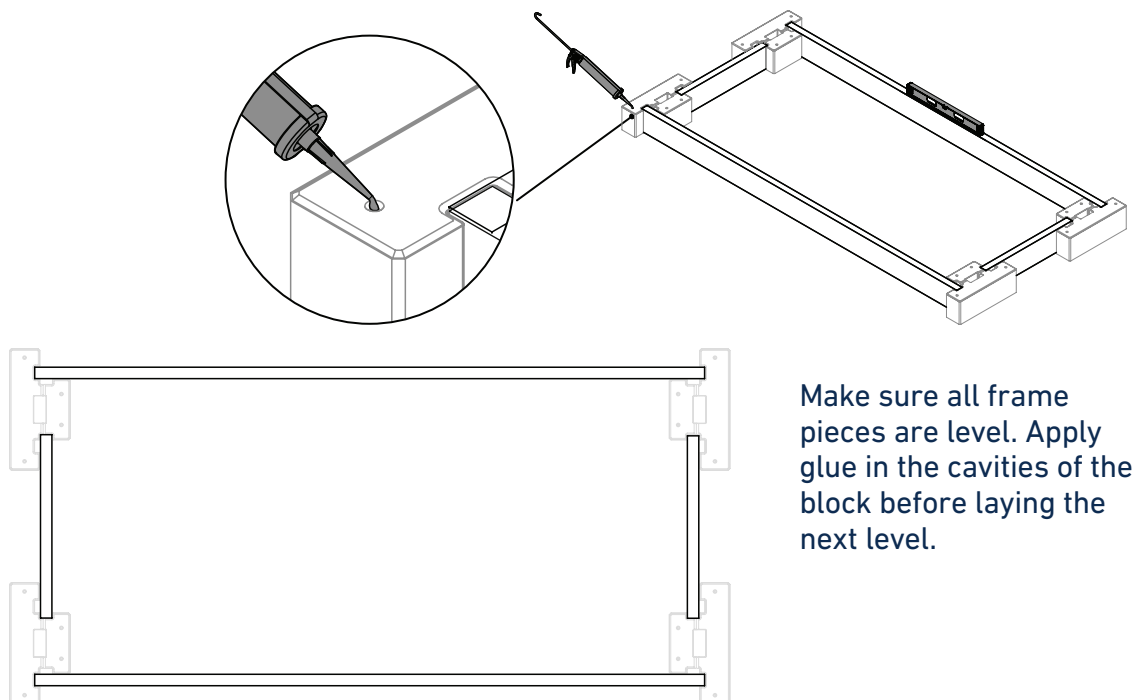






T-BLOCK

WOOD RECTANGULAR PLANTER

- 4 Lay down next level, ensuring they sit flush into place.

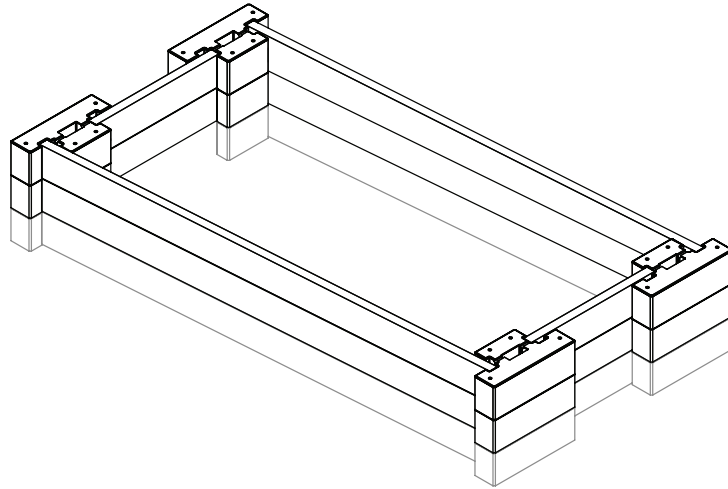


- 5 Put the angle pieces together to create the frame shape, keeping all edges aligned while the glue sets.

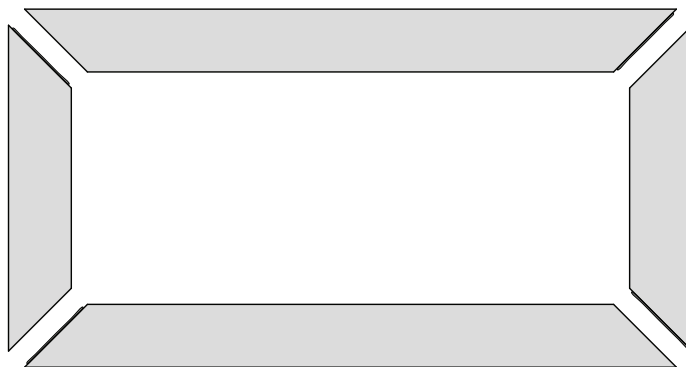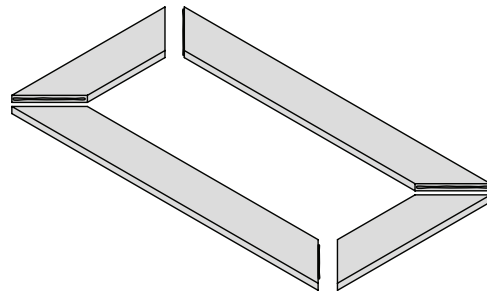

T-BLOCK

WOOD RECTANGULAR PLANTER

- 6 Add the screws in each corner, making sure they go through the middle of the boards for a solid connection.

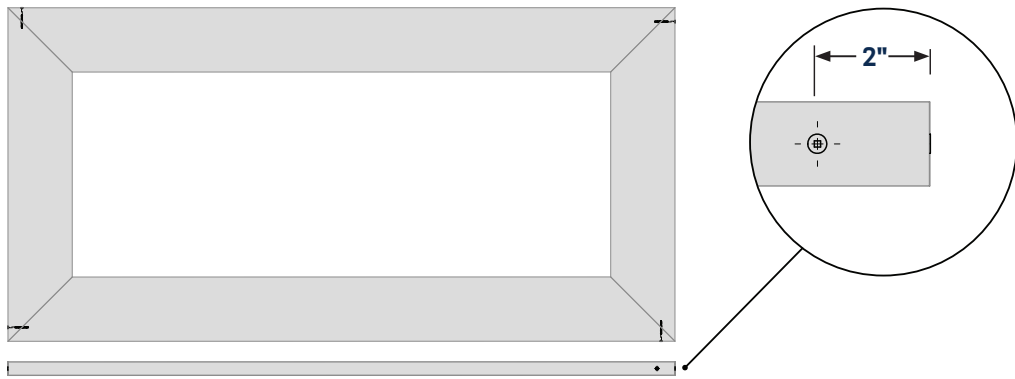

- 7 Apply glue along the top edges of the panels and in the block cavities before setting the frame in place.

