


# BENCH & VERTICAL PLANTER




## INTERIOR VIEW

WOOD FRAME  
REFER TO PAGE 18 OF THE  
ARTFORMS INSTALLATION  
GUIDE

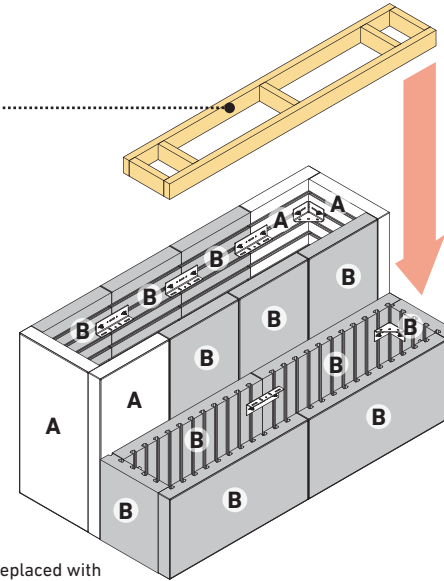


**NOTE:** Panels "B" can be replaced with panels "A" to equilibrate the pairs/layers. Panels "A" can't be replaced by the panels "B".





## FRONT VIEW

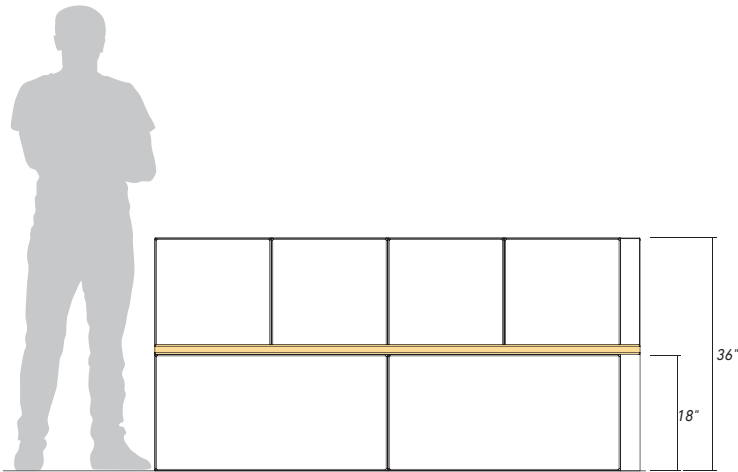

## TOP VIEW

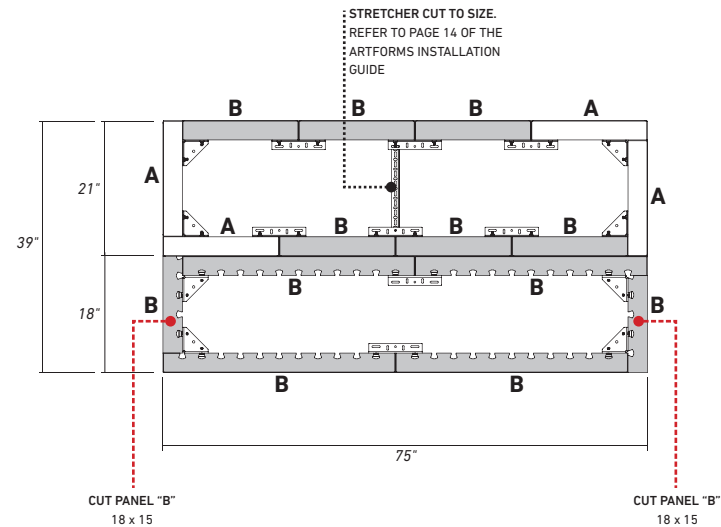



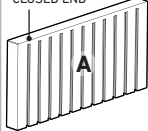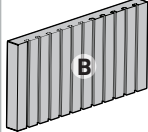


## REQUIRED PANELS

	18 x 36 PANEL	<b>4x</b>
	18 x 36 PANEL	<b>11x</b>
	6 x 36 PANEL	<b>0x</b>
	6 x 36 PANEL	<b>0x</b>

**IMPORTANT:** 18 x 36 panels are sold in pair/layer or in full pallet only. 6 x 36 panels are sold per unit or in layer or in full pallet.

## REQUIRED HARDWARE

	ANCHOR SLIDE AND NUT	<b>66x</b>
	JOINING PLATE	<b>16x</b>
	OUTER CORNER	<b>16x</b>
	INNER CORNER	<b>0x</b>
	STRETCHER	<b>1x</b>

**IMPORTANT:** Refer to page 23 of the ARTFORMS INSTALLATION GUIDE about the installation of geotextile in planter box. Contact experts/engineers to validate the base preparation, the drainage, the plants & roots growth/management.