


NOTES:

1. PLACE GEOGRID ON LEVEL BACKFILL AND BLOCK
2. PLACE THE NEXT UNIT
3. INSERT PINS THROUGH UNIT INTO CHANNELS BELOW
4. PULL GRID TAUT, STAKE AS REQUIRED AND PLACE BACKFILL

EXTEND GEOSYNTHETIC
REINFORCEMENT TO
WITHIN 1" OF BLOCK FACE

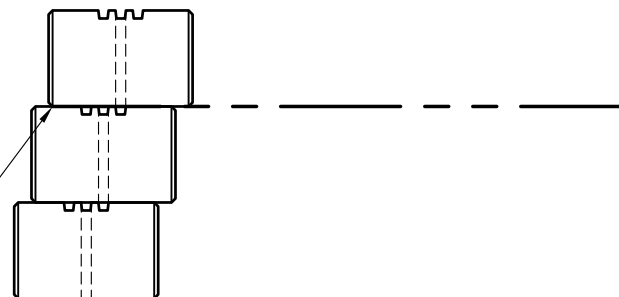

© 2018 Anchor Wall Engineering, LLC
© and ™ Anchor Wall Systems, Inc.
www.anchorwall.com

This drawing is for illustrative
purposes only and should not be
used for construction without the
signature of a registered
professional engineer.

Brookshire™ Wall System

Reinforcement Connection Detail

Scale:

None

Drawn by:

SB

Date:

9/17/2018

Drawing number:

BR0906RE03