

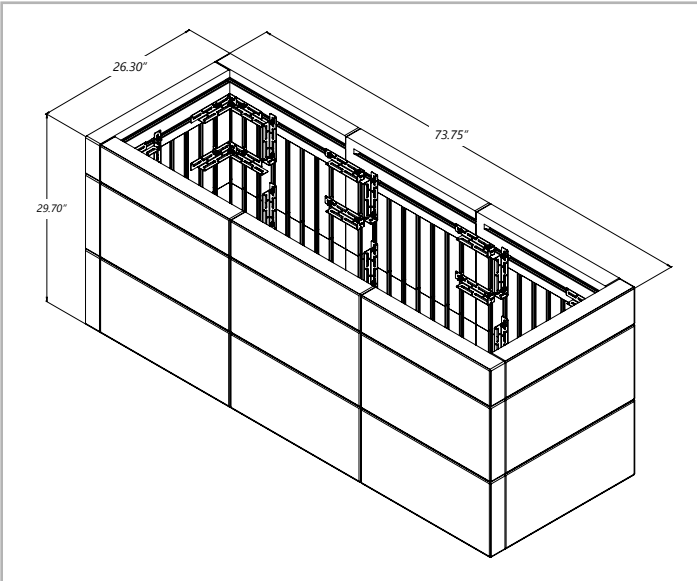



SQUARE PLANTER

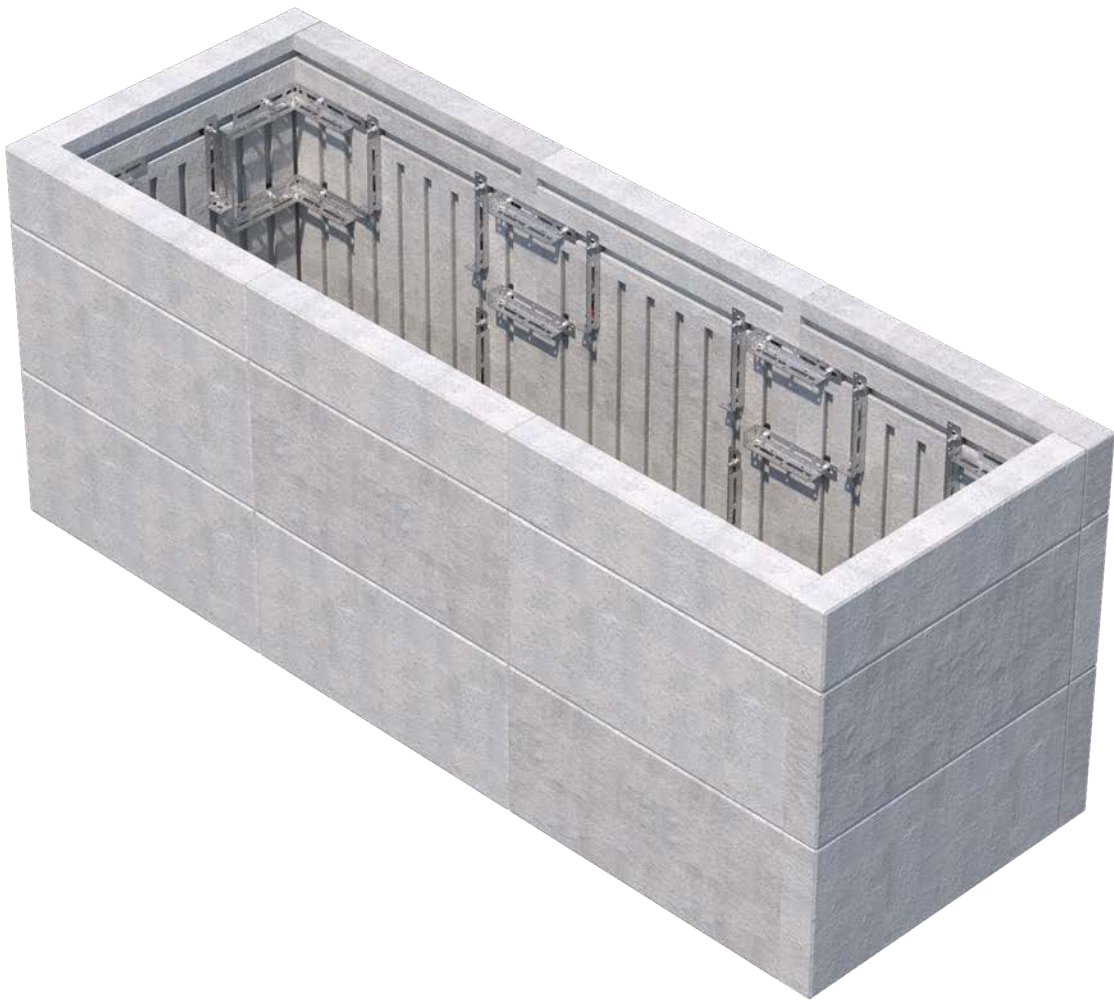


DESIGNFORMS

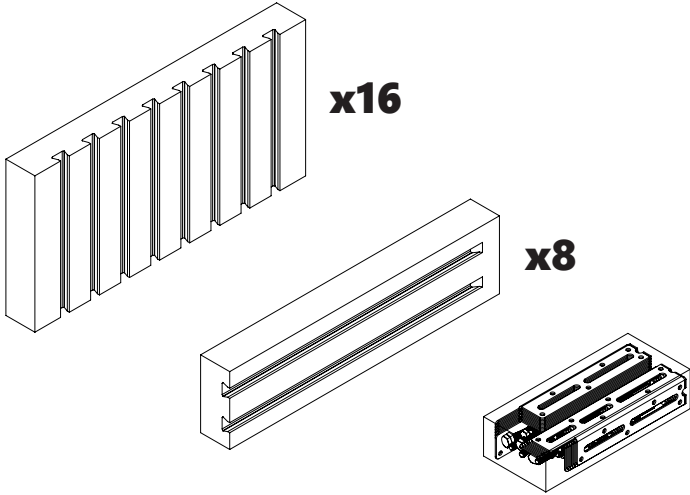


REQUIRED TOOLS

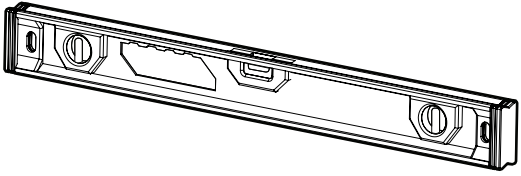


Level

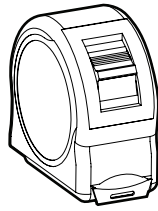


**Measuring
Tape**

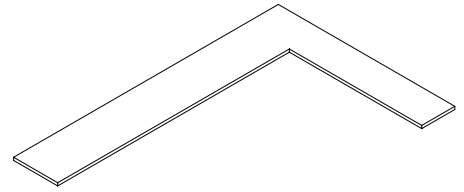


**Carpenter
Square**

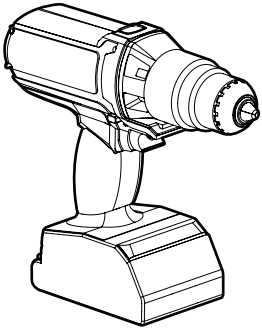

Drill

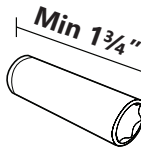

**Deep Hex Socket
7/16" with 1/4" Drive**




**Socket Adaptor
1/4" Hex shank to 1/4" Drive**


SAFETY EQUIPMENT



Safety boots

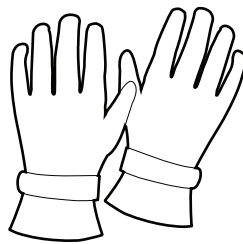


Gloves

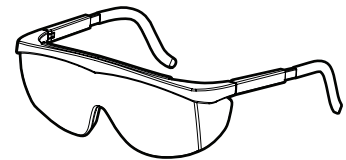


Safety glasses

BASE PREPARATION


ON NEW OR EXISTING PATIO

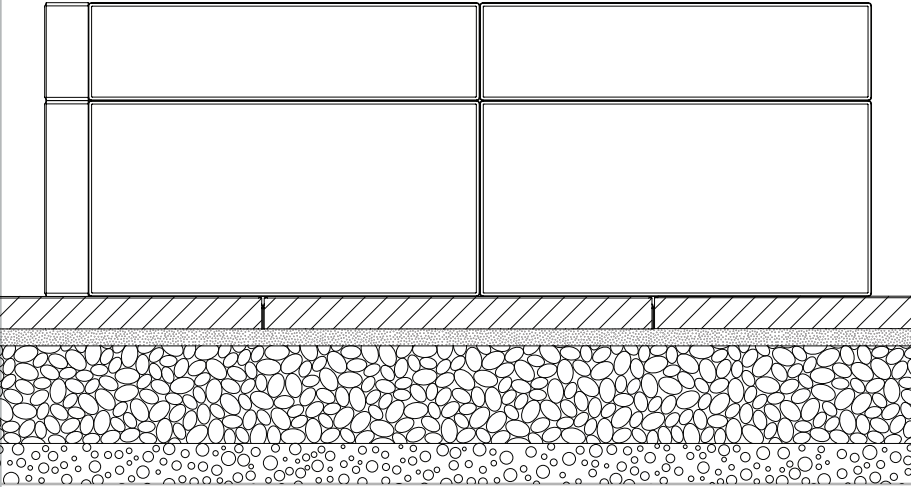

ON POURED CONCRETE

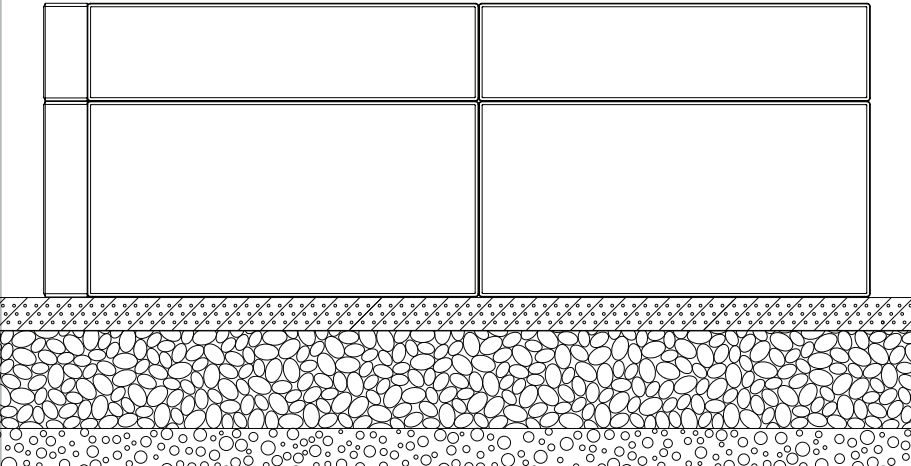














ON COMPACTED FOUNDATION

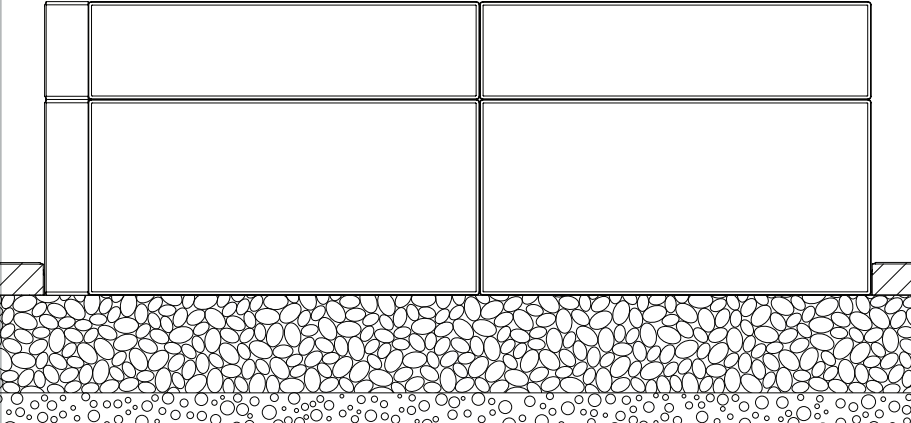


-  Slab or Paver
-  Reinforced Poured Concrete Foundation 2"
-  Bedding Sand 1"
-  Compacted aggregates 6" - 8"
-  Soil

Always level ground before installation

BRACKETS

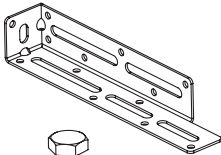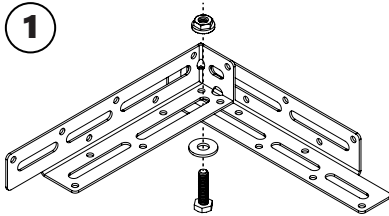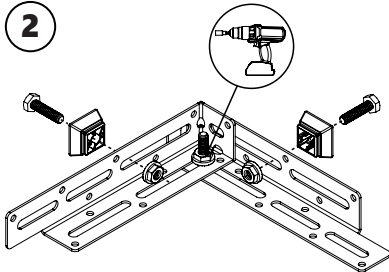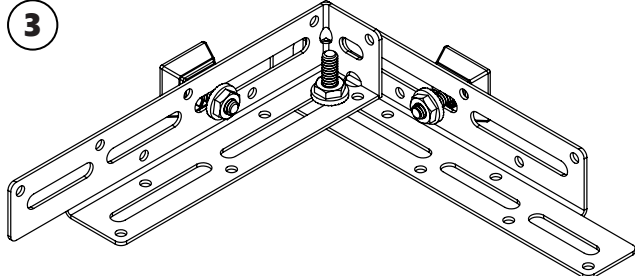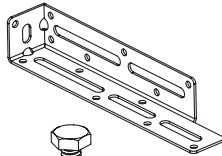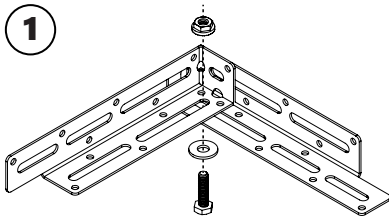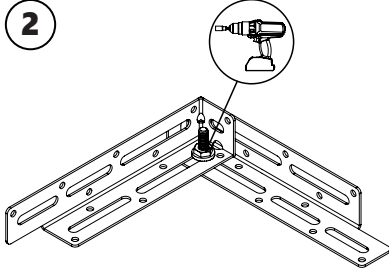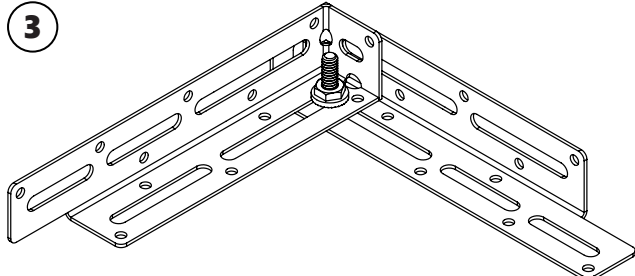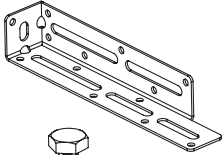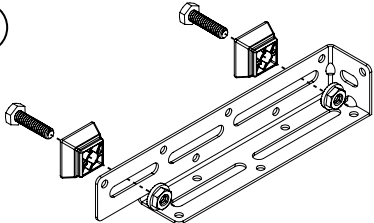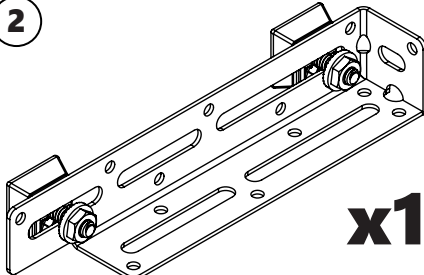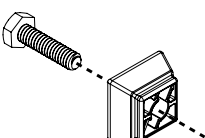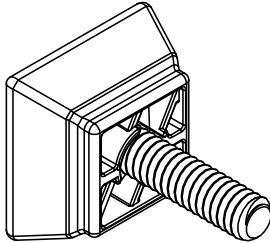
x2  x3  x1  x3  x2 	1  2  3  x8	
x1  x2  x2  x2 	1  2  3  x4	
x2  x1  x1  x1 	1  2  x12	1  x1  x1  x41 

MODULE

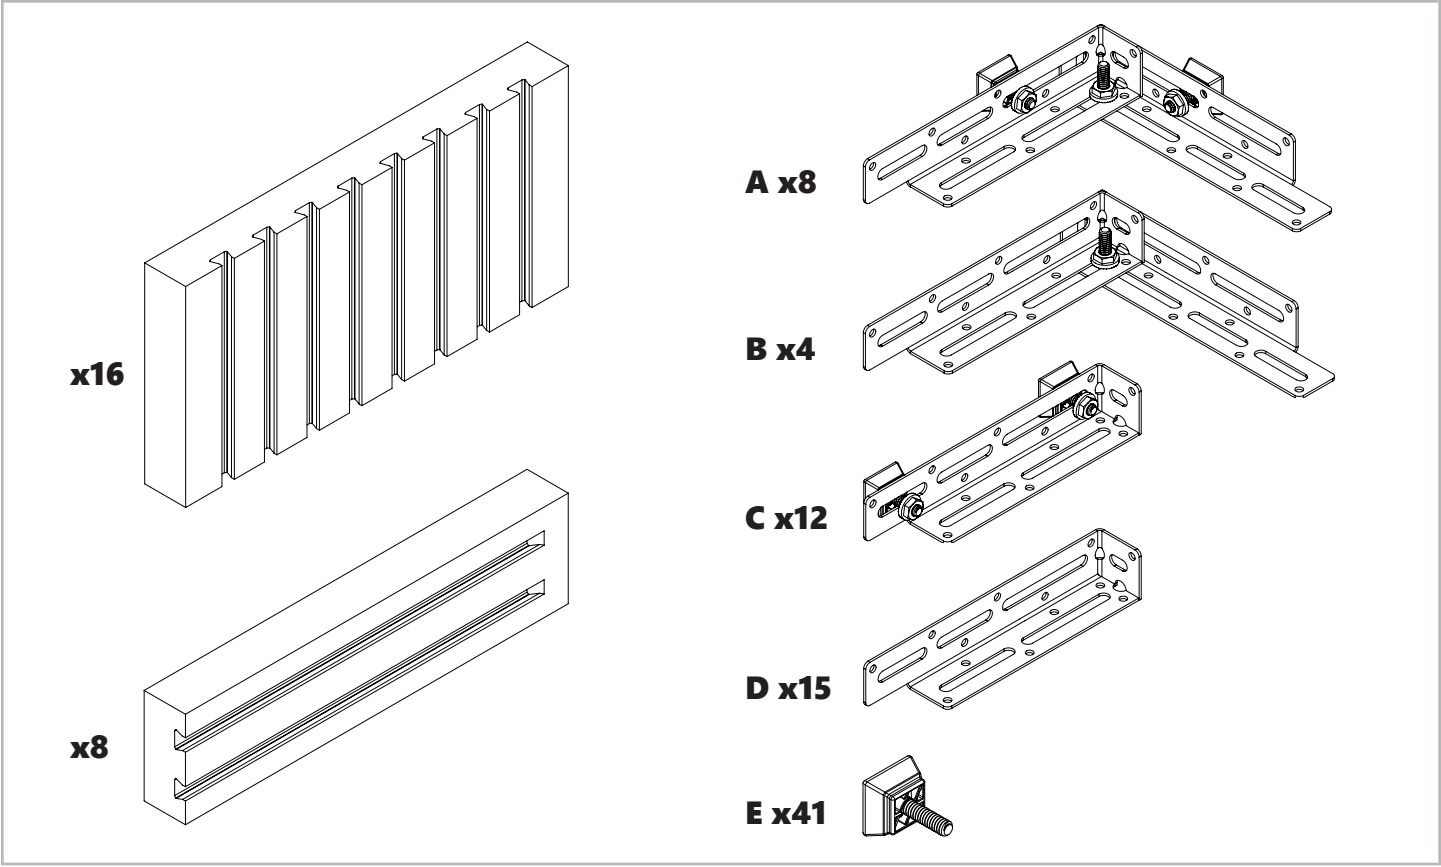


1

2

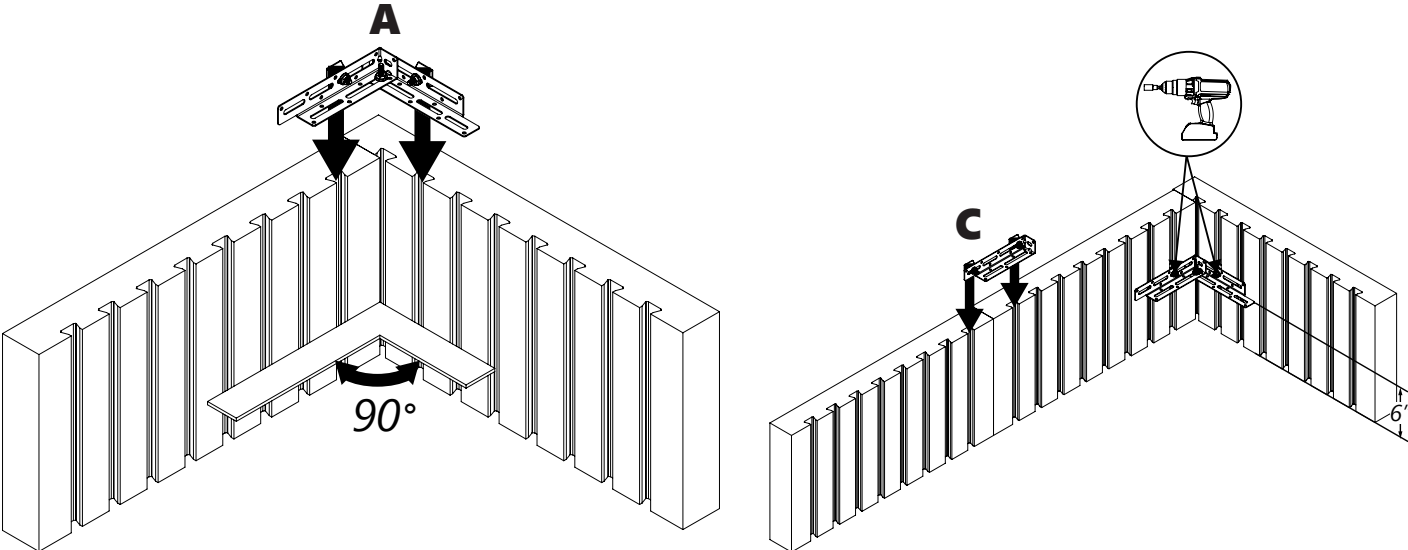


MODULE


3

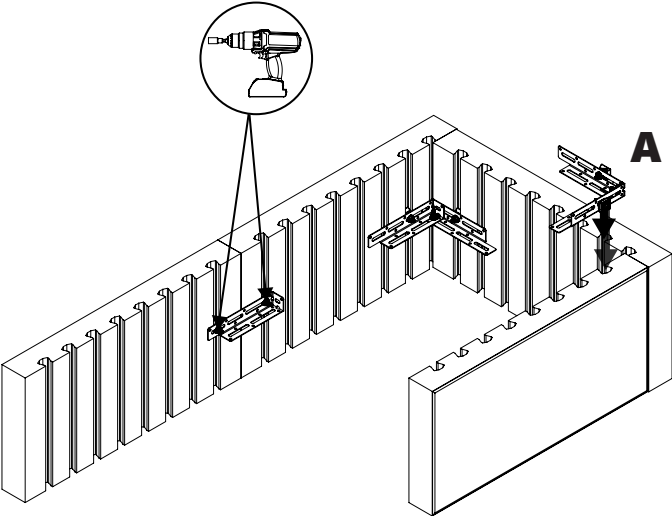


4

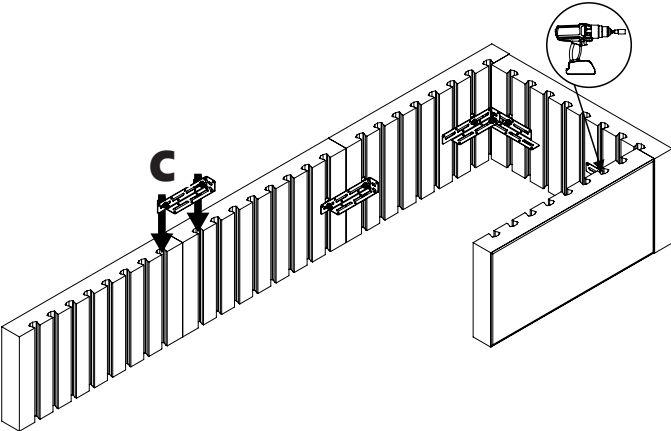

5

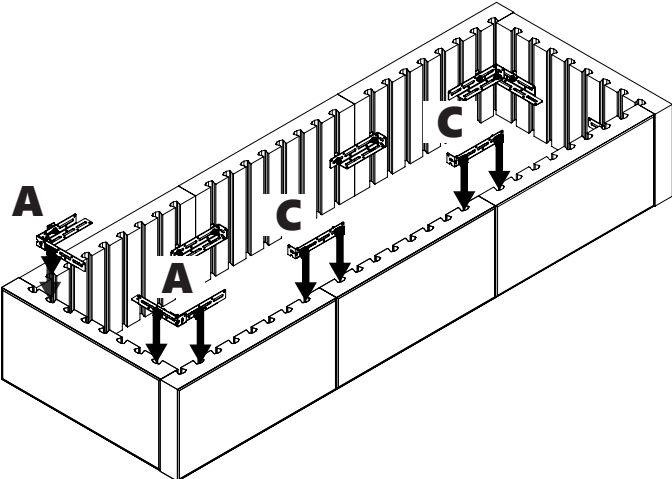


6

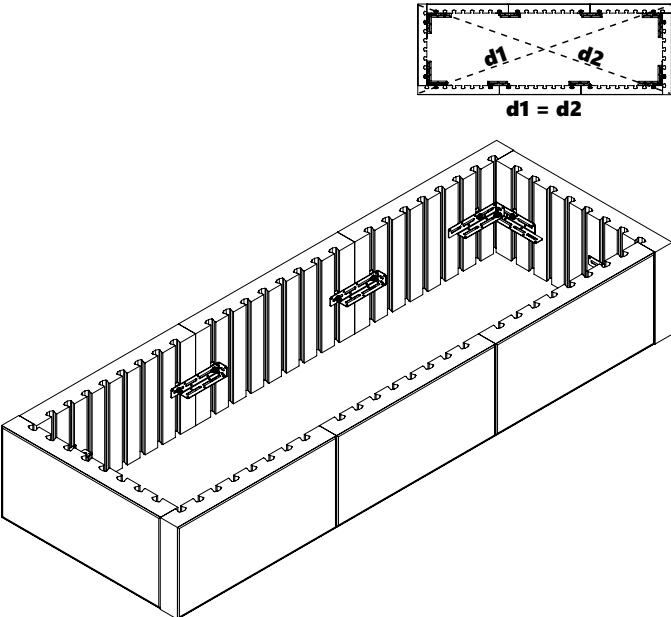


MODULE


7

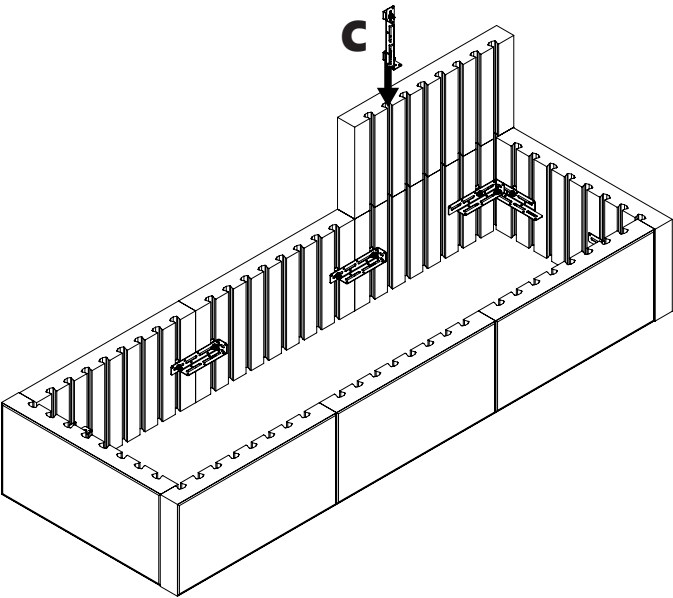


8

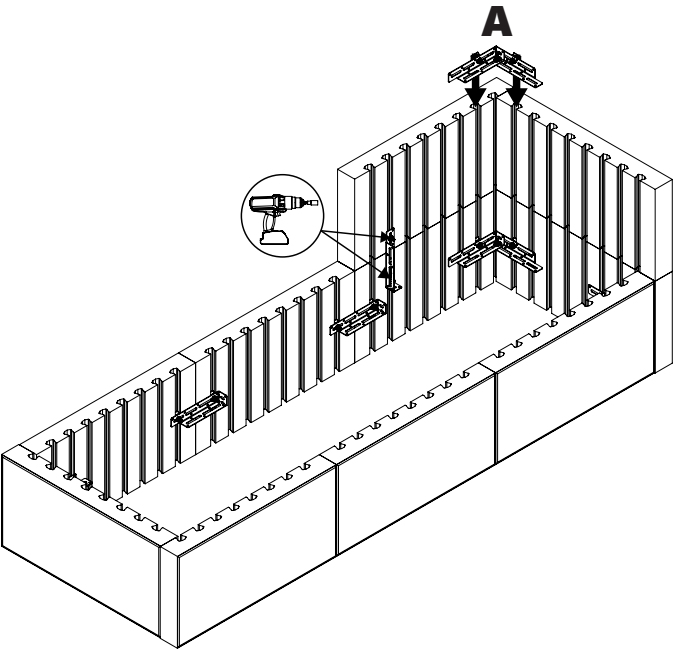

9

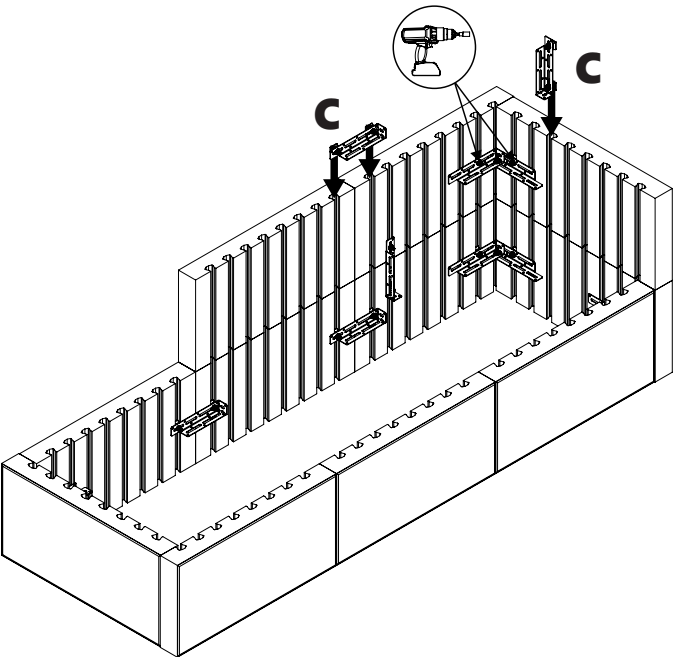


10

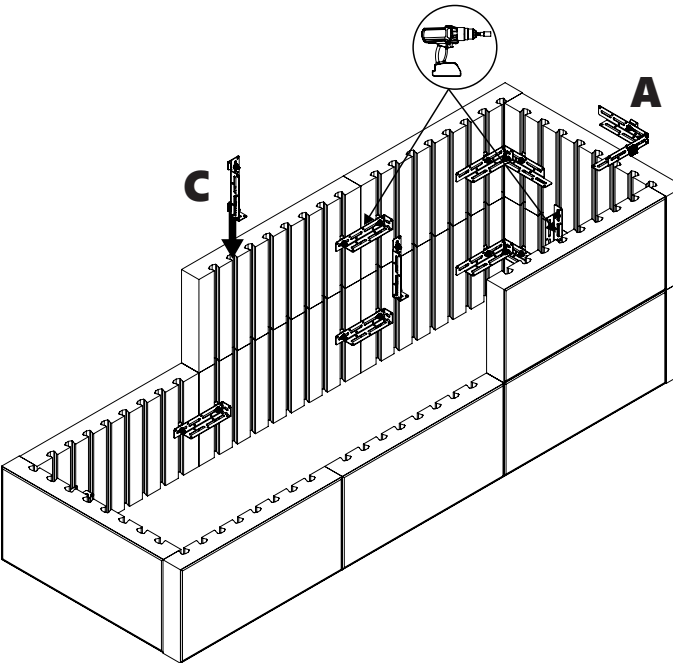


MODULE


11

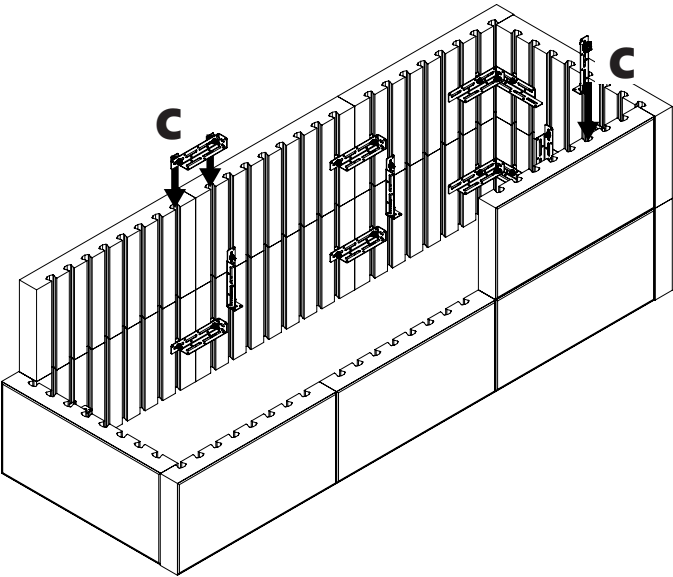


12

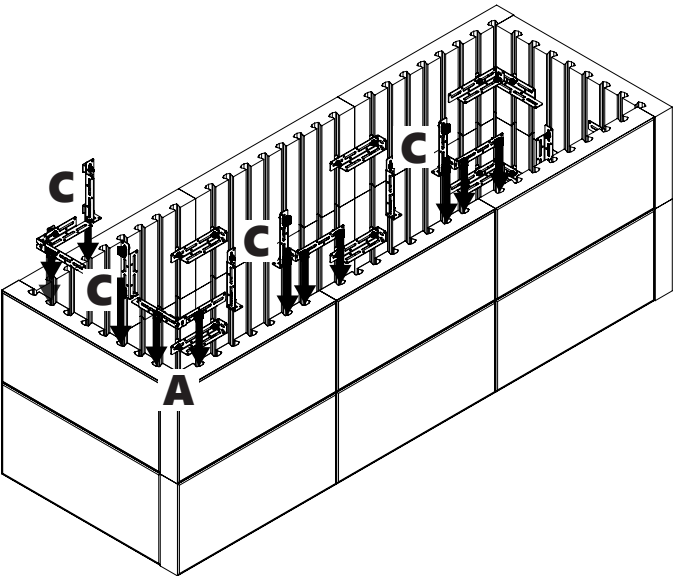

13

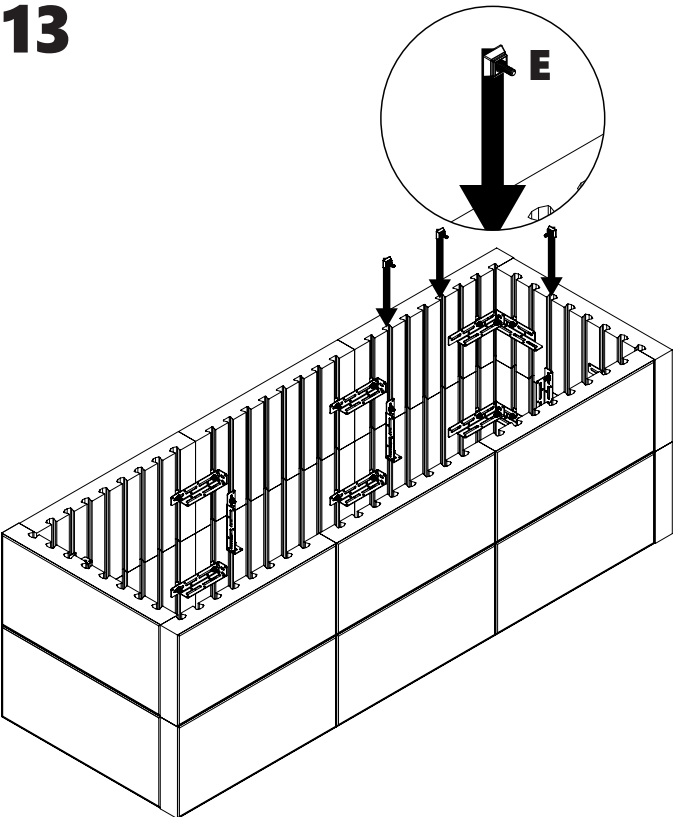


14

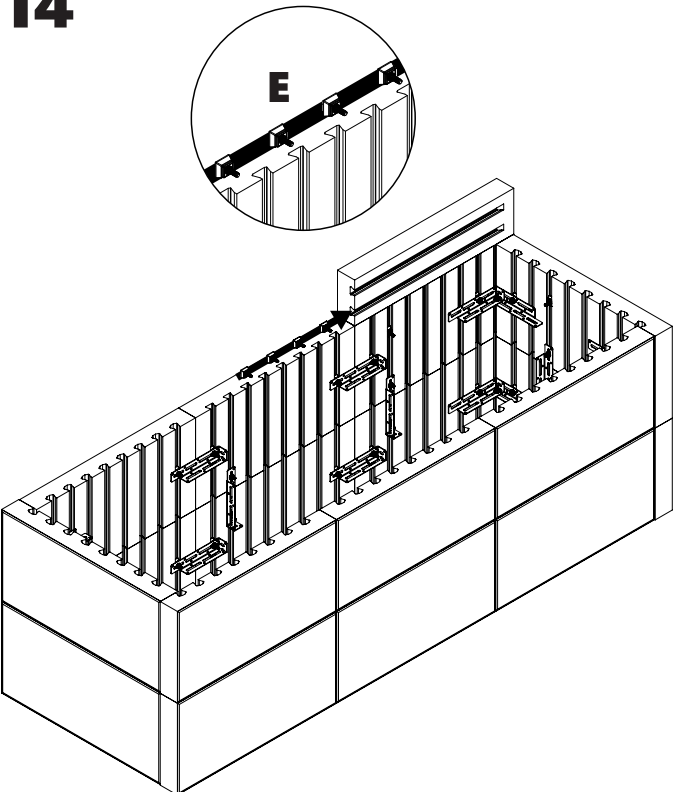


MODULE


15

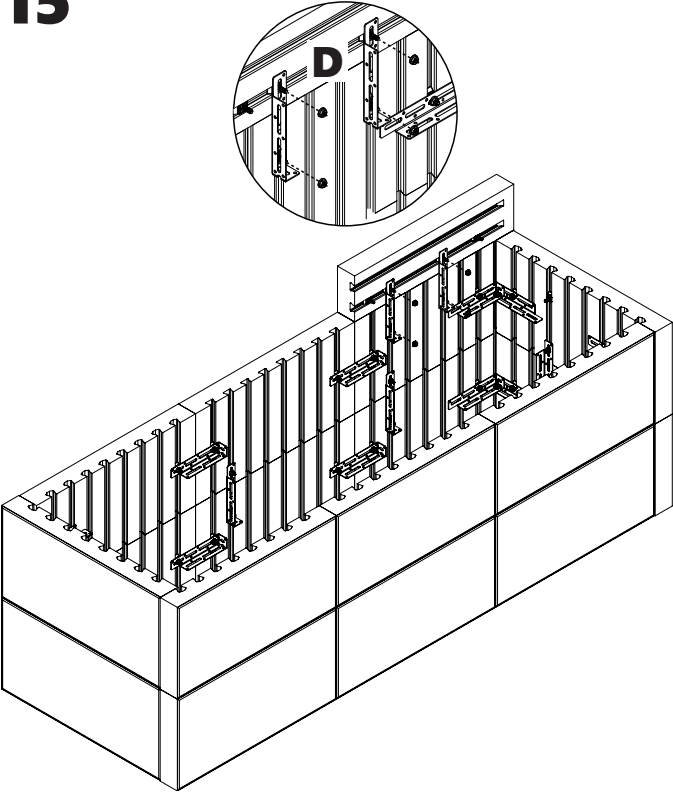


16

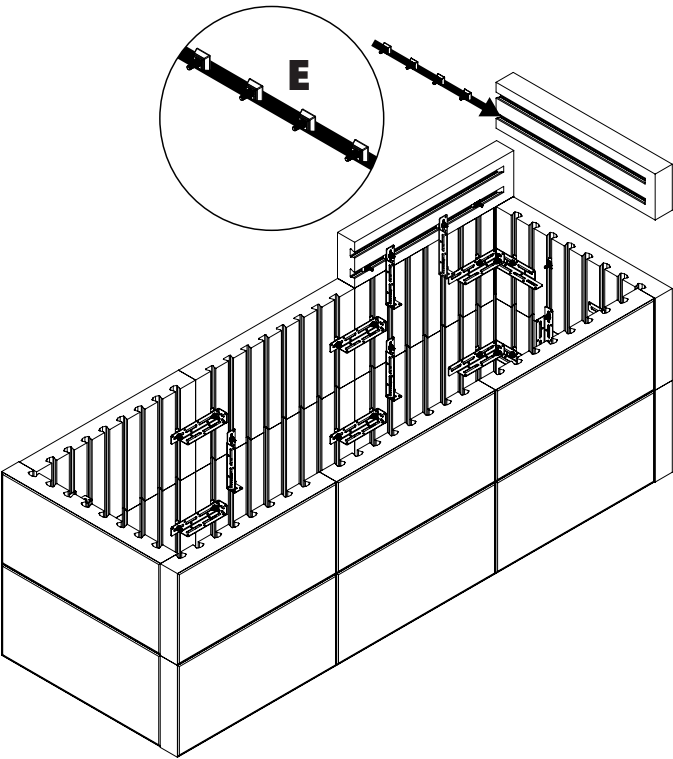

17

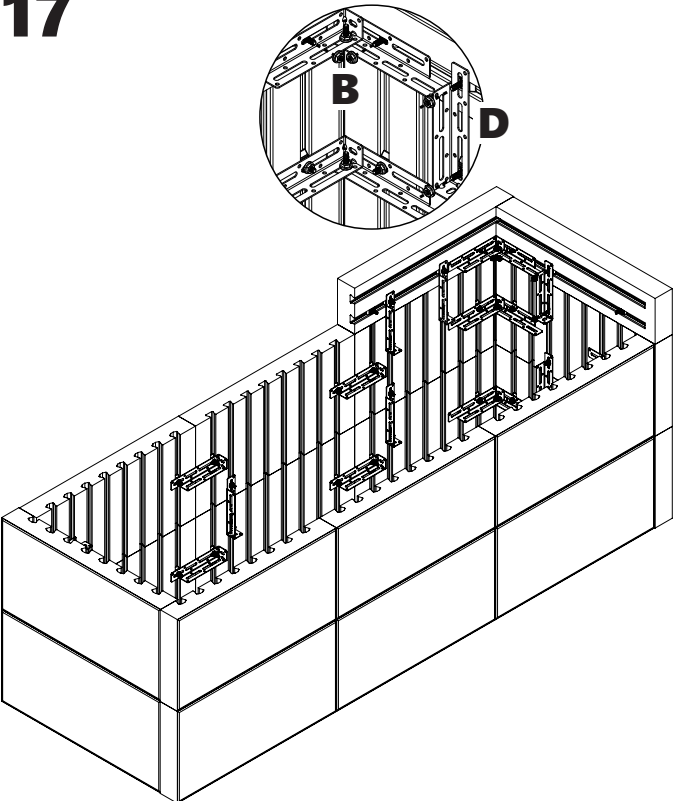


18

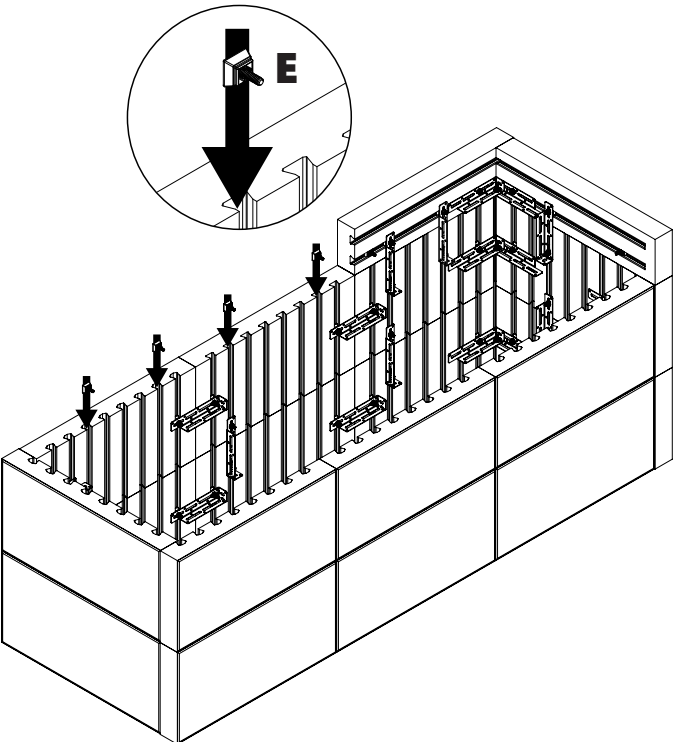


MODULE


19

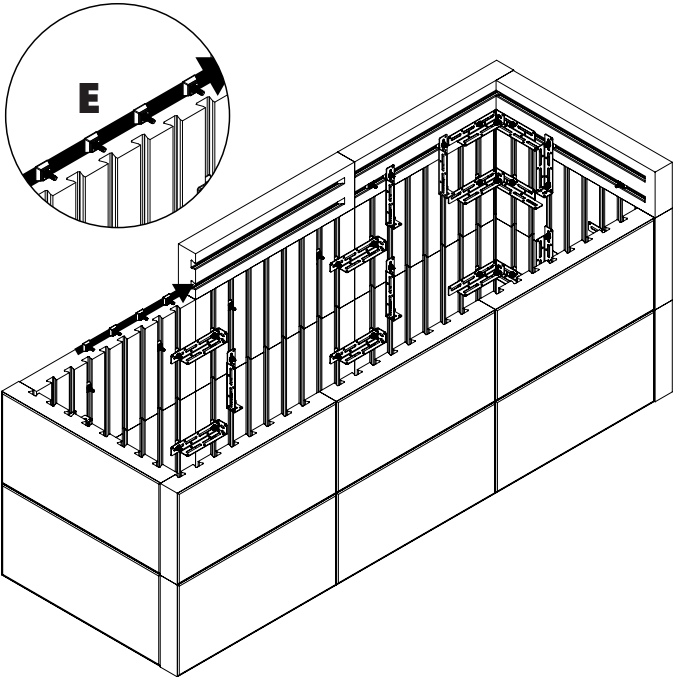


20

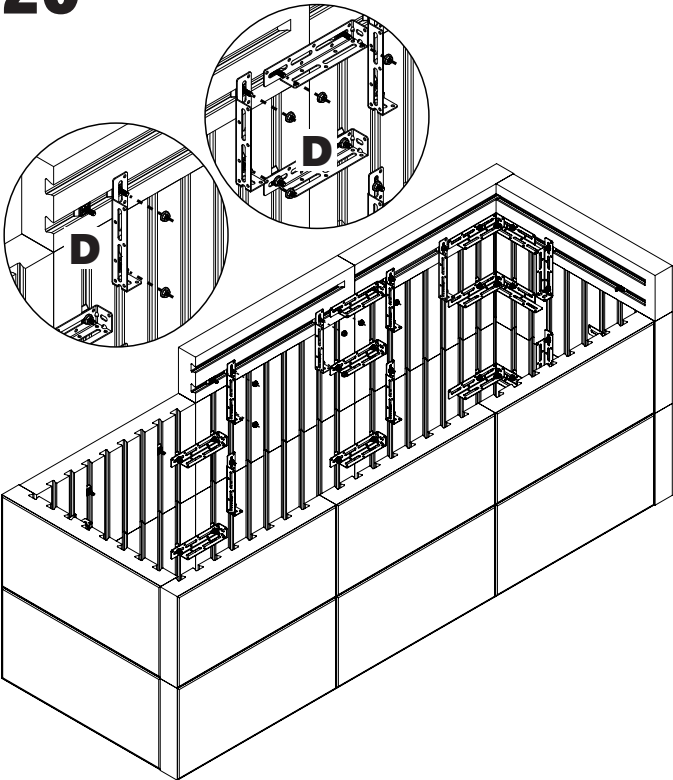

21

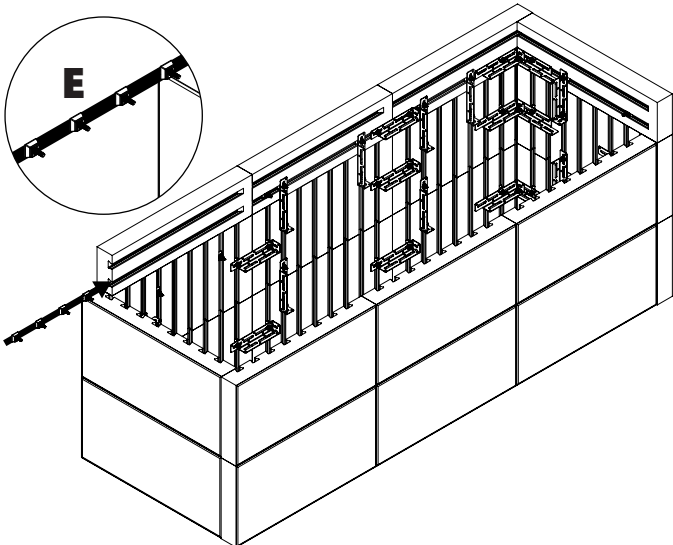


22

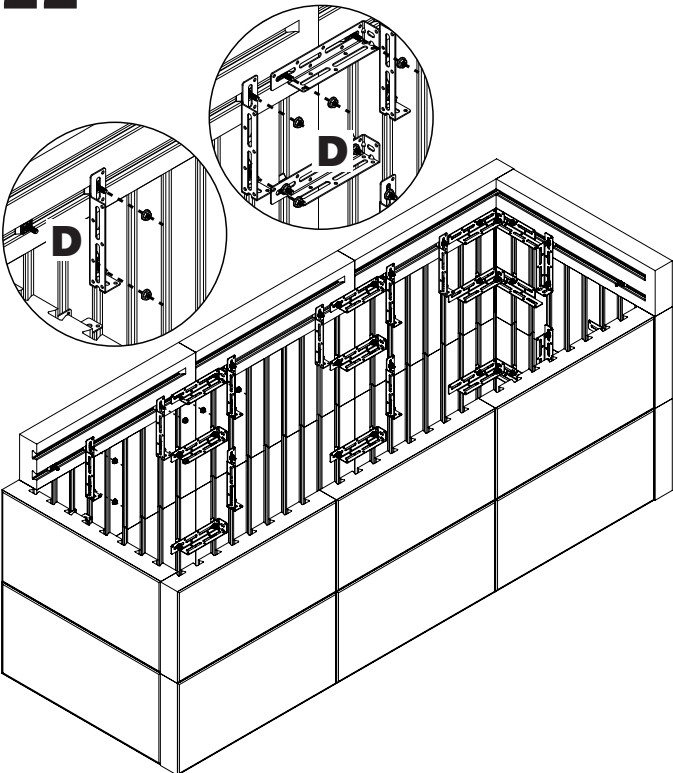


MODULE


23

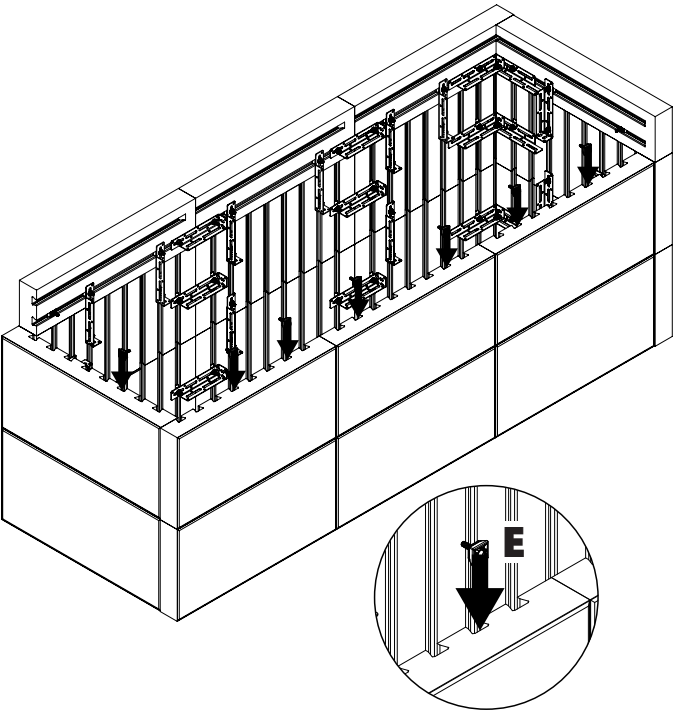


24

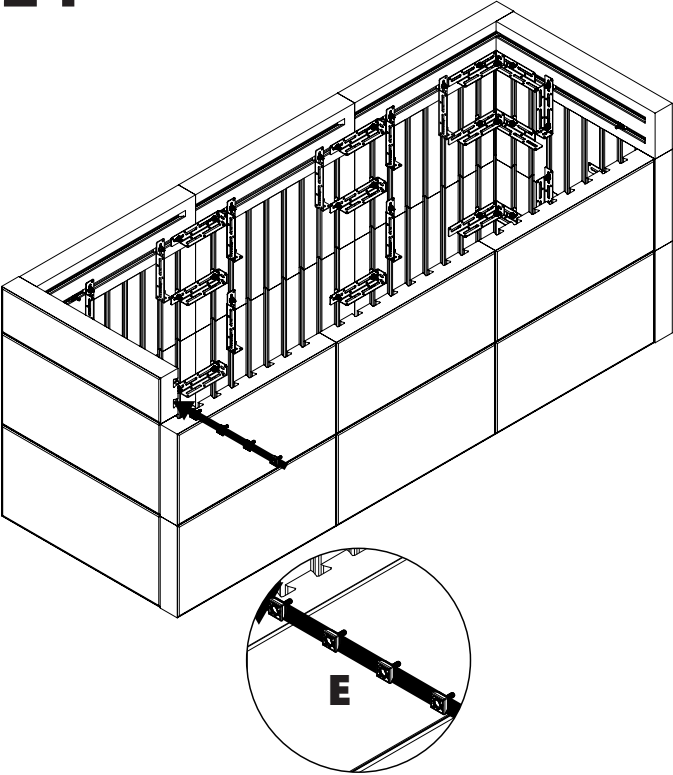

25

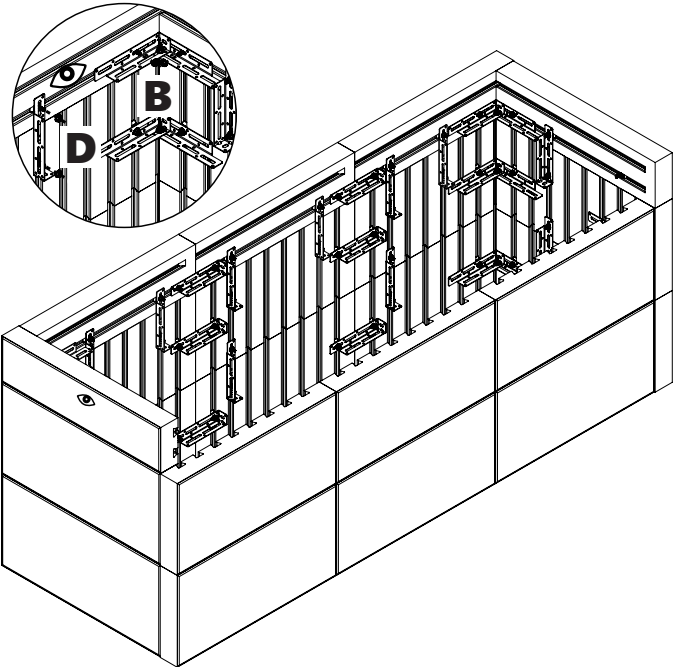


26

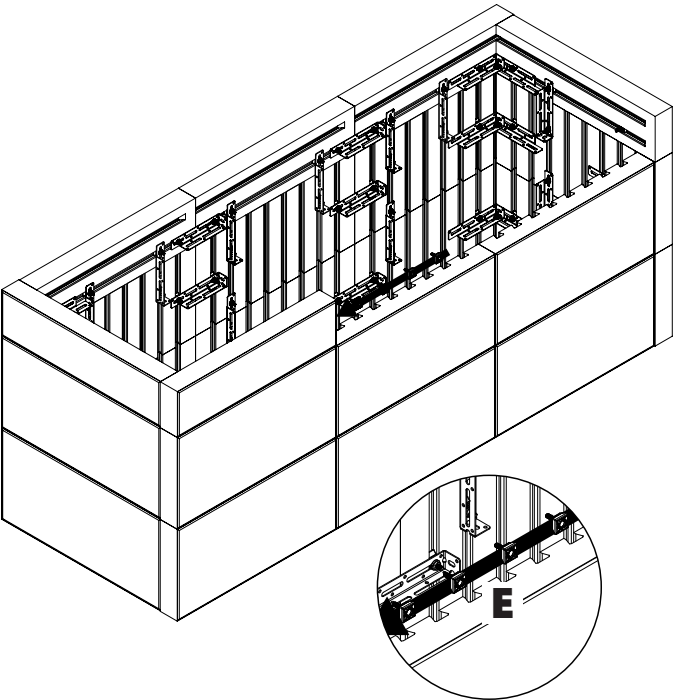


MODULE


27

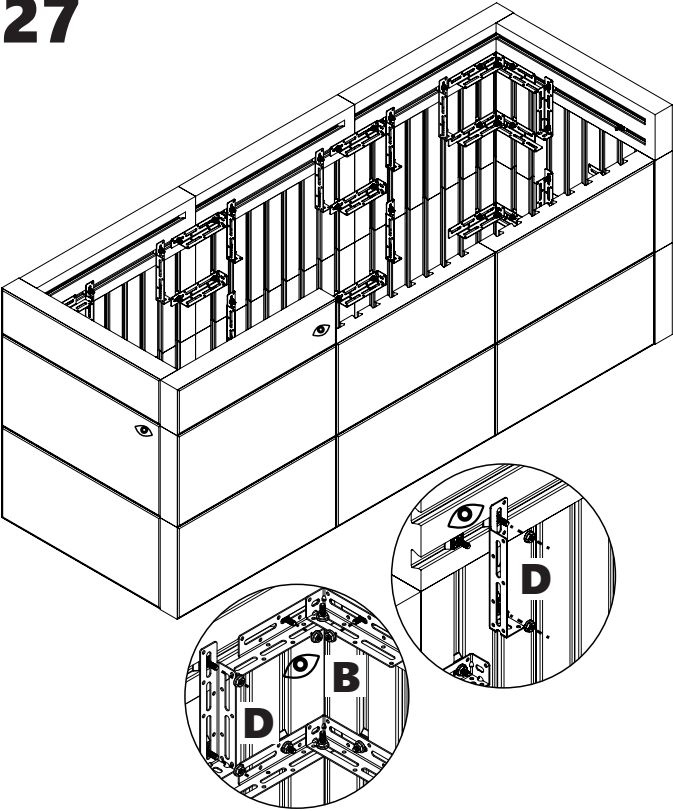

28

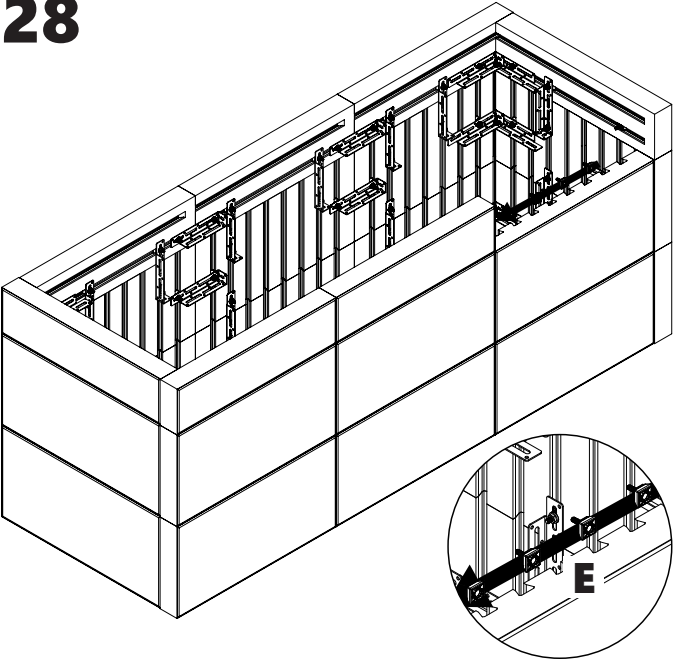

29

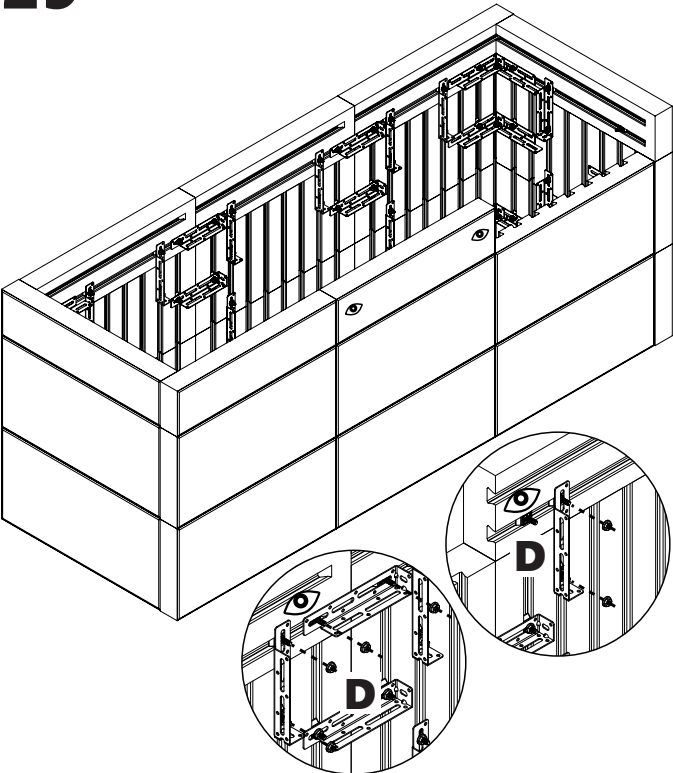

30

