



BELGARD®
PAVES THE WAY™

T-BLOCK



68" BENCH


T-BLOCK

COMPLETE THIS STEP
FIRST FOR ALL PROJECTS


BASE PREPARATION

Always level ground before installation


ON NEW OR EXISTING PATIO

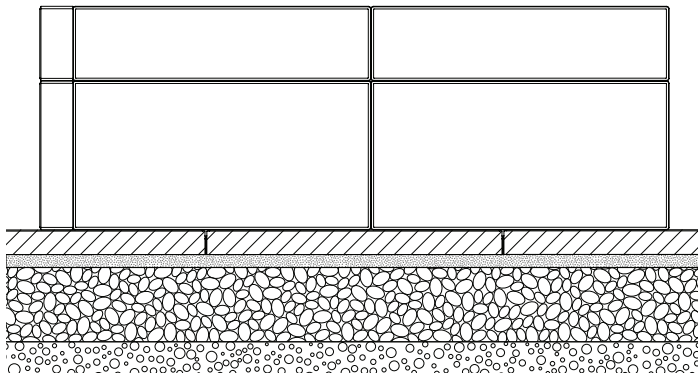

SLAB OR PAVER




BEDDING SAND 1"




COMPACTED AGGREGATES 6"-8"




SOIL



ON POURED CONCRETE

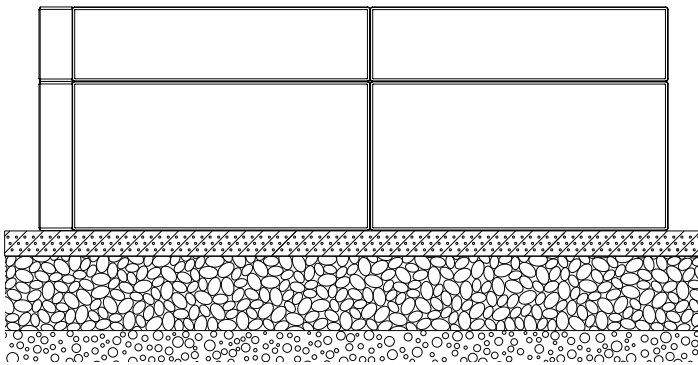

REINFORCED POURED CONCRETE FOUNDATION 2"




COMPACTED AGGREGATES 6"-8"



SOIL



ON COMPACTED FOUNDATION

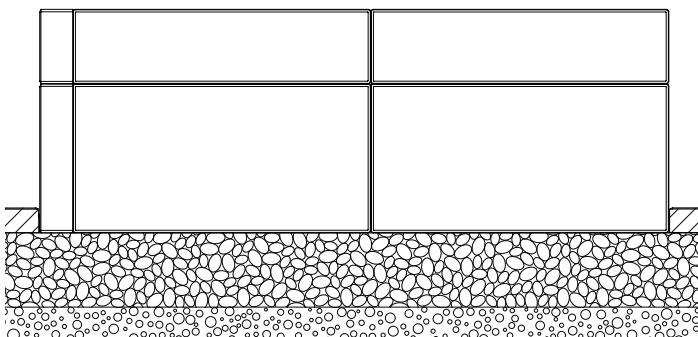


SLAB OR PAVER



COMPACTED AGGREGATES 6"-8"




SOIL




T-BLOCK


68" BENCH

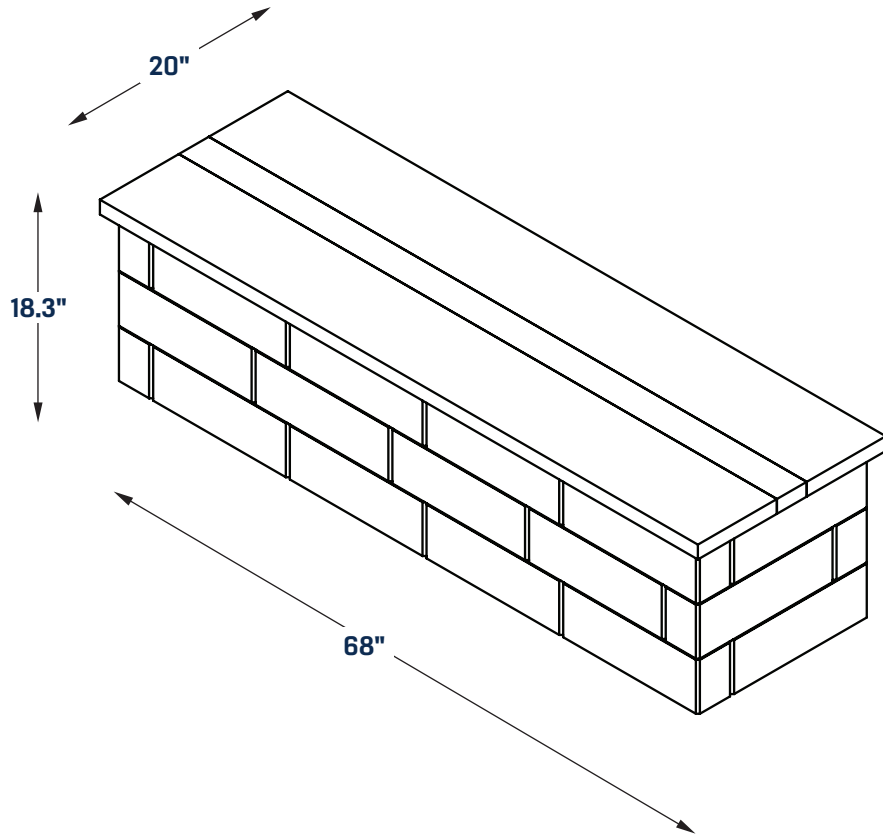

COMPONENTS

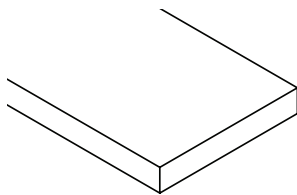


2" x 10" x 8' (x2)

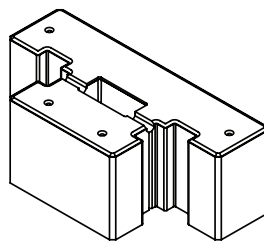

T-Block (x30)



Glue Tube

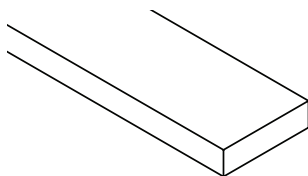

2" x 4" x 8' (x1)




No.8 x 2 1/2" (x12)


T-BLOCK

68" BENCH


REQUIRED TOOLS

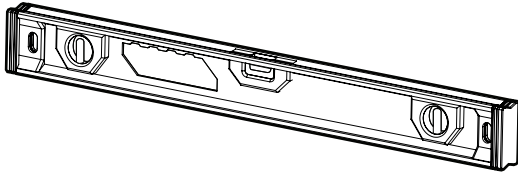


LEVEL

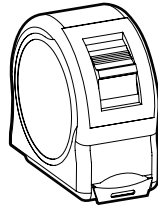


**MEASURING
TAPE**

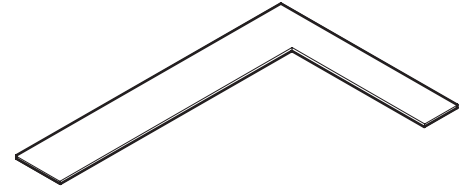

**CARPENTER
SQUARE**

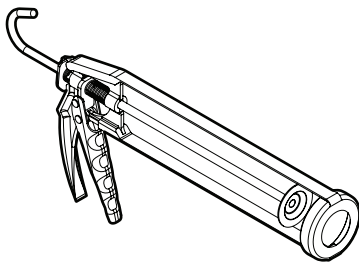

**SILICONE
GUN**

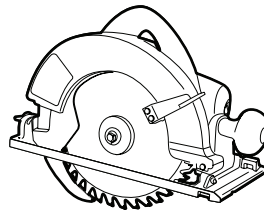


SKILSAW


SAFETY EQUIPMENT



SAFETY BOOTS

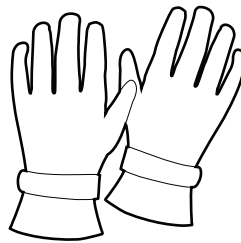




GLOVES

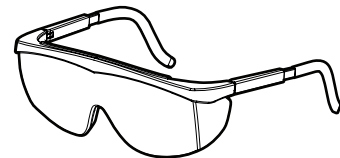

SAFETY GLASSES

T-BLOCK



68" BENCH

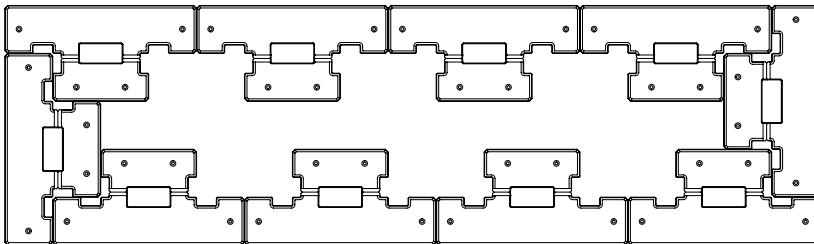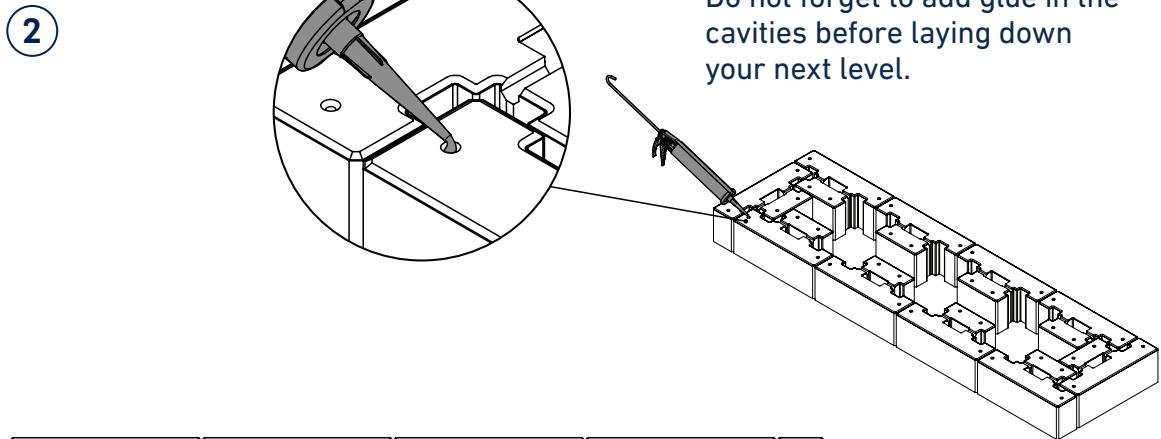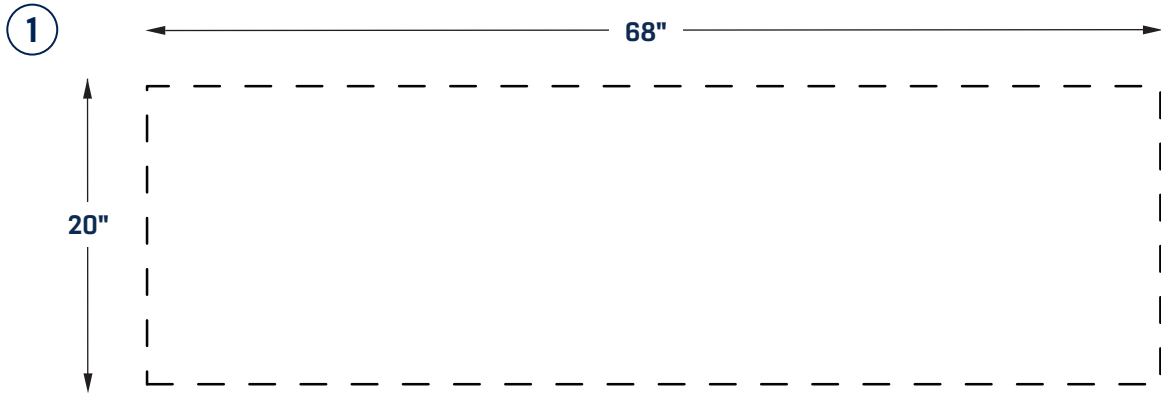



T-BLOCK

68" BENCH

- 3 Do not forget to add glue in the cavities before laying down your next level.

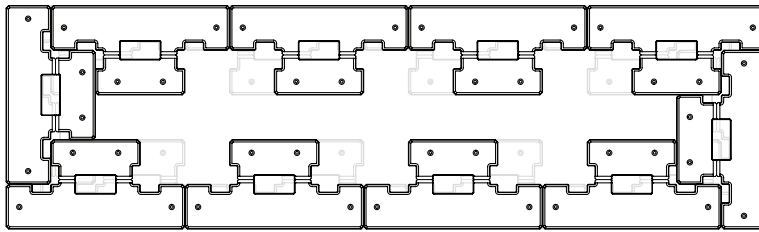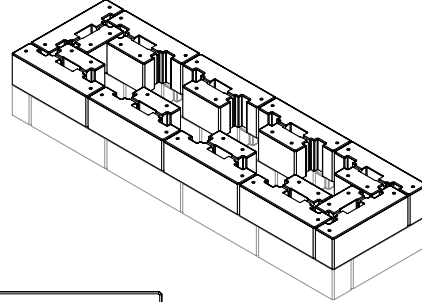

- 4 Do not forget to add glue in the cavities before laying down your next level.

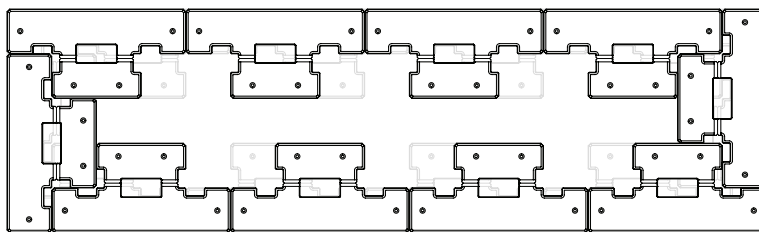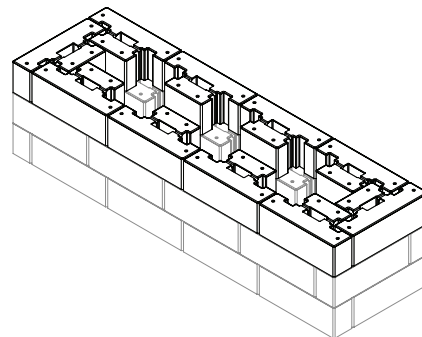

T-BLOCK

68" BENCH

- ⑥ Do not forget to add glue in the cavities before laying down your seat.

