



BELGARD®
PAVES THE WAY™

T-BLOCK



**BENCH AND
PLANTER**


T-BLOCK

COMPLETE THIS STEP
FIRST FOR ALL PROJECTS


BASE PREPARATION

Always level ground before installation


ON NEW OR EXISTING PATIO

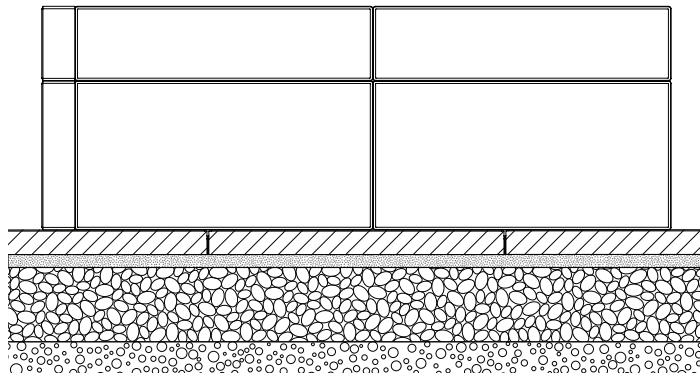

SLAB OR PAVER

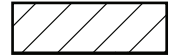


BEDDING SAND 1"

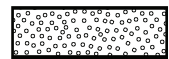


COMPACTED AGGREGATES 6"-8"




SOIL

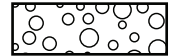

ON POURED CONCRETE

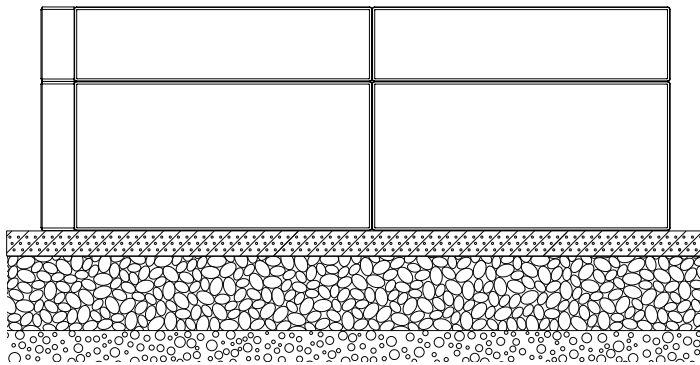

REINFORCED POURED CONCRETE FOUNDATION 2"

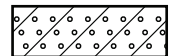


COMPACTED AGGREGATES 6"-8"



SOIL



ON COMPACTED FOUNDATION

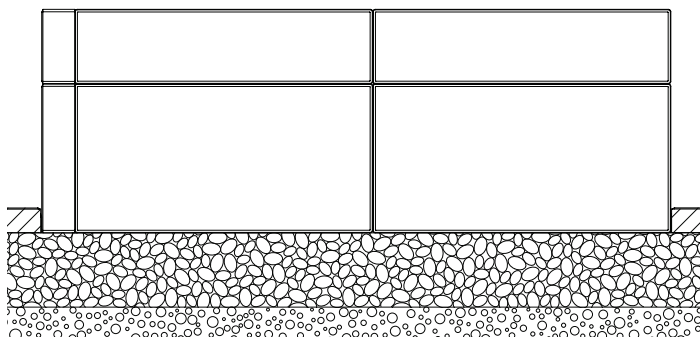


SLAB OR PAVER



COMPACTED AGGREGATES 6"-8"




SOIL

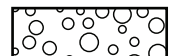


T-BLOCK


BENCH AND PLANTER

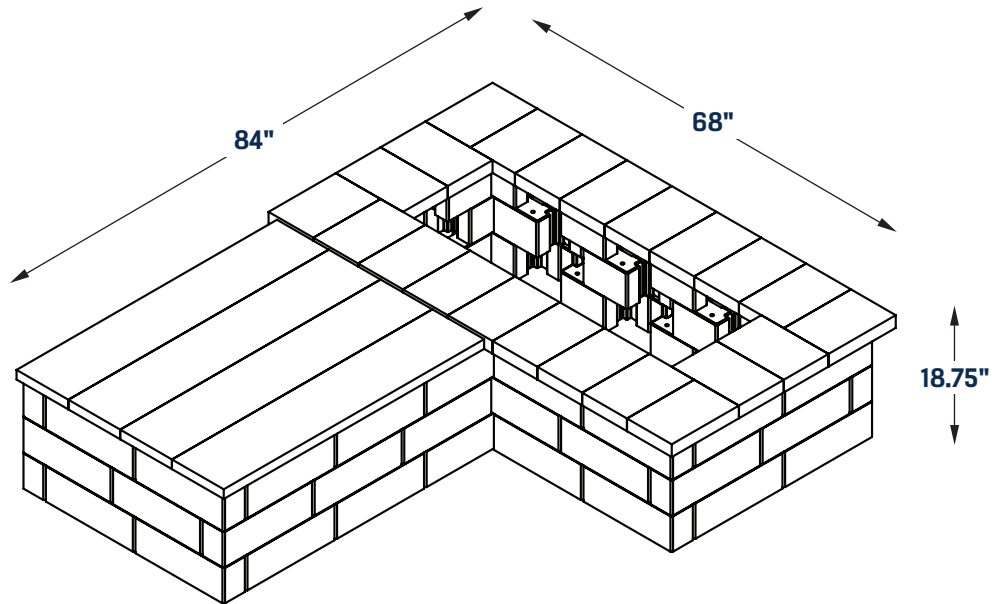


COMPONENTS

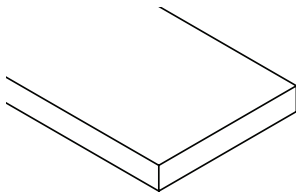


2" x 10" x 8' (x2)

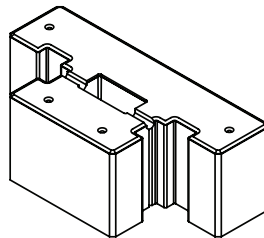


T-Block (x60)



Glue Tube

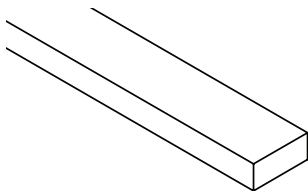

2" x 4" x 8' (x1)

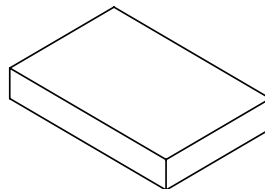

Cap (x22)




No.8 x 2 1/2" (x24)


T-BLOCK

BENCH AND PLANTER


REQUIRED TOOLS

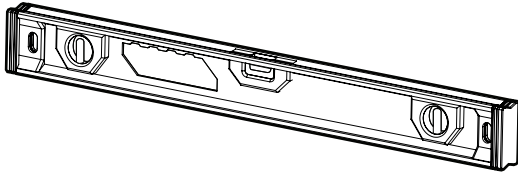


LEVEL

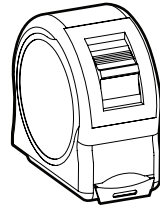


**MEASURING
TAPE**

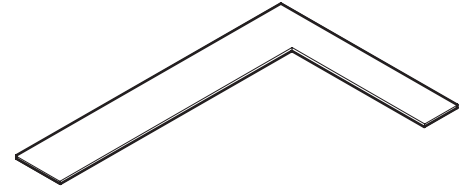

**CARPENTER
SQUARE**

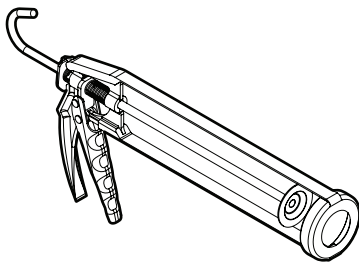

**SILICONE
GUN**

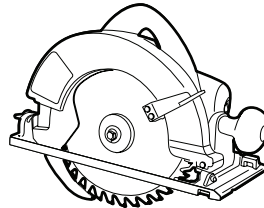


SKILSAW


SAFETY EQUIPMENT



SAFETY BOOTS

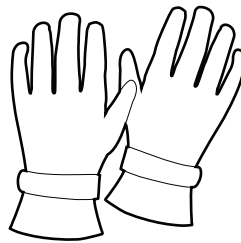



GLOVES

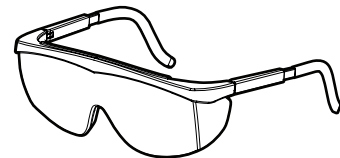

SAFETY GLASSES

T-BLOCK


BENCH AND PLANTER

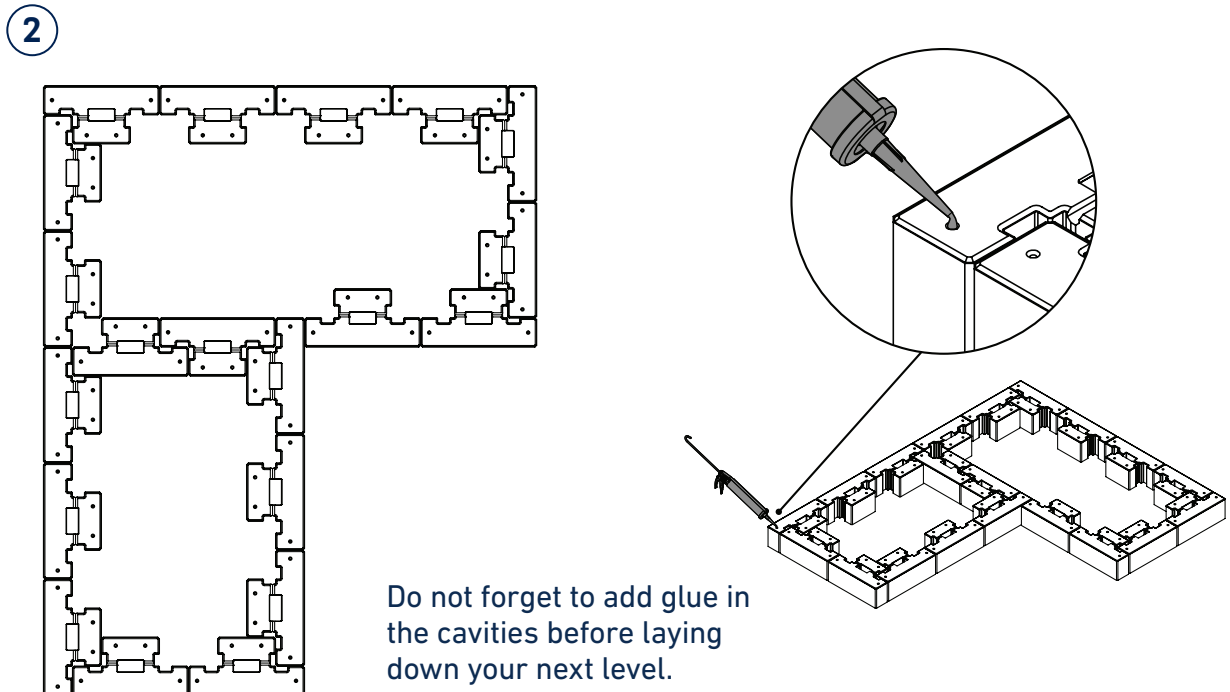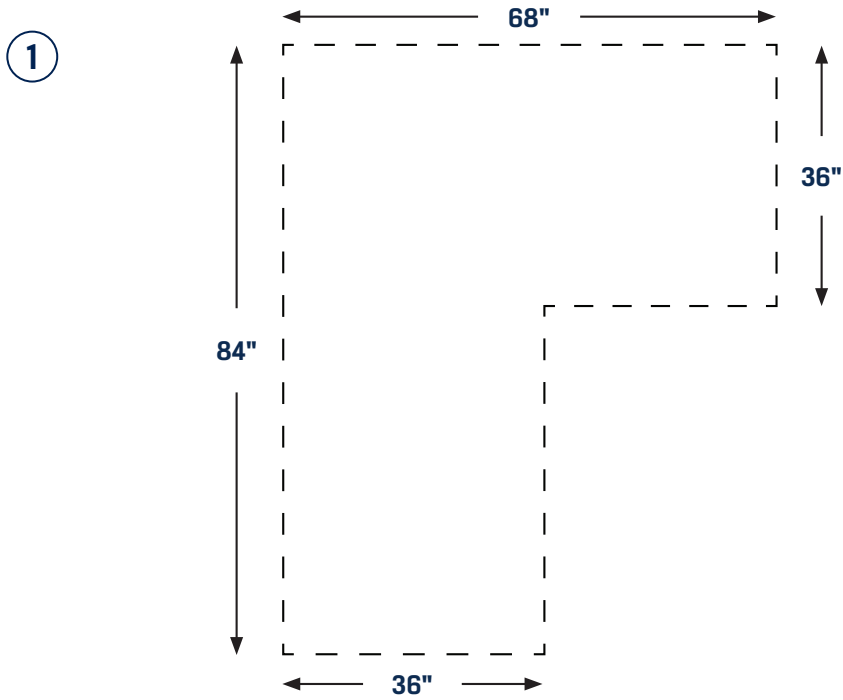


T-BLOCK

BENCH AND PLANTER


3

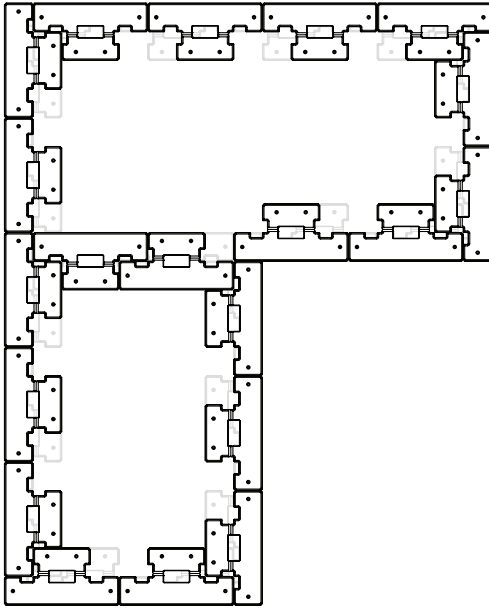


Do not forget to add glue in the cavities before laying down your next level.

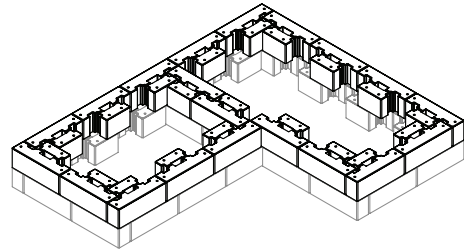

4

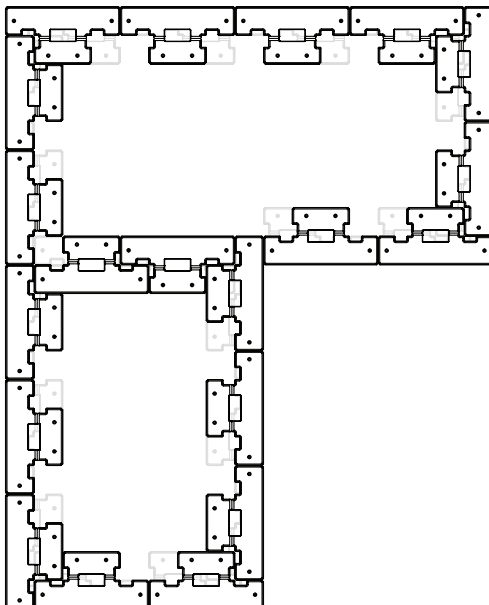



Do not forget to add glue in the cavities before laying down your next level.

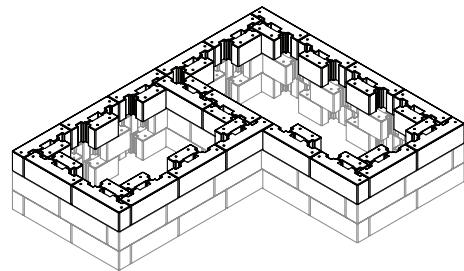


T-BLOCK

BENCH AND PLANTER

5

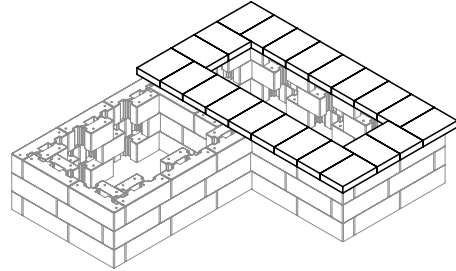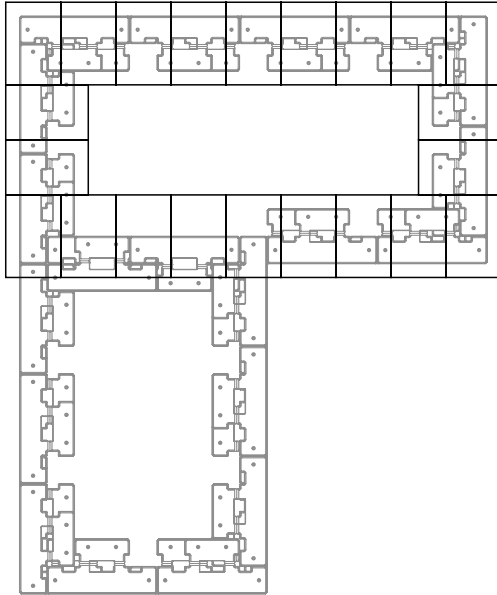


Do not forget to add glue in the cavities before laying down your next level.

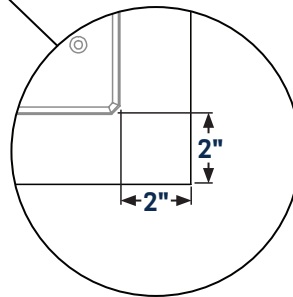

WOOD CUTS



- 2" x 4" x 8' A = 27³/₄"
- 2" x 10" x 8' B = 46¹/₂"

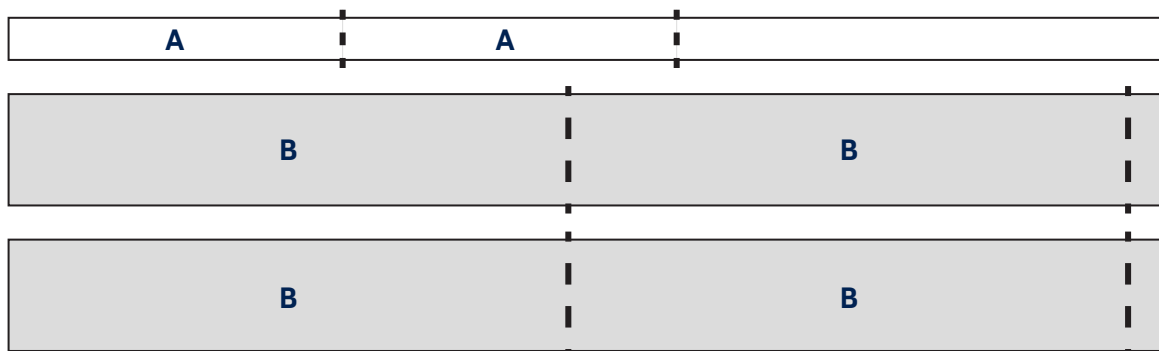


T-BLOCK

BENCH AND PLANTER

6

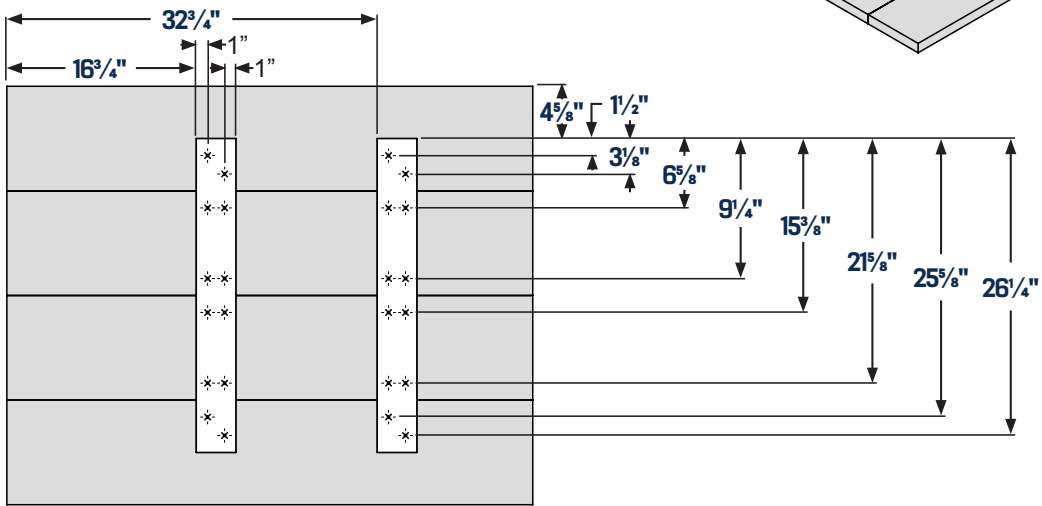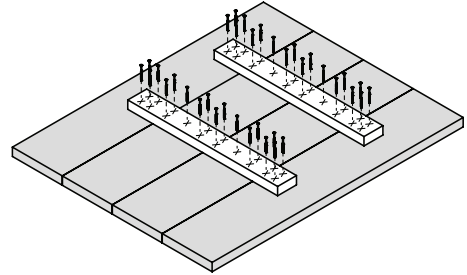

7

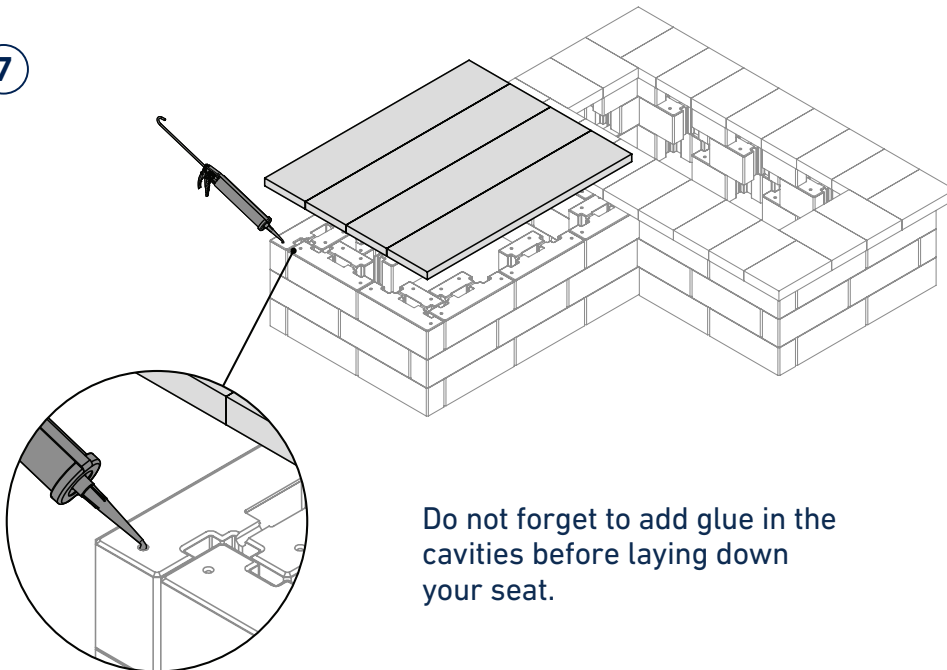

Do not forget to add glue in the cavities before laying down your seat.