



BELGARD®
PAVES THE WAY™

T-BLOCK



**52" x 36" WOOD CAP
RECTANGULAR PLANTER**


T-BLOCK

COMPLETE THIS STEP
FIRST FOR ALL PROJECTS


BASE PREPARATION

Always level ground before installation


ON NEW OR EXISTING PATIO

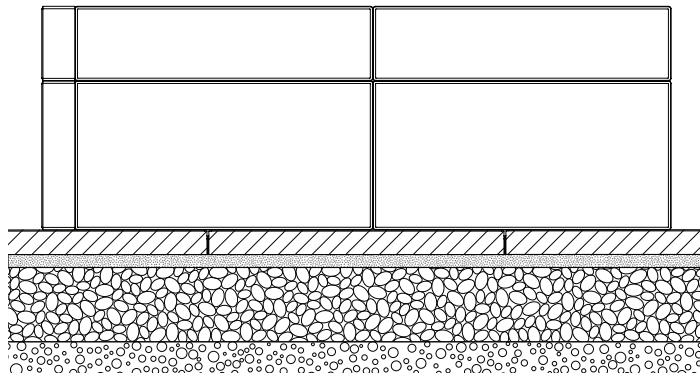

SLAB OR PAVER

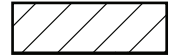


BEDDING SAND 1"

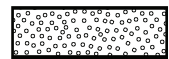


COMPACTED AGGREGATES 6"-8"




SOIL



ON POURED CONCRETE

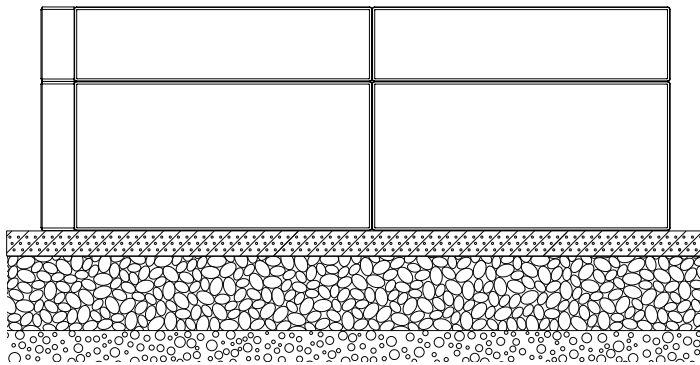

REINFORCED POURED CONCRETE FOUNDATION 2"




COMPACTED AGGREGATES 6"-8"




SOIL



ON COMPACTED FOUNDATION

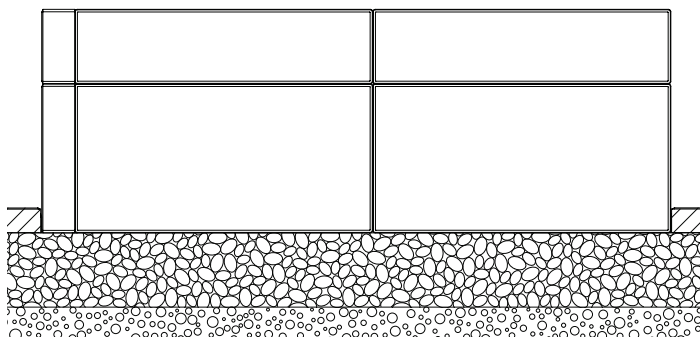

SLAB OR PAVER



COMPACTED AGGREGATES 6"-8"




SOIL







T-BLOCK

52" x 36" WOOD CAP
RECTANGULAR PLANTER

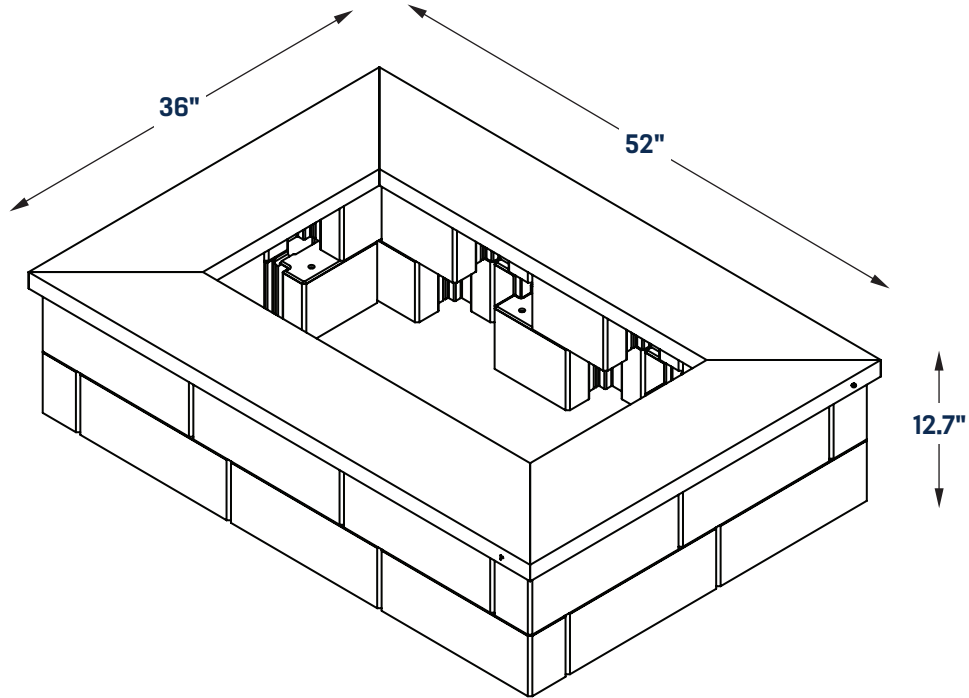


COMPONENTS

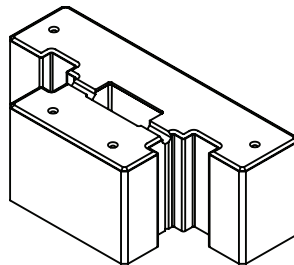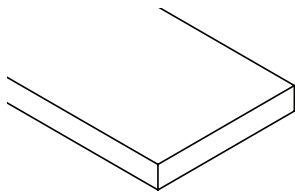


T-BLOCK

52" x 36" WOOD CAP
RECTANGULAR PLANTER


REQUIRED TOOLS

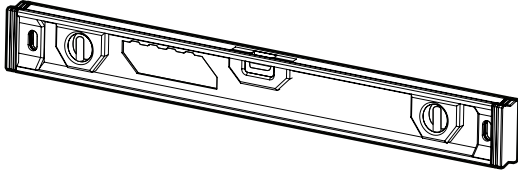


LEVEL

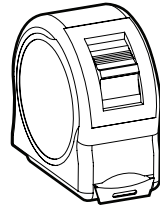


MEASURING
TAPE

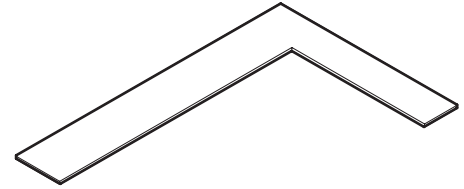

CARPENTER
SQUARE

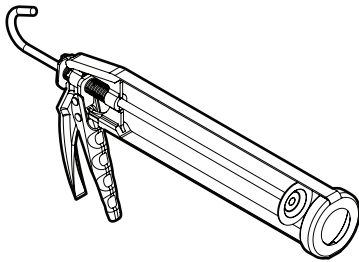

SILICONE
GUN

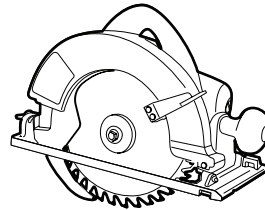


SKILSAW


SAFETY EQUIPMENT



SAFETY BOOTS

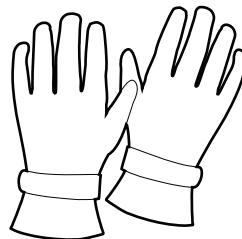

GLOVES

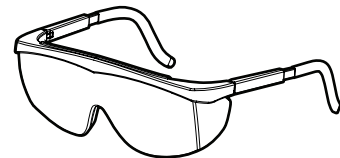


SAFETY GLASSES

T-BLOCK



52" x 36" WOOD CAP RECTANGULAR PLANTER

1

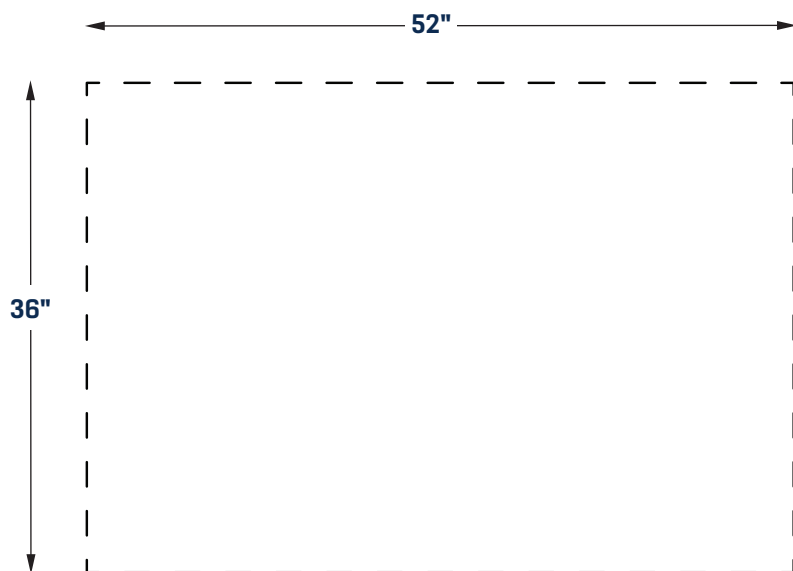

2



Do not forget to add glue in the cavities before laying down your next level.

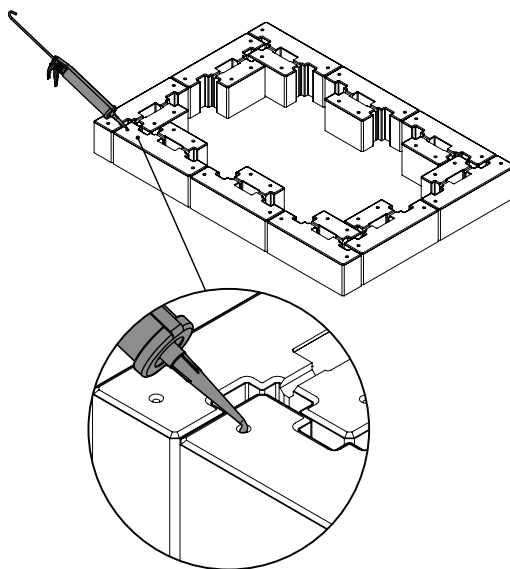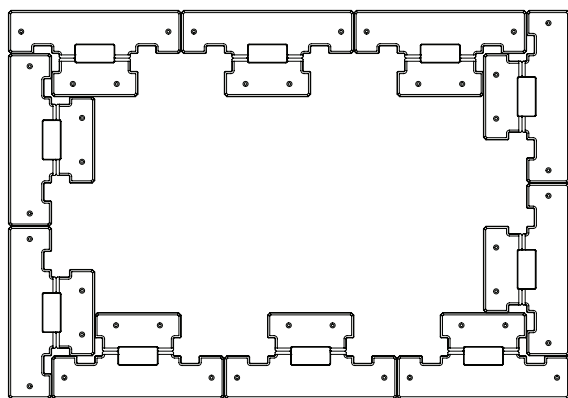

T-BLOCK

52" x 36" WOOD CAP RECTANGULAR PLANTER

- 3 Do not forget to add glue in the cavities before laying down your next level.

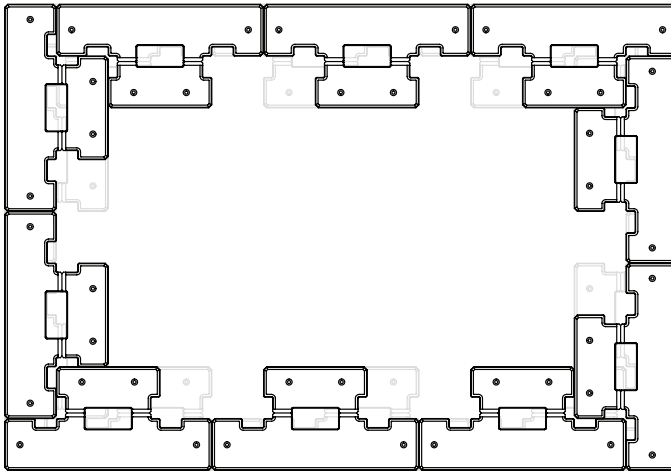
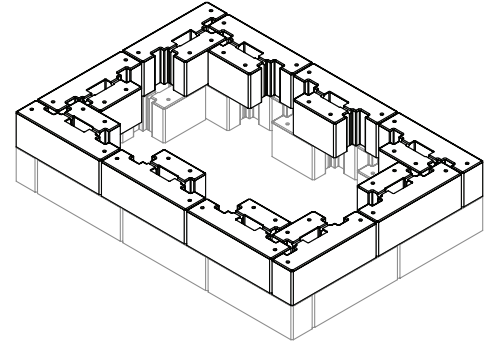


WOOD CUTS

□ 2" x 10" x 8'

A = 53 $\frac{1}{4}$ "



B = 37 $\frac{1}{4}$ "

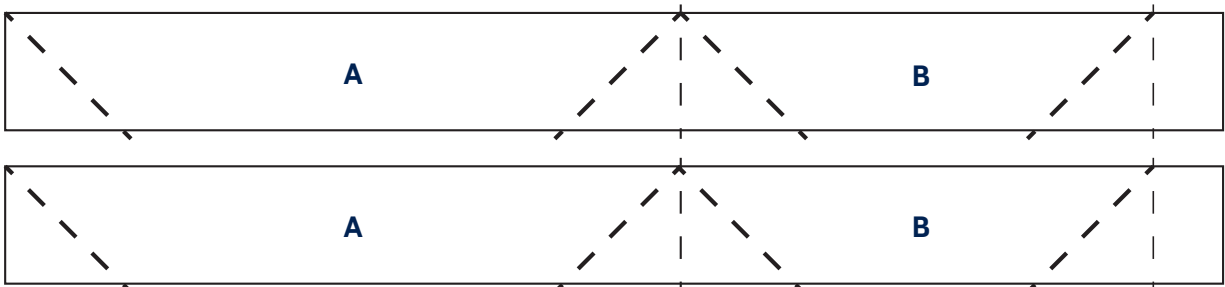



T-BLOCK

52" x 36" WOOD CAP RECTANGULAR PLANTER

- 4 Put the angle pieces together to create the frame shape, keeping all edges aligned while the glue sets.

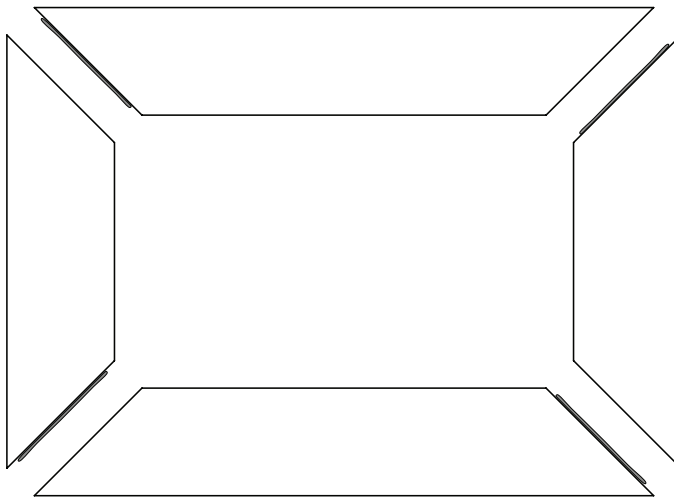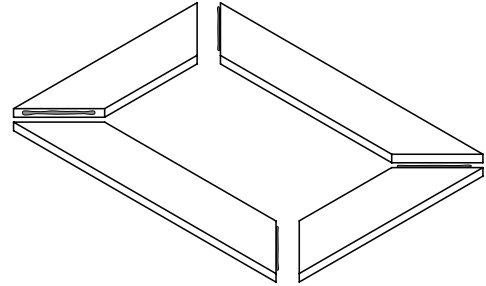

- 5 Add the screws in each corner, making sure they go through the middle of the boards for a solid connection.

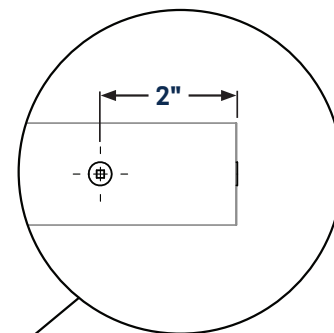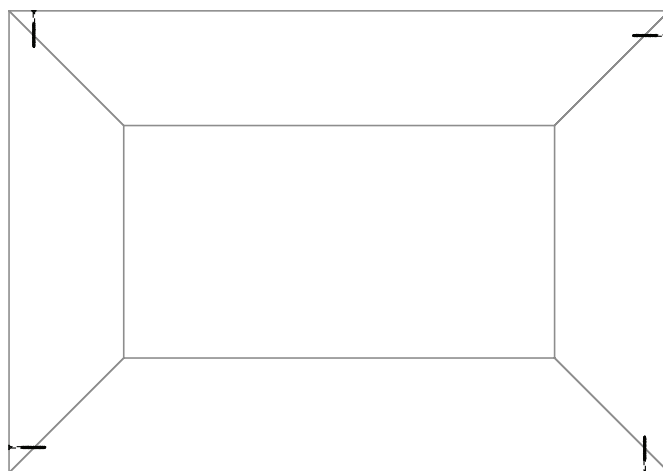

T-BLOCK

52" x 36" WOOD CAP RECTANGULAR PLANTER

- 6 Do not forget to add glue in the cavities before laying down the frame.

