



BELGARD®  
PAVES THE WAY™

# T-BLOCK



**44" SQUARE PLANTER**


# T-BLOCK

COMPLETE THIS STEP  
FIRST FOR ALL PROJECTS

## BASE PREPARATION

Always level ground before installation


### ON NEW OR EXISTING PATIO

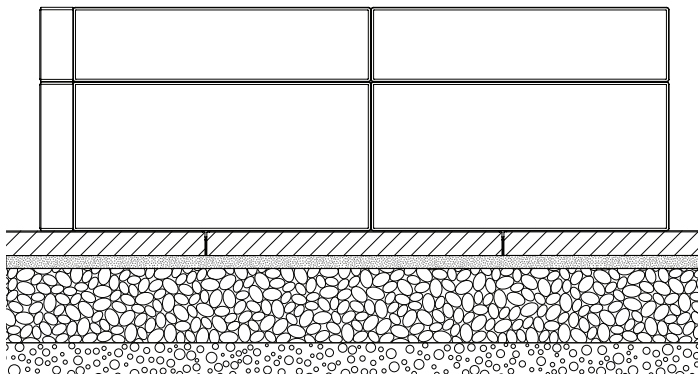


### SLAB OR PAVER




### BEDDING SAND 1"




### COMPACTED AGGREGATES 6"-8"




### SOIL



### ON POURED CONCRETE

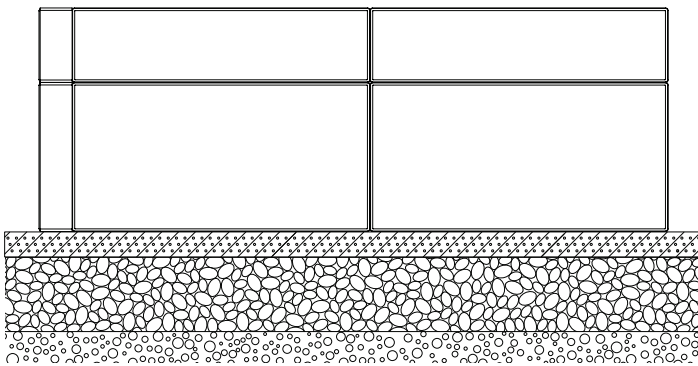


### REINFORCED POURED CONCRETE FOUNDATION 2"




### COMPACTED AGGREGATES 6"-8"




### SOIL



### ON COMPACTED FOUNDATION

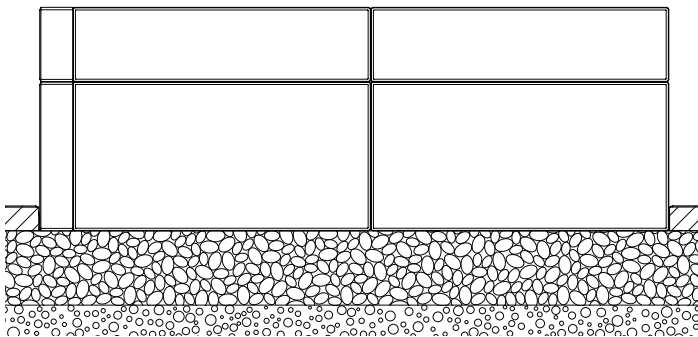


### SLAB OR PAVER



### COMPACTED AGGREGATES 6"-8"




### SOIL




# T-BLOCK


44" SQUARE  
PLANTER

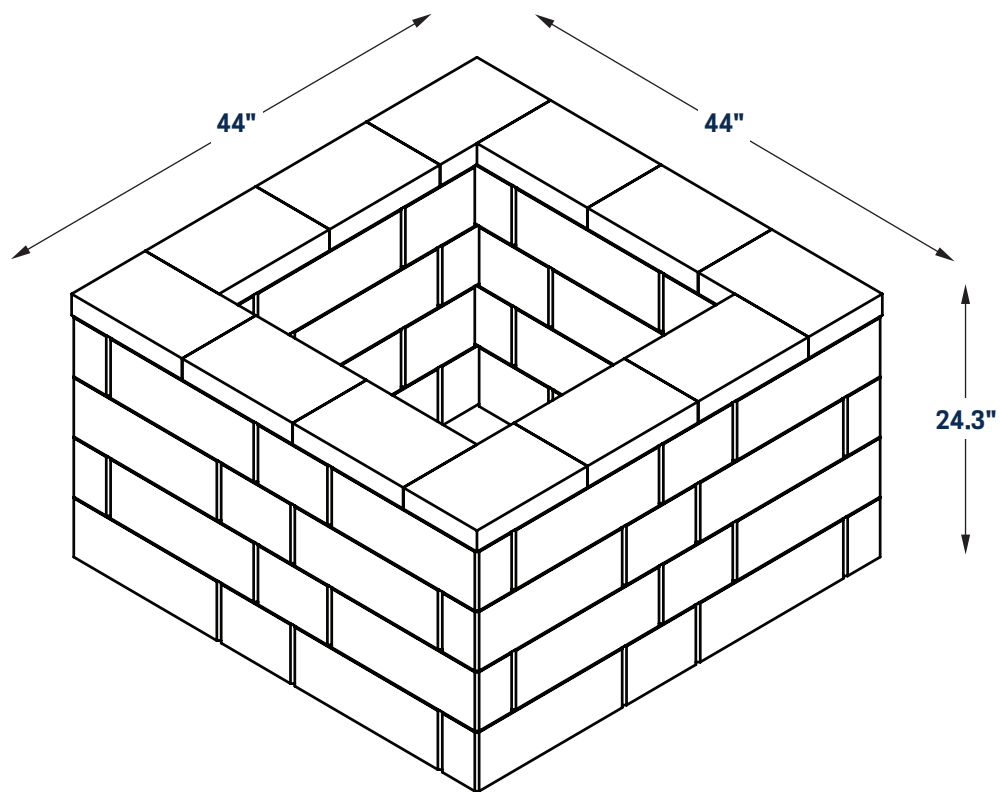

## COMPONENTS

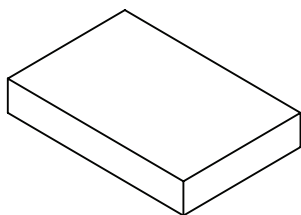

Cap (x12)

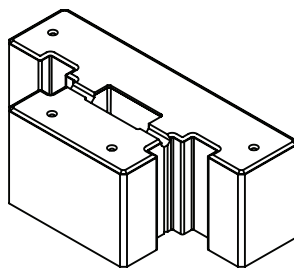

T-Block (x48)




Glue Tube


# T-BLOCK

44" SQUARE  
PLANTER


## REQUIRED TOOLS

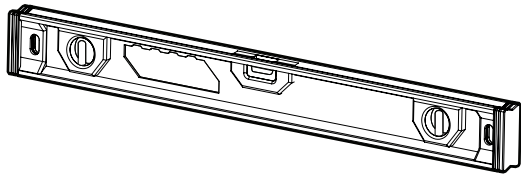


LEVEL

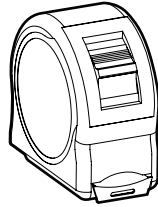

MEASURING  
TAPE

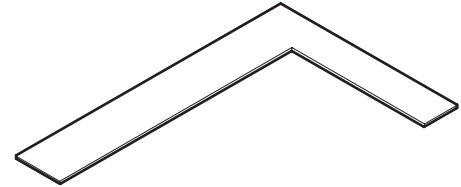

CARPENTER  
SQUARE

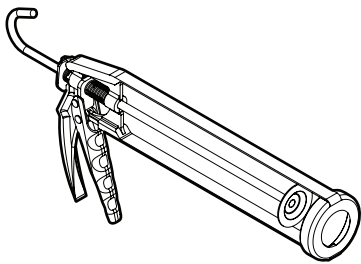


SILICONE  
GUN


## SAFETY EQUIPMENT



SAFETY BOOTS

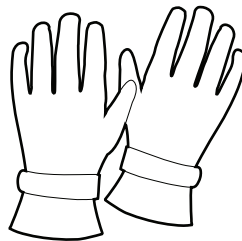

GLOVES

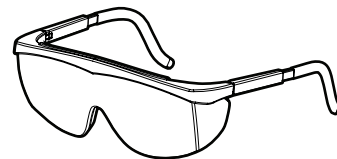


SAFETY GLASSES

# T-BLOCK



## 44" SQUARE PLANTER

①

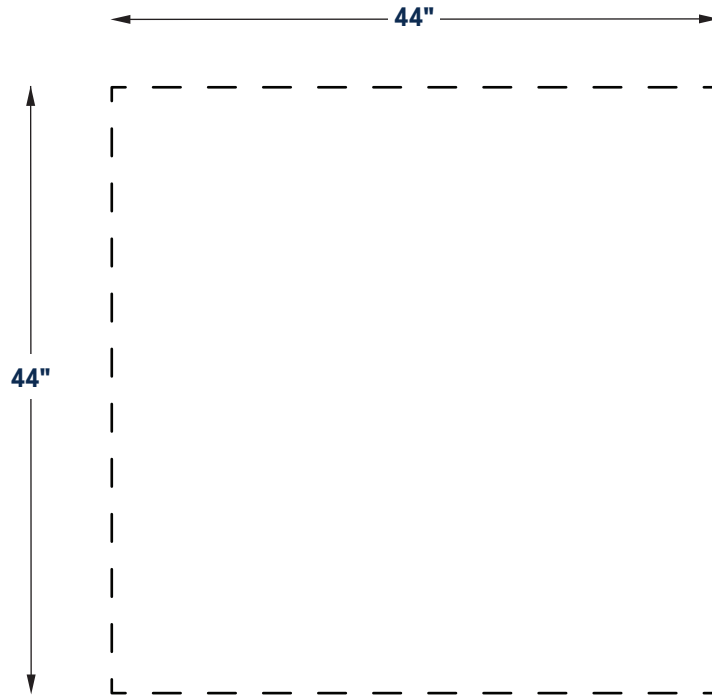

②



Do not forget to add glue in the cavities before laying down your next level.

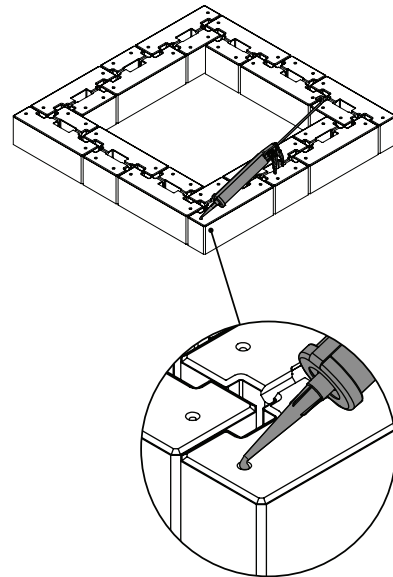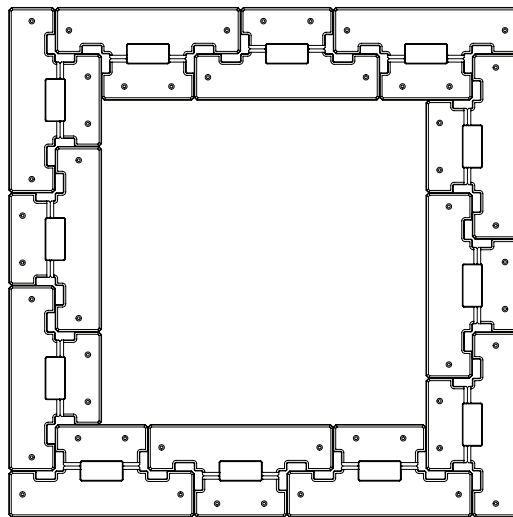


# T-BLOCK

## 44" SQUARE PLANTER

- 3** Do not forget to add glue in the cavities before laying down your next level.

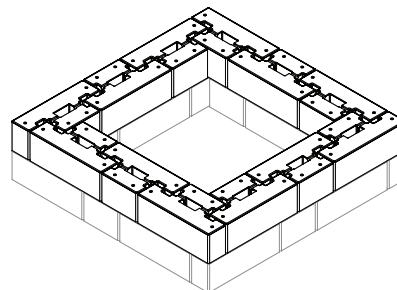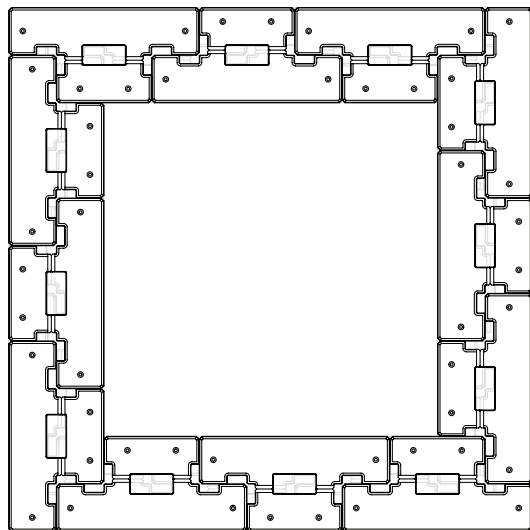

- 4** Continue alternating steps 2 and 3 until you have 4 levels (2 of each). Don't forget to add glue in the cavities before each new level.

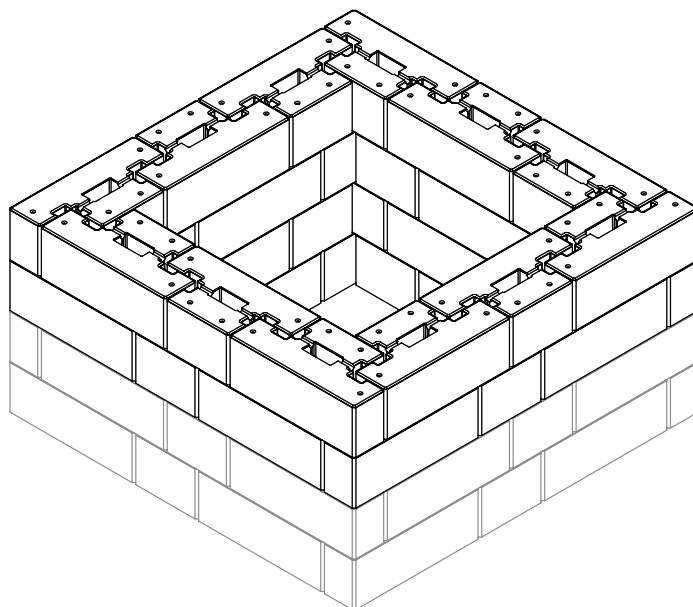

# T-BLOCK

## 44" SQUARE PLANTER

- 5 Do not forget to add glue in the cavities before laying down your next level.

