



BELGARD®
PAVES THE WAY™

T-BLOCK



**SQUARE PLANTER
AND BENCH**


T-BLOCK

COMPLETE THIS STEP
FIRST FOR ALL PROJECTS


BASE PREPARATION

Always level ground before installation


ON NEW OR EXISTING PATIO

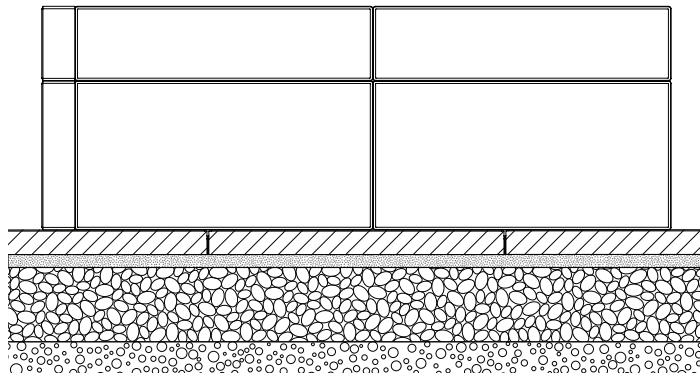

SLAB OR PAVER

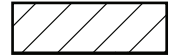


BEDDING SAND 1"

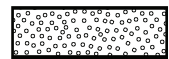


COMPACTED AGGREGATES 6"-8"




SOIL

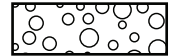

ON POURED CONCRETE

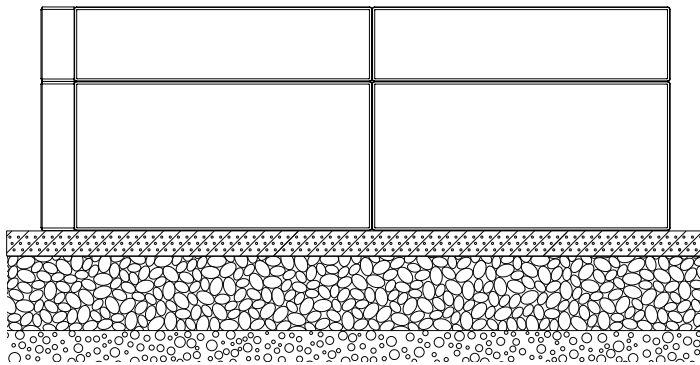

REINFORCED POURED CONCRETE FOUNDATION 2"

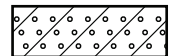


COMPACTED AGGREGATES 6"-8"



SOIL



ON COMPACTED FOUNDATION

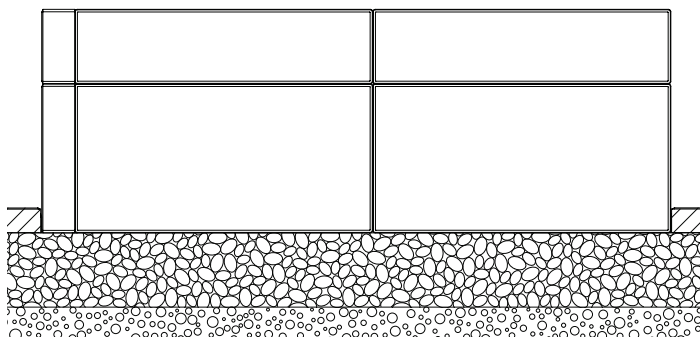


SLAB OR PAVER



COMPACTED AGGREGATES 6"-8"




SOIL

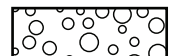


T-BLOCK


SQUARE PLANTER AND BENCH

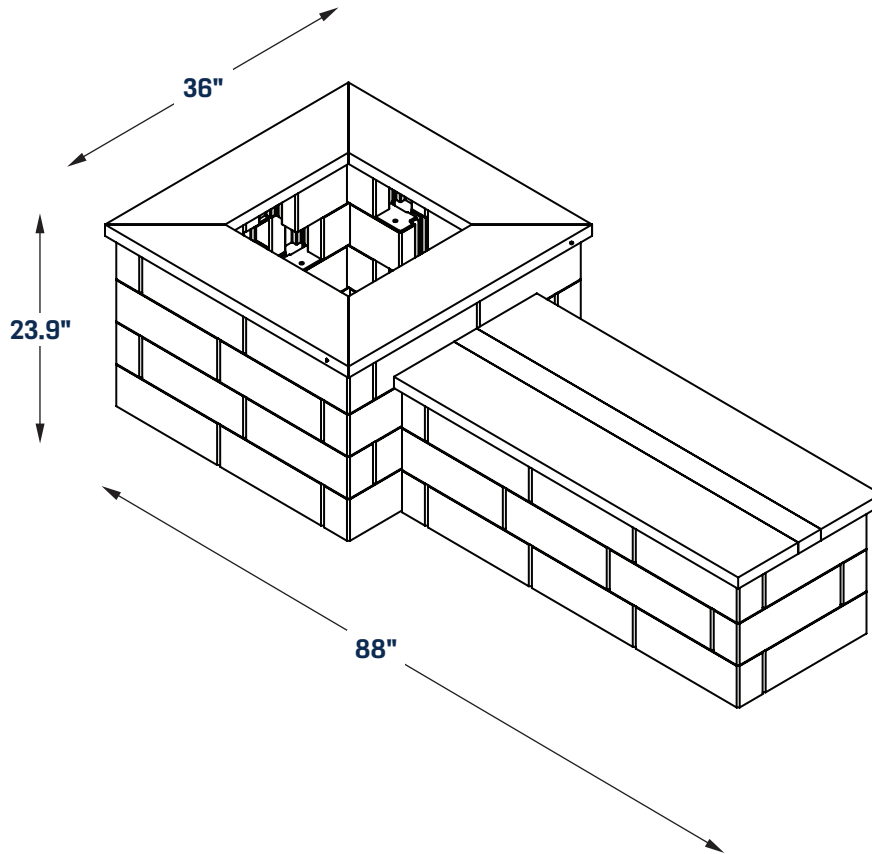


COMPONENTS

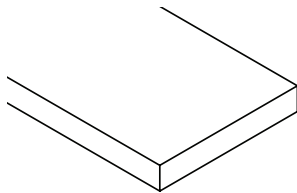

2" x 10" x 8' (x3)

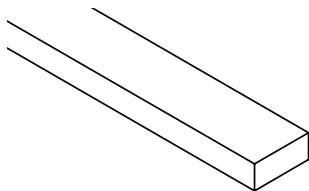

2" x 4" x 8' (x1)

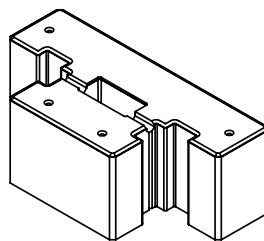

T-Block (x56)



Glue Tube



No.8 x 2½" (x12)




No.8 x 3" (x4)


T-BLOCK

SQUARE PLANTER AND BENCH


REQUIRED TOOLS

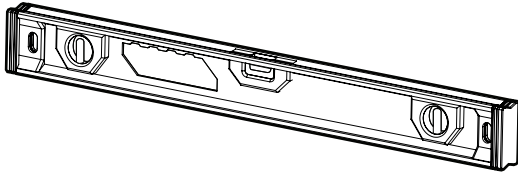


LEVEL

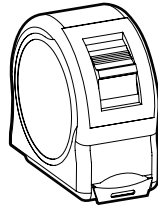


**MEASURING
TAPE**

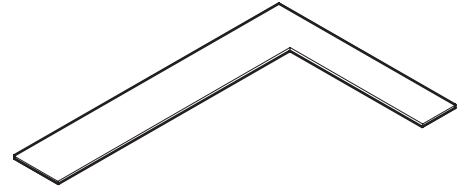

**CARPENTER
SQUARE**

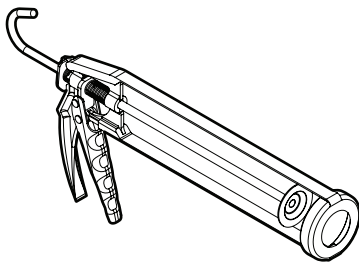

**SILICONE
GUN**

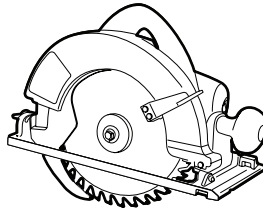


SKILSAW


SAFETY EQUIPMENT



SAFETY BOOTS

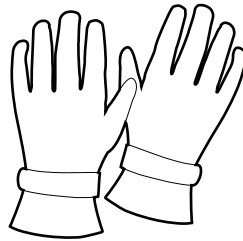


GLOVES

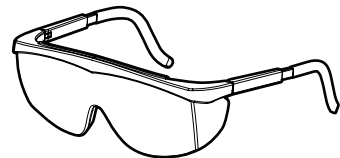



SAFETY GLASSES

T-BLOCK

SQUARE PLANTER AND BENCH

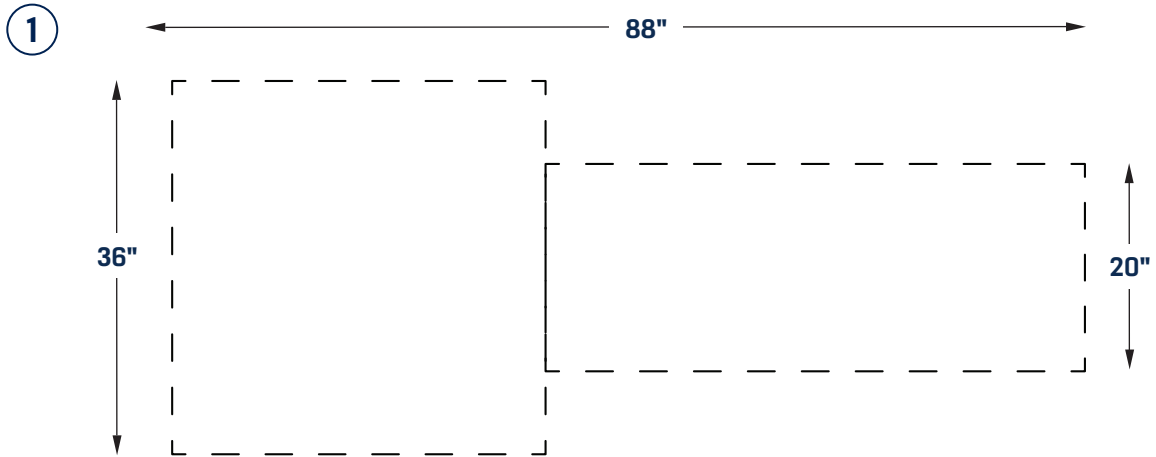



- ② Do not forget to add glue in the cavities before laying down your next level.

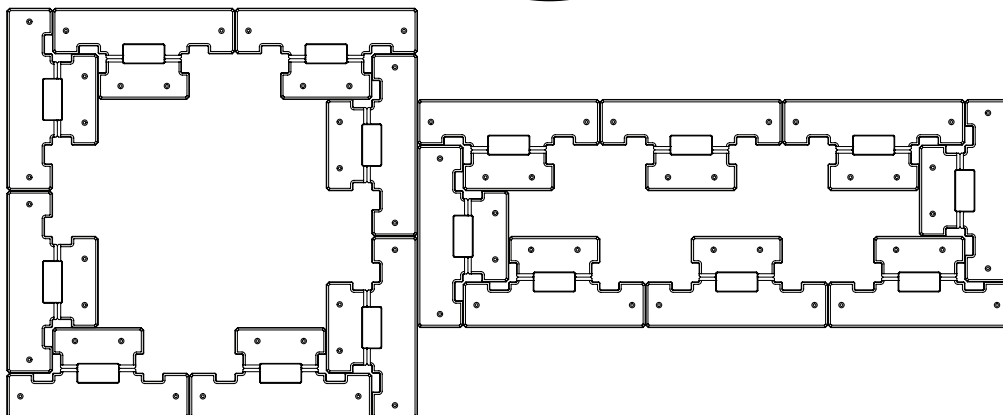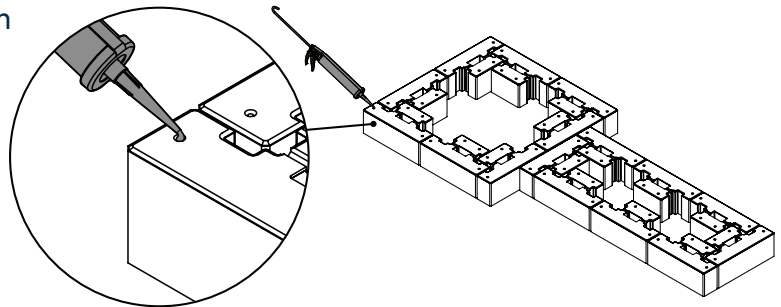



T-BLOCK

SQUARE PLANTER AND BENCH

- 3 Do not forget to add glue in the cavities before laying down your next level.

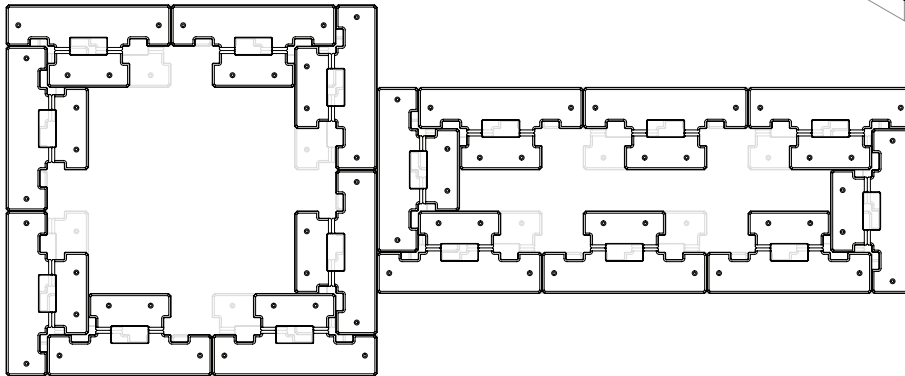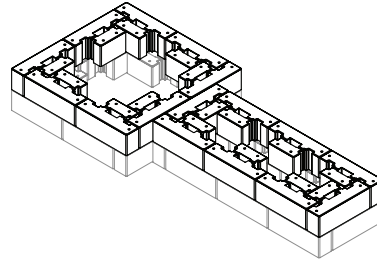



- 4 Do not forget to add glue in the cavities before laying down your next level.

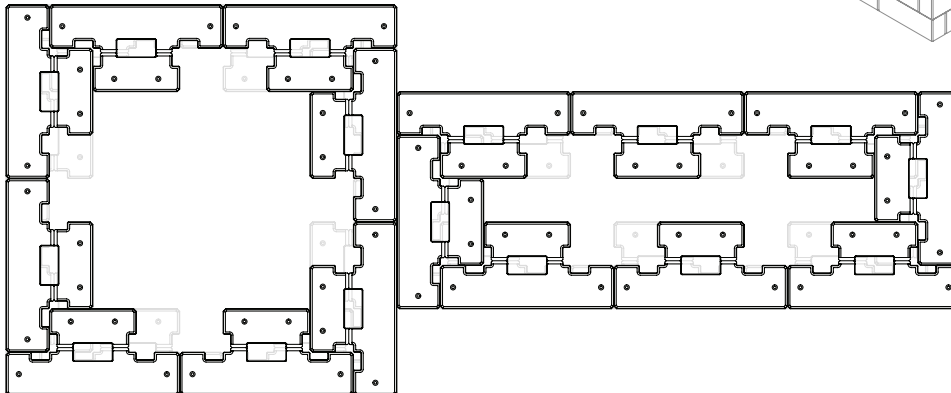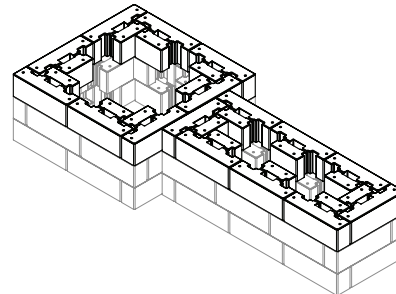

T-BLOCK



SQUARE PLANTER AND BENCH

- 5 Do not forget to add glue in the cavities before laying down your next level.

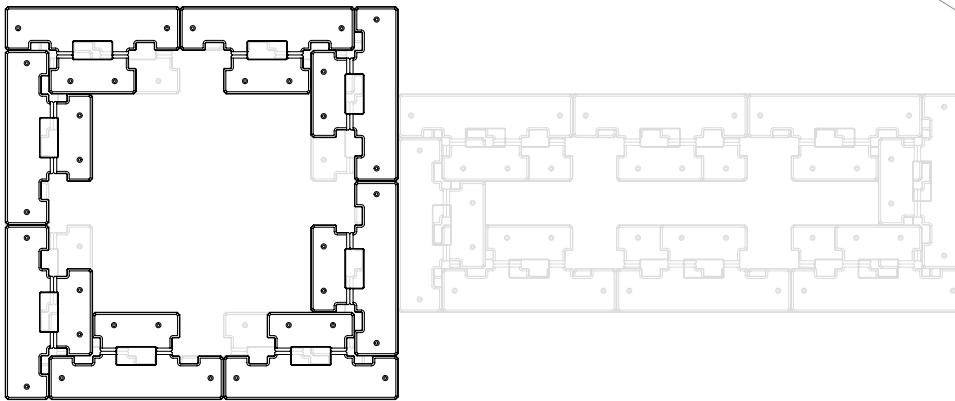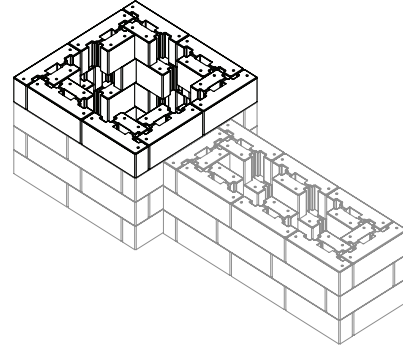

WOOD CUTS



- 2" x 4" x 8' A = 53"
- 2" x 10" x 8' B = 11³/₄"
- C = 53"
- D = 37¹/₄"

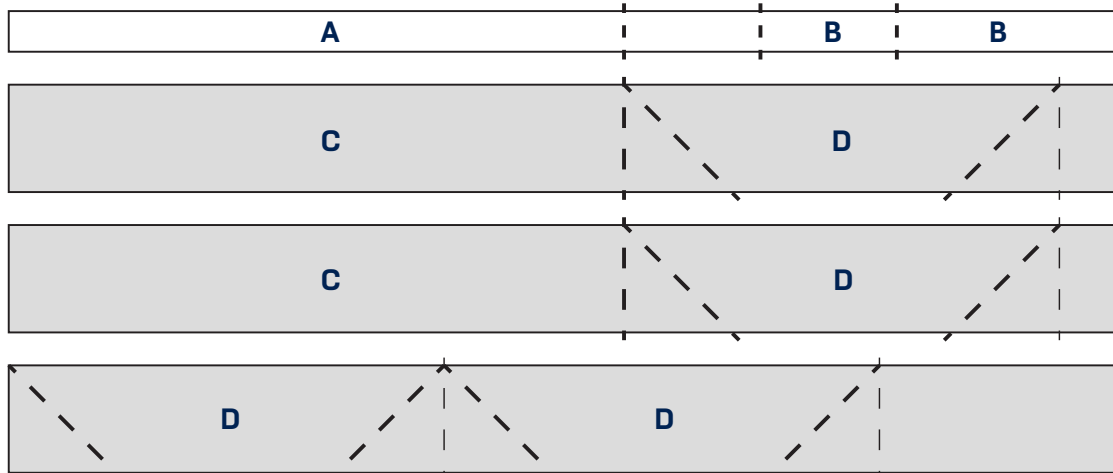



T-BLOCK

SQUARE PLANTER AND BENCH

6

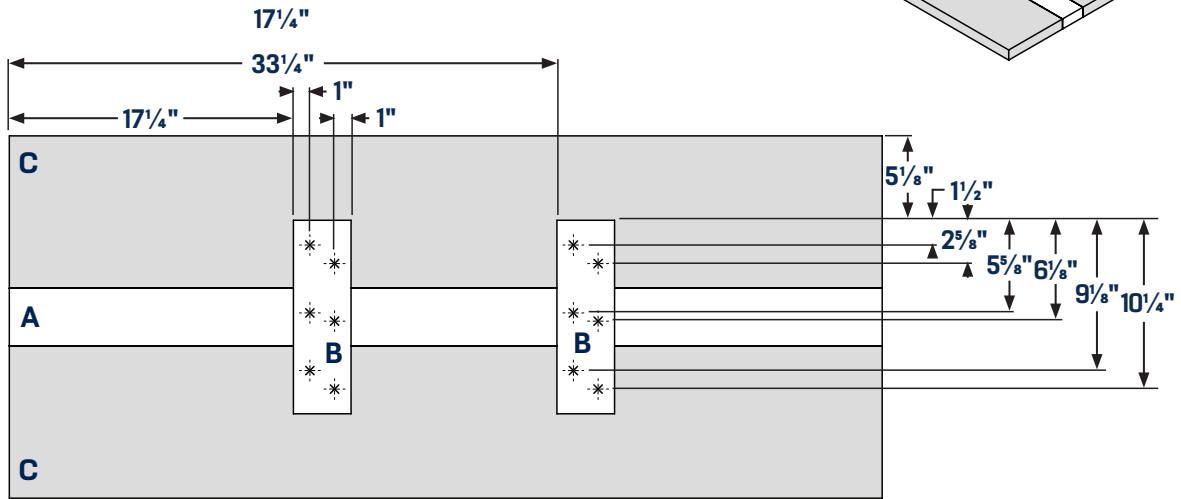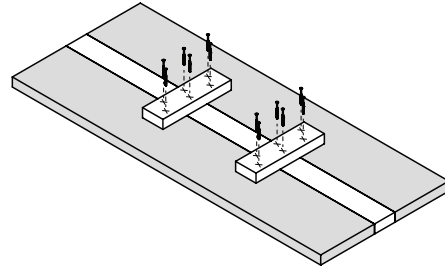

7

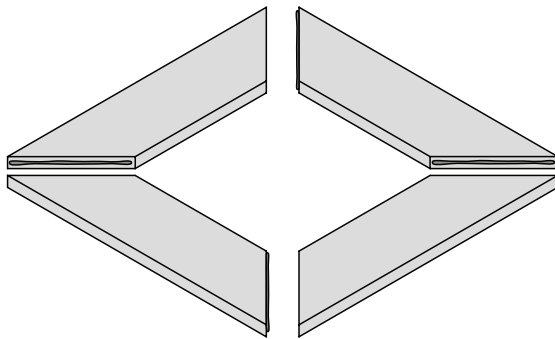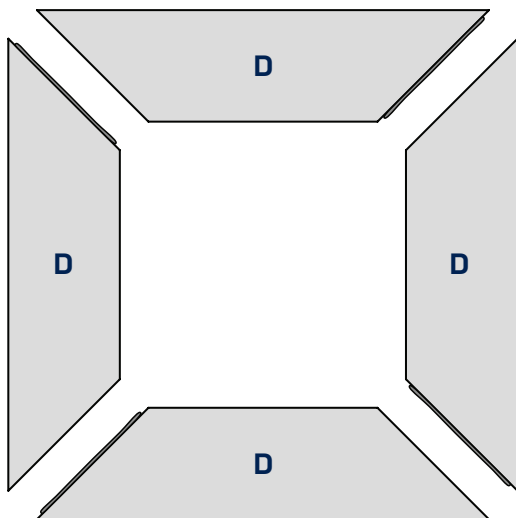


Put the angle pieces together to create the frame shape, keeping all edges aligned while the glue sets.


T-BLOCK

SQUARE PLANTER AND BENCH

8

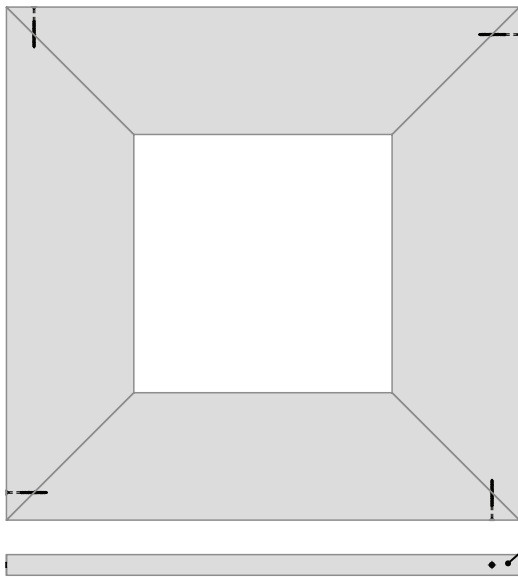

Add the screws (3") in each corner, making sure they go through the middle of the boards for a solid connection.

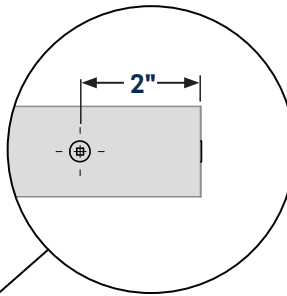

9

Do not forget to add glue in the cavities before laying down the frame and seat.

