



BELGARD®
PAVES THE WAY™

T-BLOCK



**TWO BENCHES WITH
SQUARE PLANTER**


T-BLOCK

COMPLETE THIS STEP
FIRST FOR ALL PROJECTS


BASE PREPARATION

Always level ground before installation


ON NEW OR EXISTING PATIO

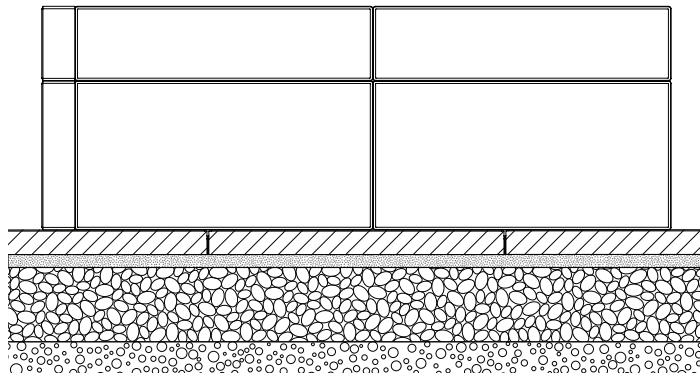

SLAB OR PAVER

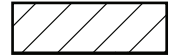


BEDDING SAND 1"

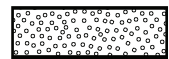


COMPACTED AGGREGATES 6"-8"




SOIL



ON POURED CONCRETE

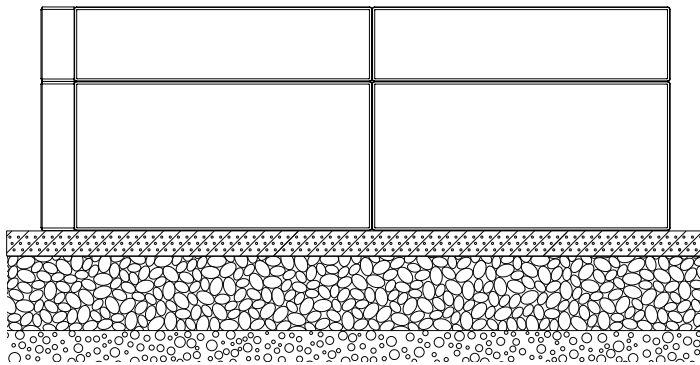

REINFORCED POURED CONCRETE FOUNDATION 2"




COMPACTED AGGREGATES 6"-8"



SOIL



ON COMPACTED FOUNDATION

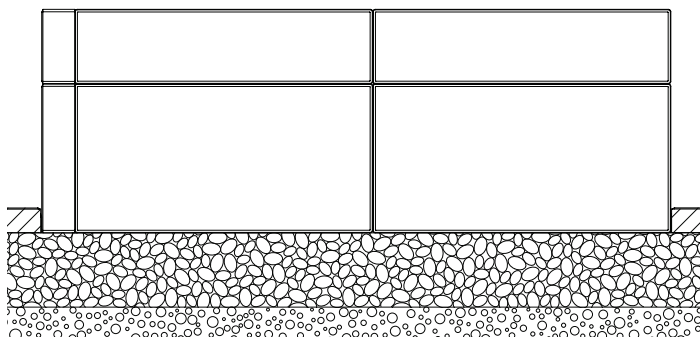

SLAB OR PAVER



COMPACTED AGGREGATES 6"-8"




SOIL




T-BLOCK


TWO BENCHES WITH
SQUARE PLANTER

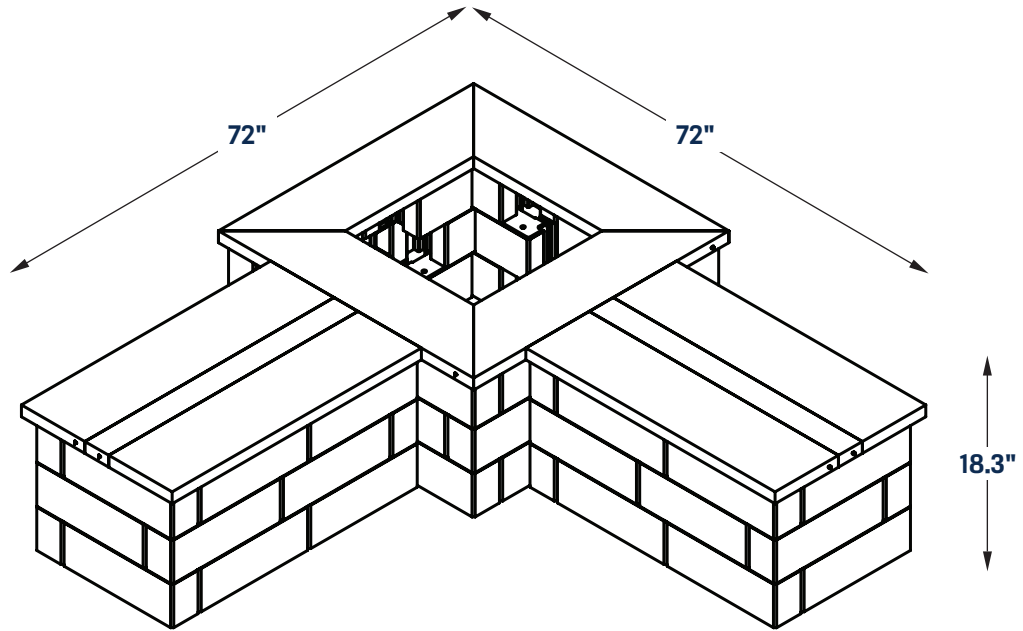

COMPONENTS

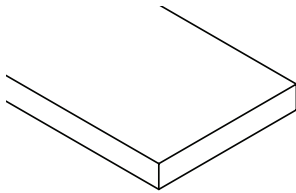


2" x 10" x 8' (x4)

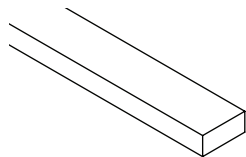

2" x 4" x 8' (x1)



Glue Tube

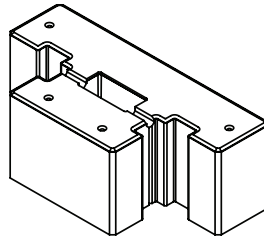

T-Block (x60)



No.8 x 2 1/2" (x12)




No.8 x 3" (x8)


T-BLOCK

TWO BENCHES WITH SQUARE PLANTER


REQUIRED TOOLS

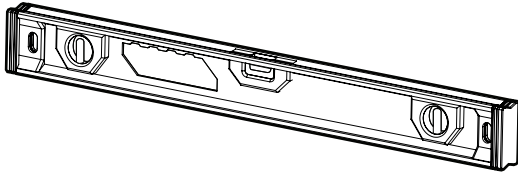


LEVEL

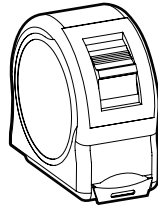


**MEASURING
TAPE**

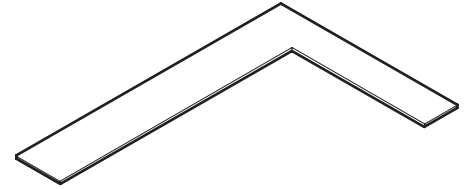

**CARPENTER
SQUARE**

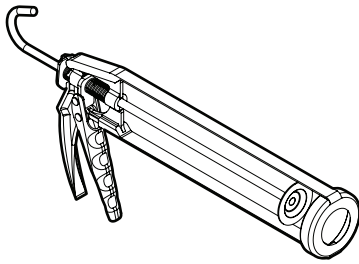

**SILICONE
GUN**

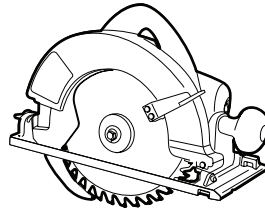


SKILSAW


SAFETY EQUIPMENT



SAFETY BOOTS

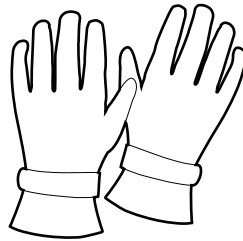

GLOVES

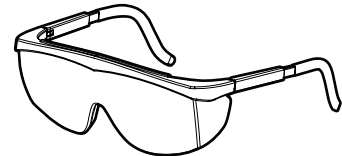


SAFETY GLASSES



T-BLOCK

TWO BENCHES WITH SQUARE PLANTER

1

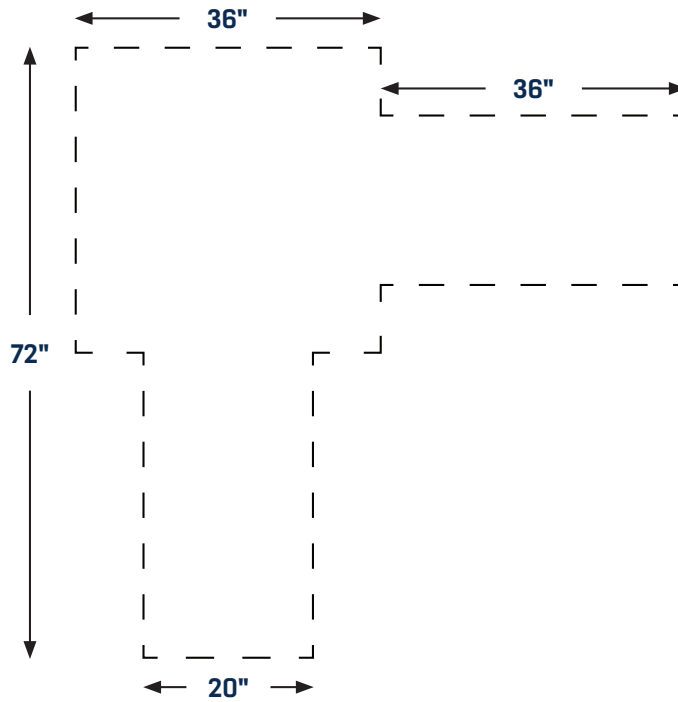

2

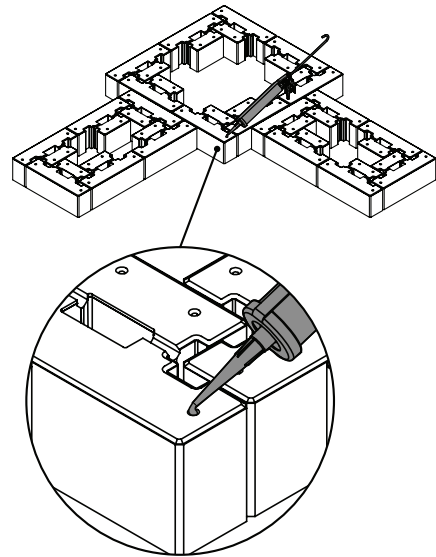
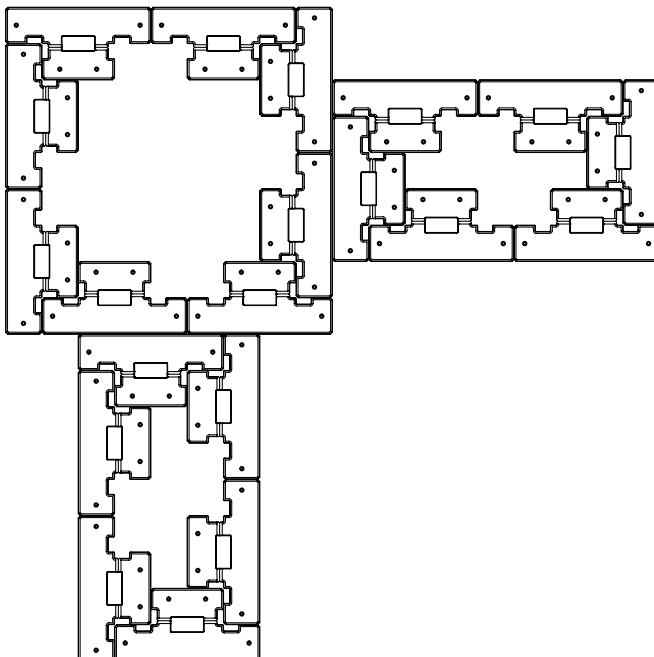


Do not forget to add glue in the cavities before laying down your next level.

T-BLOCK



TWO BENCHES WITH SQUARE PLANTER

3

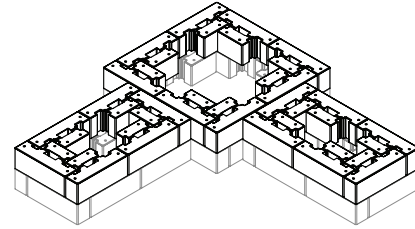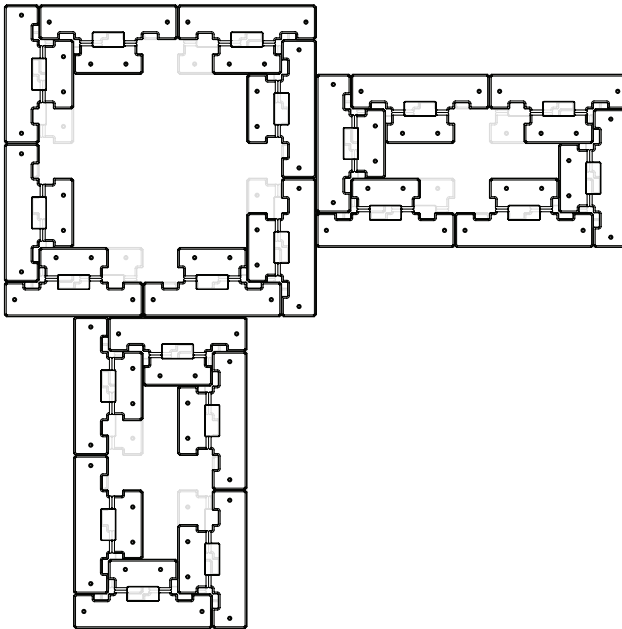

Do not forget to add glue in the cavities before laying down your next level.

4

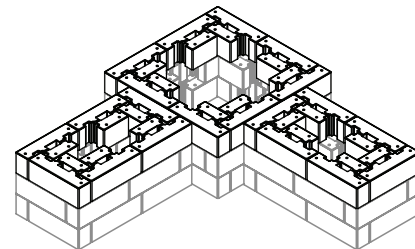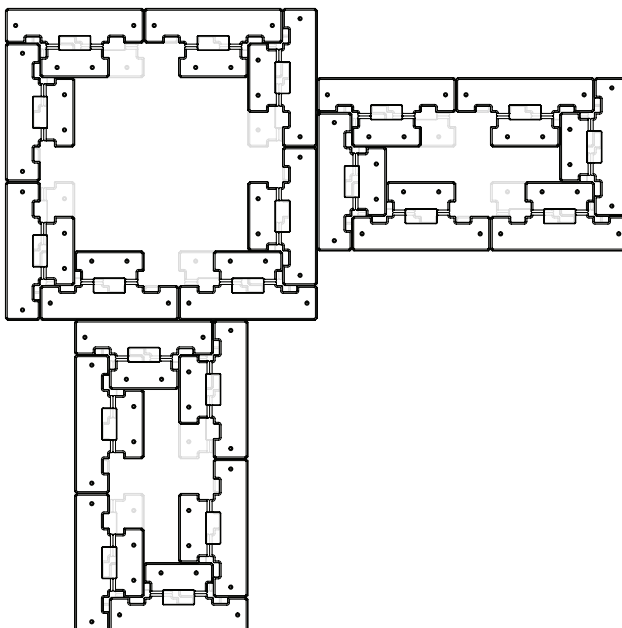



Do not forget to add glue in the cavities before laying down your next level.

T-BLOCK

TWO BENCHES WITH SQUARE PLANTER



WOOD CUTS

- 2" x 4" x 8' A = 35⁷/₈" C = 35⁷/₈"
- 2" x 10" x 8' B = 11³/₄" D = 37¹/₄"

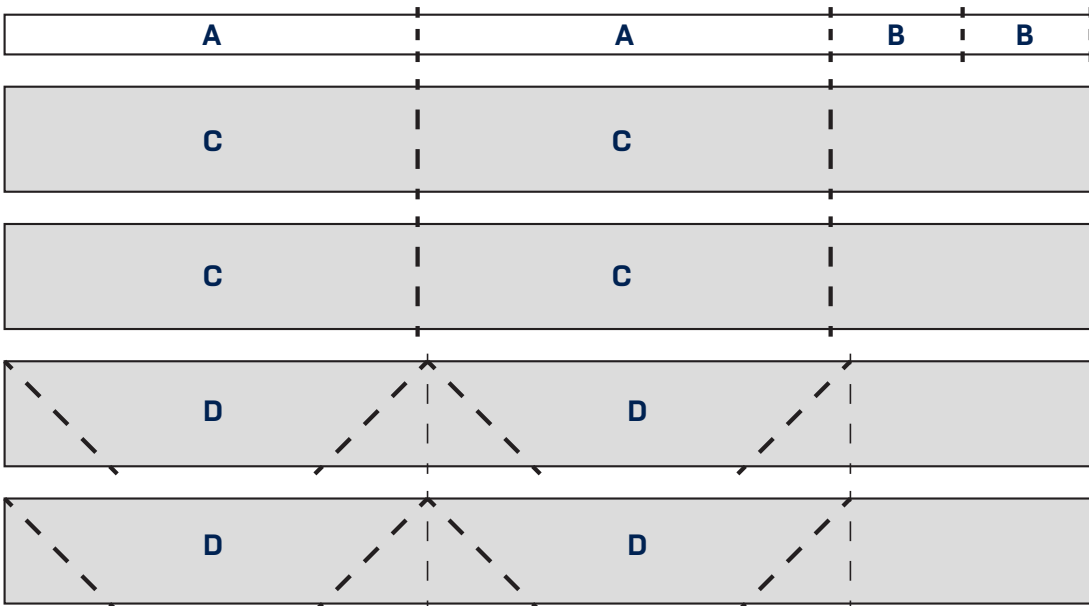

5


Use screws (2¹/₄") 2X

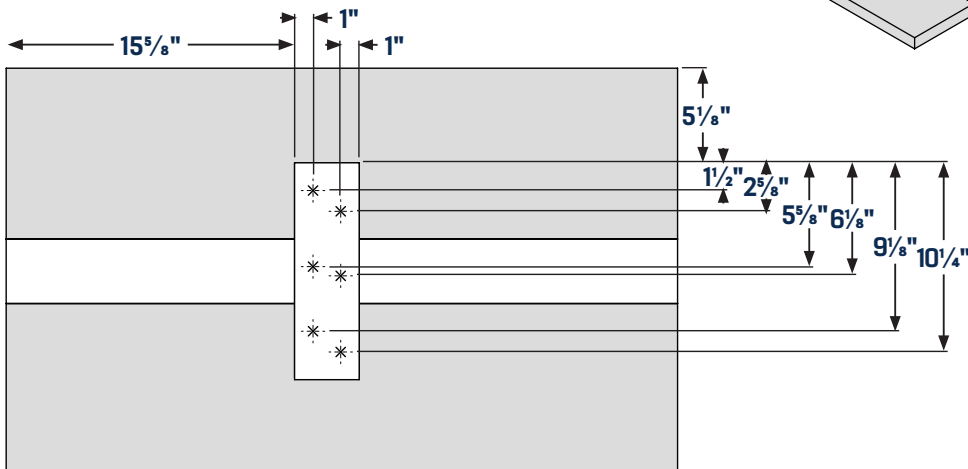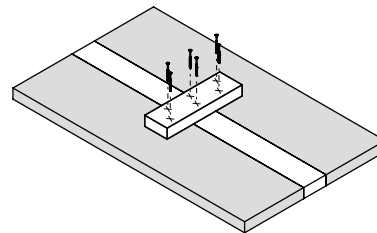

T-BLOCK



TWO BENCHES WITH SQUARE PLANTER

6

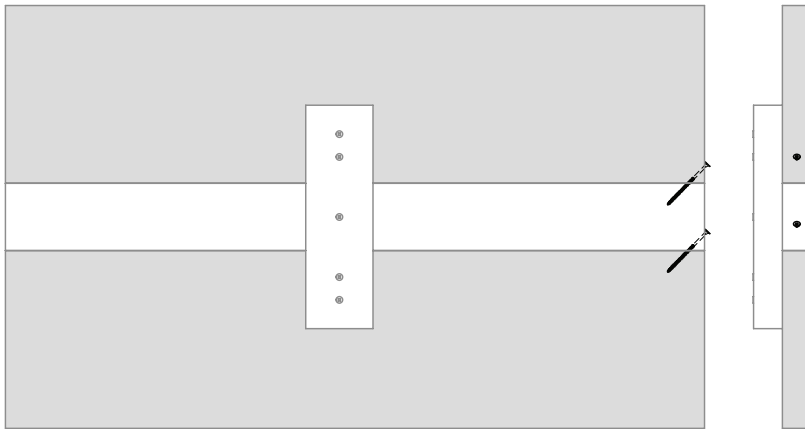

Attach the planks using screws (3") at a 45° angle. Make sure each screw is placed in the middle of the lumber so it connects both boards securely. 2X

7

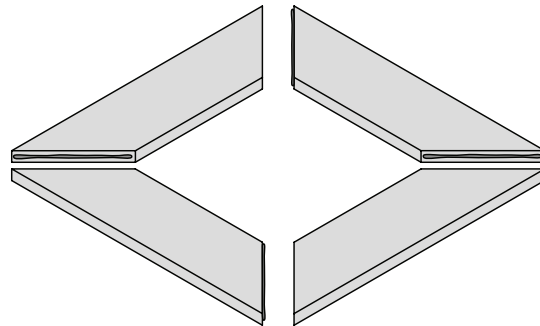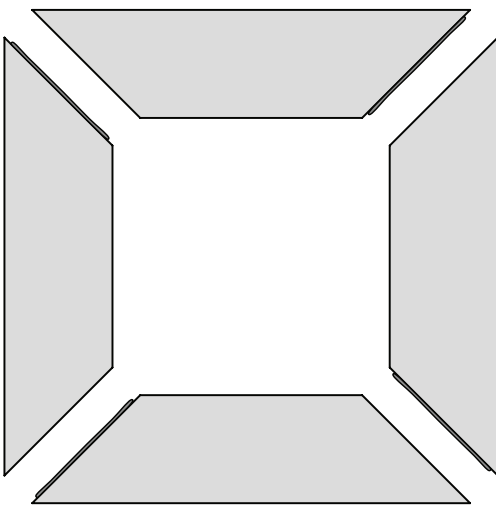


Put the angle pieces together to create the frame shape, keeping all edges aligned while the glue sets.


T-BLOCK

TWO BENCHES WITH SQUARE PLANTER





8

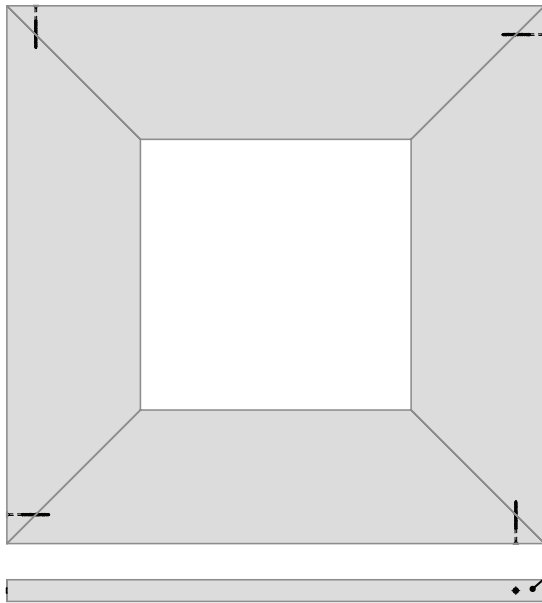

Add the screws (3") in each corner, making sure they go through the middle of the boards for a solid connection.

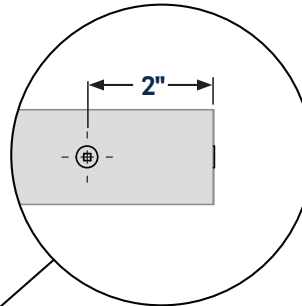

9

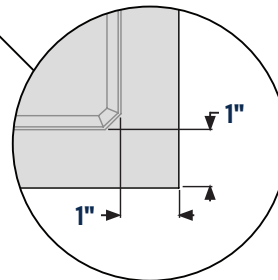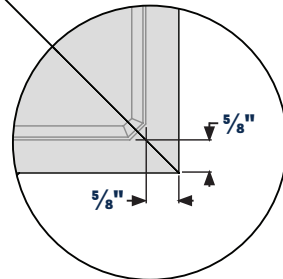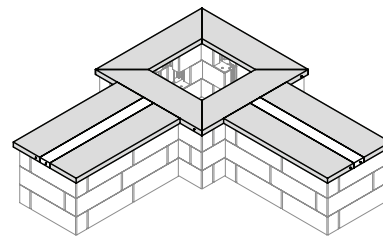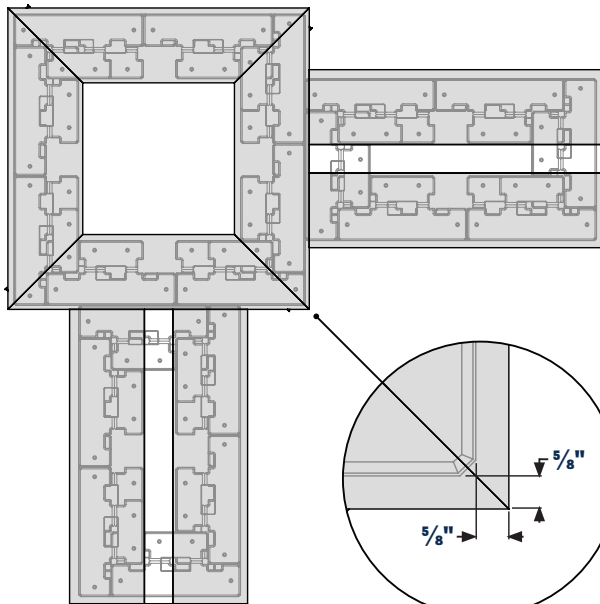

Do not forget to add glue in the cavities before laying down the frame and seat.