



BELGARD®
PAVES THE WAY™

T-BLOCK



**WOOD SQUARE
PLANTER**


T-BLOCK

COMPLETE THIS STEP
FIRST FOR ALL PROJECTS


BASE PREPARATION

Always level ground before installation


ON NEW OR EXISTING PATIO

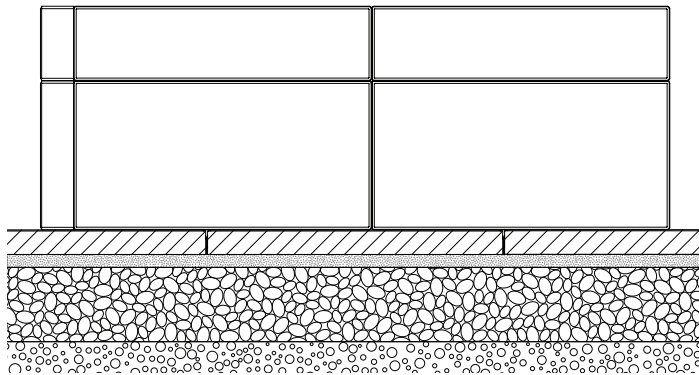

SLAB OR PAVER




BEDDING SAND 1"




COMPACTED AGGREGATES 6"-8"




SOIL



ON POURED CONCRETE

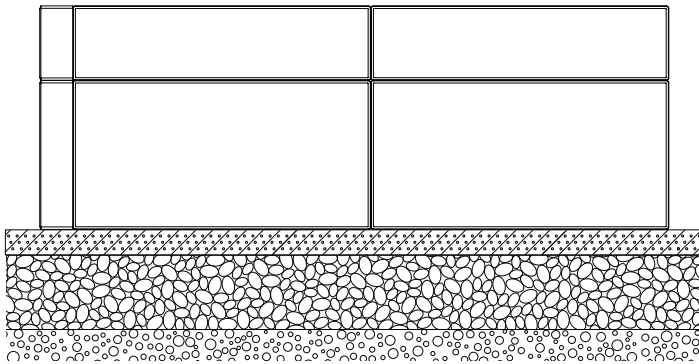

REINFORCED POURED CONCRETE
FOUNDATION 2"




COMPACTED AGGREGATES 6"-8"



SOIL



ON COMPACTED FOUNDATION

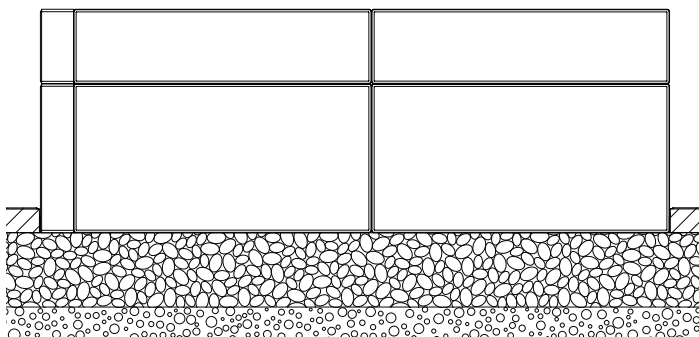


SLAB OR PAVER



COMPACTED AGGREGATES 6"-8"




SOIL




T-BLOCK


WOOD SQUARE PLANTER

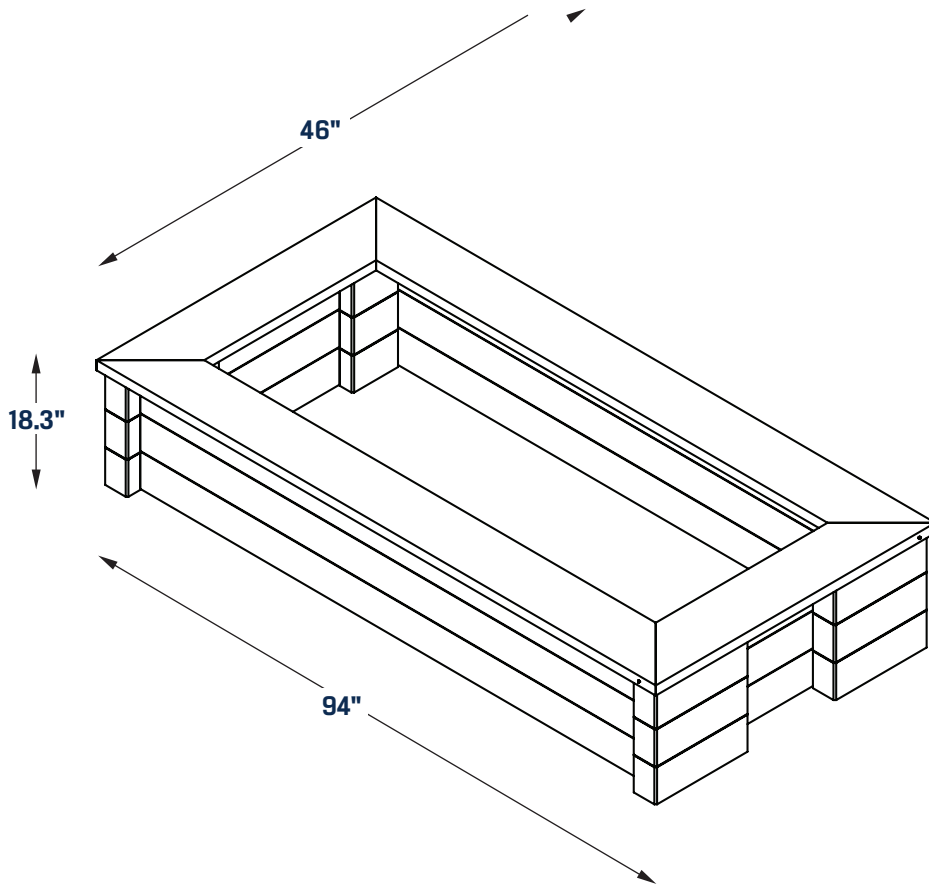


COMPONENTS

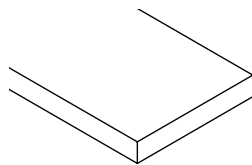

2" x 10" x 8' (x3)

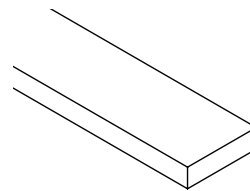

2" x 6" x 8' (x8)

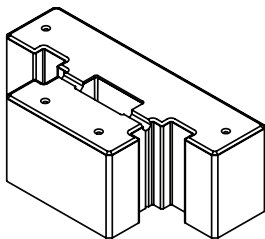

T-Block (x12)



No.8 x 3" (x4)




Glue Tube


T-BLOCK

WOOD SQUARE PLANTER


REQUIRED TOOLS

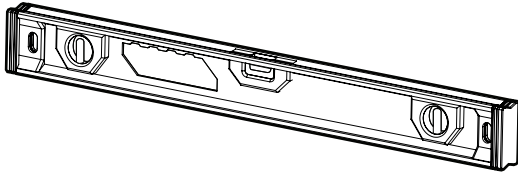


LEVEL

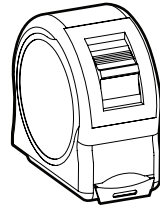


**MEASURING
TAPE**

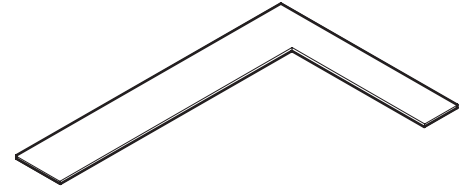

**CARPENTER
SQUARE**

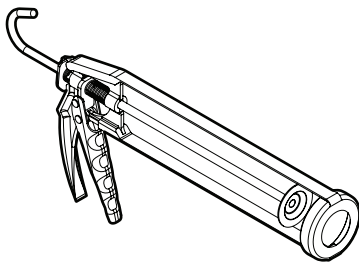

**SILICONE
GUN**

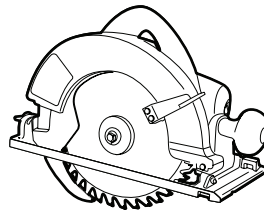


SKILSAW


SAFETY EQUIPMENT



SAFETY BOOTS

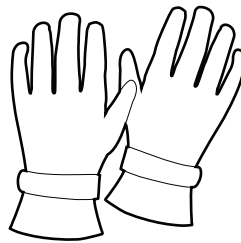

GLOVES

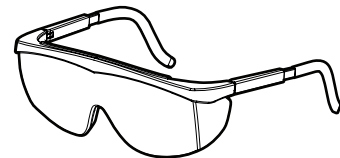

SAFETY GLASSES

T-BLOCK

WOOD SQUARE PLANTER

WOOD CUTS



□ 2" x 6" x 8'

A = $23\frac{3}{8}$ "


■ 2" x 10" x 8'

B = $39\frac{3}{8}$ "

C = $47\frac{1}{2}$ "

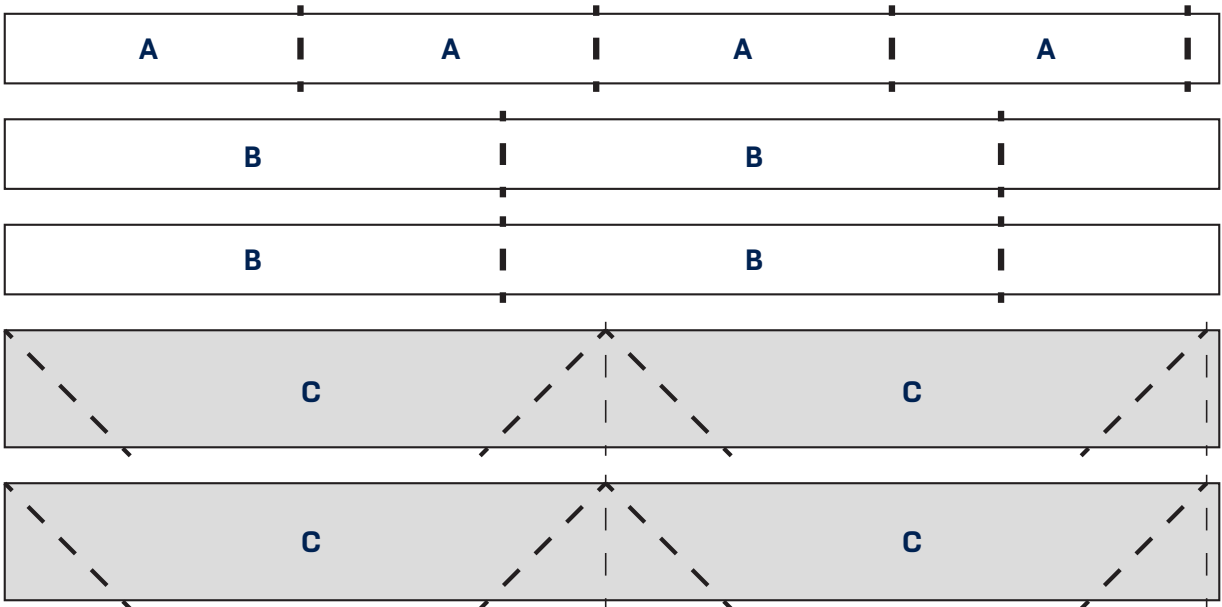


①

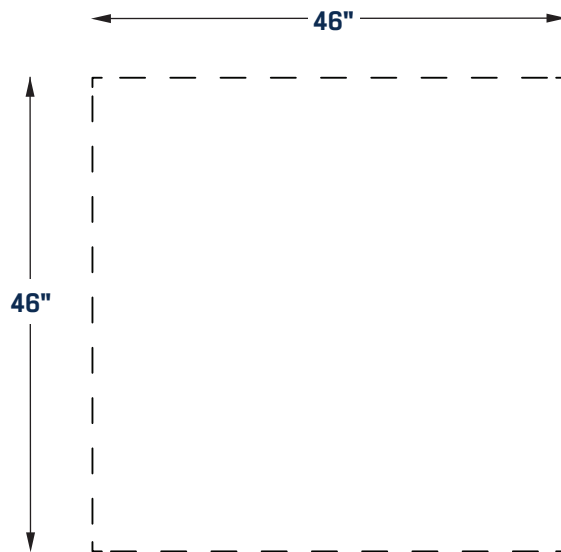

T-BLOCK


WOOD SQUARE PLANTER

2

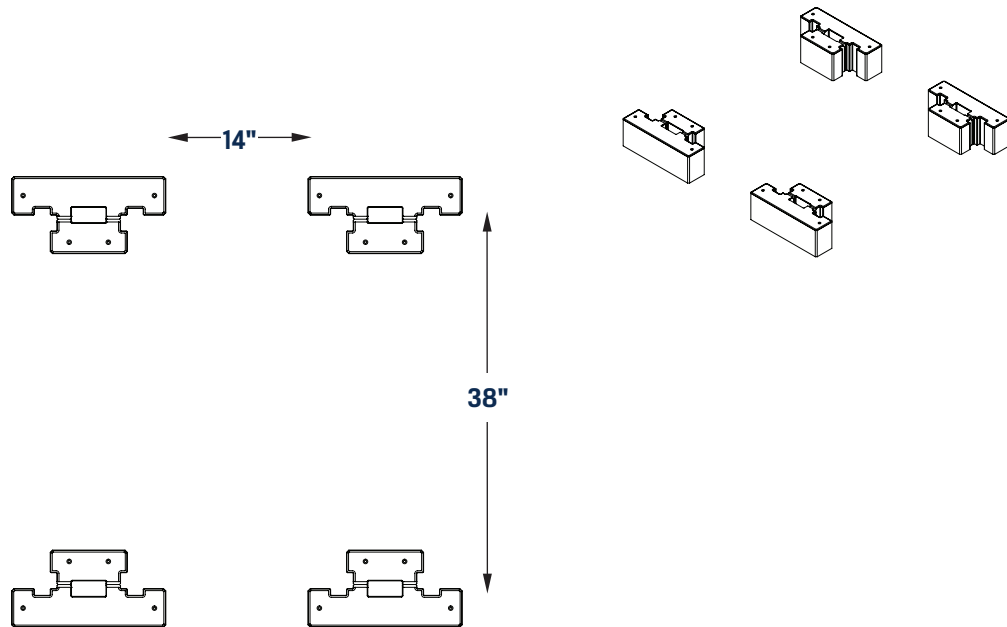

3


Make sure all frame pieces are level. Apply glue in the cavities of the block before laying the next level.

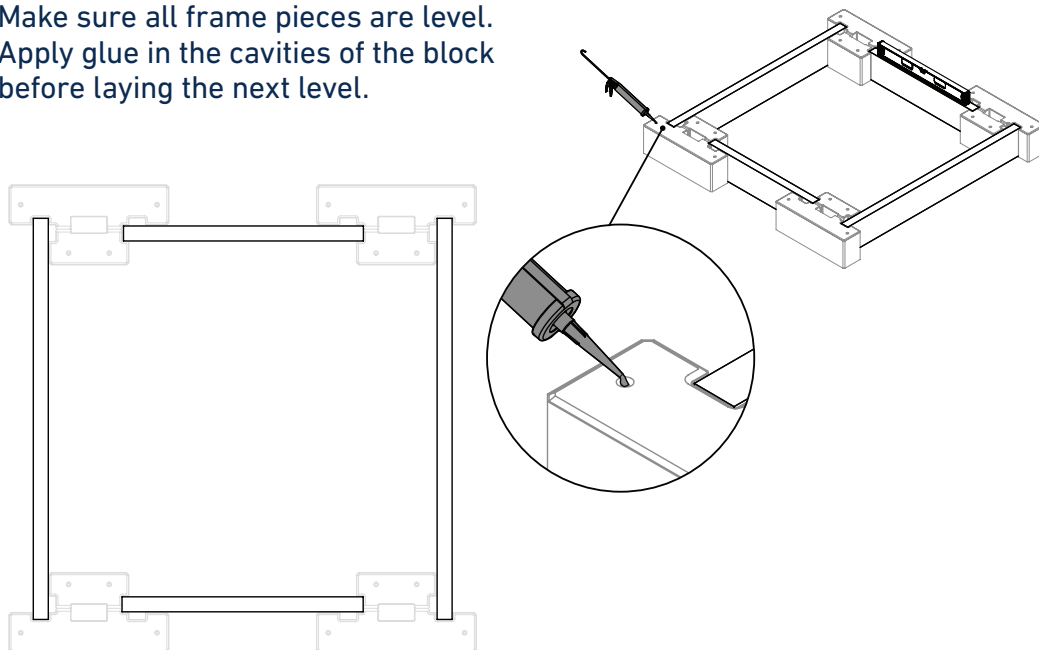



T-BLOCK

WOOD SQUARE PLANTER

- 4 Lay down next level, ensuring they sit flush into place.

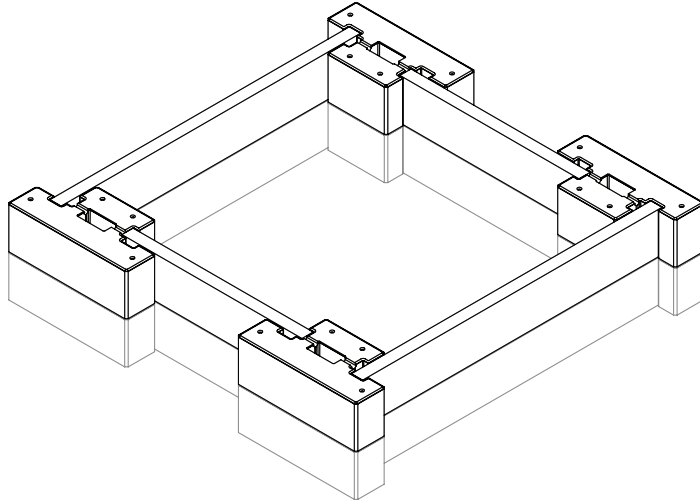

5

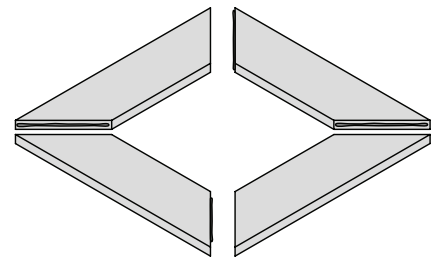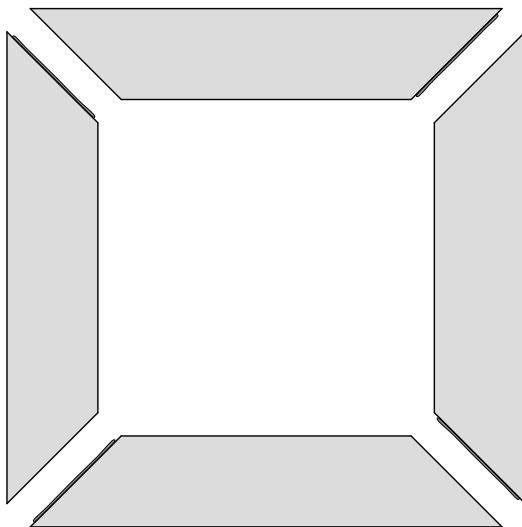


Put the angle pieces together to create the frame shape, keeping all edges aligned while the glue sets.

T-BLOCK

WOOD SQUARE PLANTER

- 6 Add the screws in each corner, making sure they go through the middle of the boards for a solid connection.

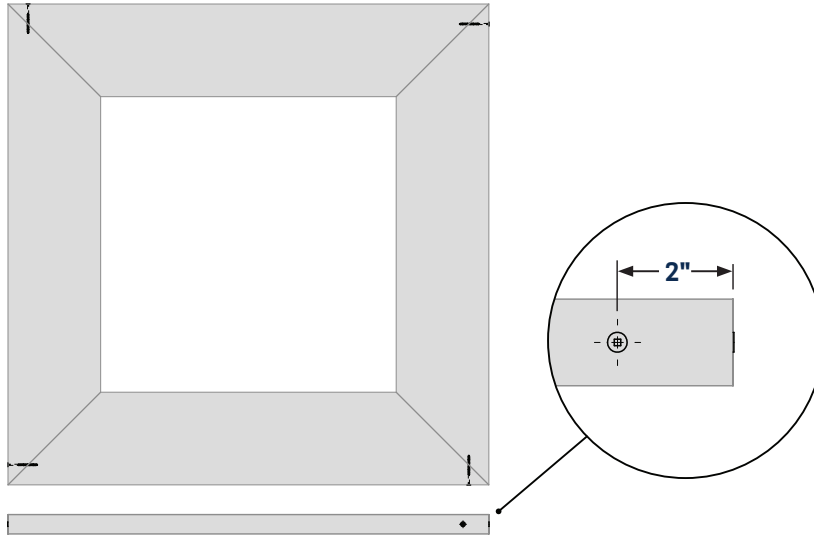

- 7 Apply glue along the top edges of the panels and in the block cavities before setting the frame in place.

